

Checking the Heat Relay

To verify the relay is the problem you can observe the test button (small black square button on the side of the relay), as the unit heats the test button will actuate into the relay (on), when temperature is reached the test button will extend out (off). You may find the relay sticks only when warm so you may have to observe this for an extended time period.