

EO2 Code

EO2 is a Compass no heat code.

Almost always it's the heating element out on the roll with the sensor pointing at it.

Might be the bottom heater.

You can check which roll the sensor is pointing at.

If that roll doesn't heat up in 10-15 minutes the machine will throw the EO2 code.

Once in a while it's the sensor.

Unplug the machine for a few minutes, turn it back on and see if both rolls are getting warm.

OR, check the continuity of the heaters.

Most of the time it's a bad heater or the heater wires melted off.

Replacement Compass Heater PRH 120 (Shown in the parts listings)