


WIRING DIAGRAM - EP44/60 V2 LAMINATOR (110 VOLT ONLY)
 PRM218D MOTOR CONTROL (MINARIK MM23002D) (NRTL VERSION)

NOTE:

SLIDE SWITCHES ON MOTOR CONTROL,
 MUST BE SET @ 110 VAC (2 SWITCHES)
 AND 90 VDC (1 SWITCH) RESPECTIVELY.

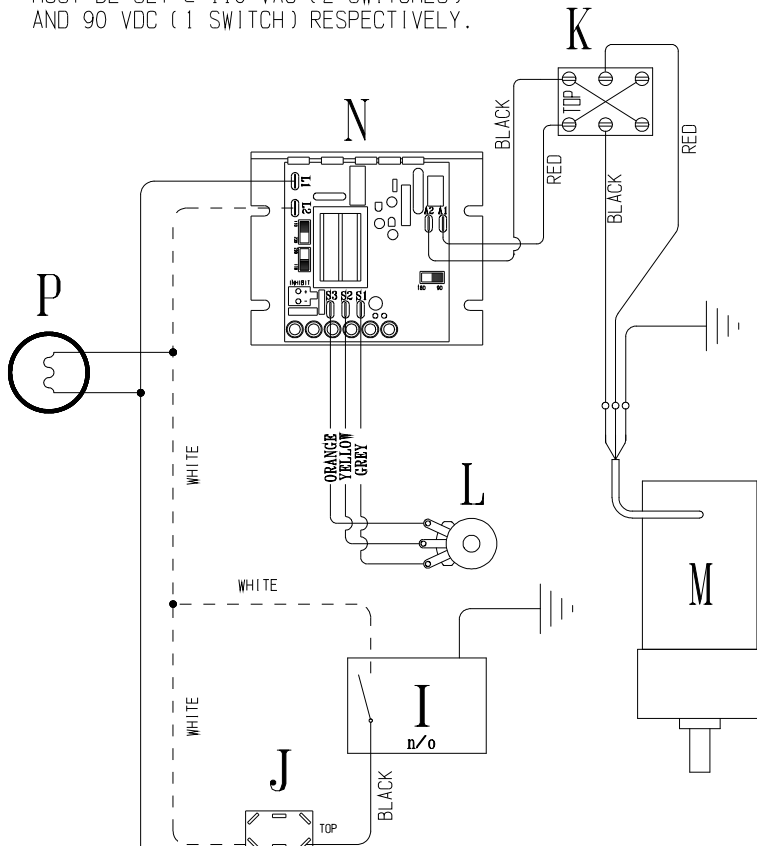

- A. START SWITCH (PRS016G) (N/O)
- B. STOP SWITCH (PRS016) (N/C)
- C. SAFETY RELAY (PRR150)
- D. POWER RELAY (PRR150)
- E. "E" STOP SWITCH (PRS374)
- F. SAFETY SHIELD SWITCH (PRS313)
- G. FEED TABLE SWITCH (PRS351)
- H. 3 AMP FUSE (PRF127)
- I. FOOT SWITCH (PRS280)
- J. SELECTOR SWITCH (PRS048)
- K. FORWARD REVERSE SWITCH (PRS277)
- L. SPEED POTENTIOMETER
- M. MOTOR (PRM1000)
- N. MOTOR CONTROL (PRM218D)
- O. MAIN POWER SWITCH (PRS290)
- P. DRIVE INDICATOR LIGHT (PRL198)
- Q. POWER INDICATOR LIGHT (PRL201)

