



This is the rear roller cover safety lever switch located on the control panel side of the machine just in front of the rear rollers. It is triggered by the rear roller cover. If you remove the Plexiglass cover or leave it open the machine will not run.