


The heater wires are the 2 larger wires on this side of the rotary connector.

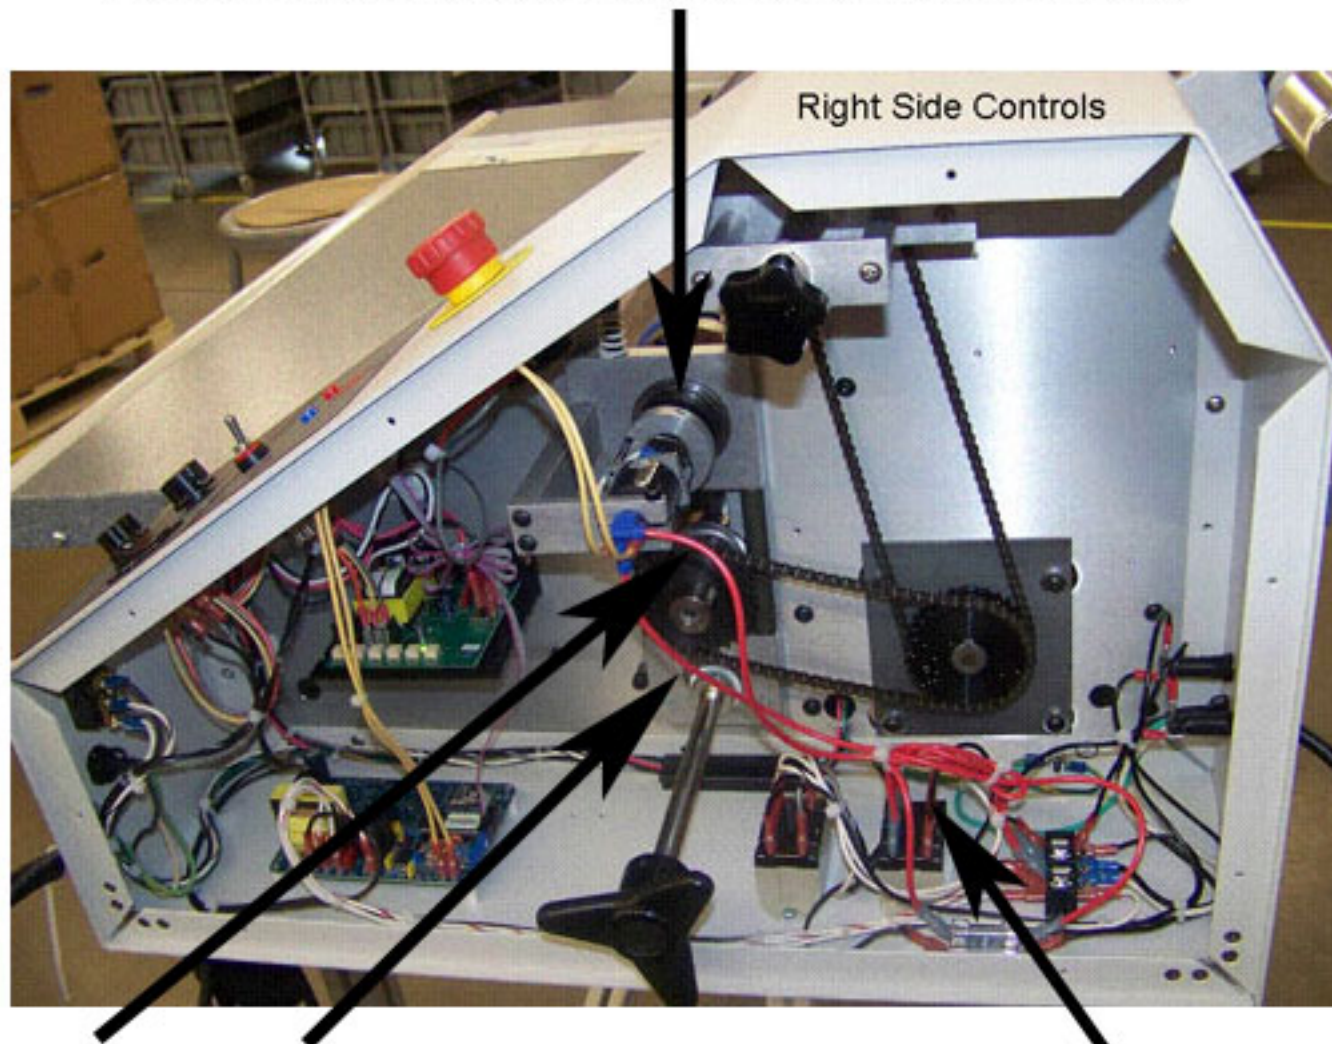

If the heat relay clicks there should be 110 volts to these two red wires. If there is, either the rotary connector is bad or the heater is bad. Check the inner 2 heater wires for continuity. If OK, then replace the slip ring. If no continuity, the heater cartridge is bad.

Heat relay  
Turning the heat on and off should make this relay click. The wires on the side of the relay with 2 black wires should have 24 volts AC when the heat control is on. If there is no power the heat control is bad (rare).