

**TCC-2700XM PART MANUAL**

NO.	PART NO.	DESCRIPTION	NO.	PART NO.	DESCRIPTION
001	RLM-1BR	BRACKET	040	RLM-37N	SLITTER
002	RLM-2A	TOP/BOTTOM ROLLER	040-1	RLM-38N	SLITTER
004	RLM-3N(SLVR)	FEED TRAY	040-2	RLM-37A	PROTECTIVE_SHEET
005	RLM-4	FIXING PLATE	041	RS-8	SPACER
006	RLM-5-1:75	DC MOTOR (1:75)	042	CB-3	GUIDE SCREW & NUT
007	RLM-6	PRESS PLATE	044	RLM-42	SPRING
008	RLM-7	POWER BRACKET (R)	045	RLM-43-1	SPRING
008-1	RLM-7-1	POWER BRACKET (L)	046	RLM-44	CORE GRIPPER
009	RLM-8L	HEATER BRACKET (R)	047	3H1-D33	TEMPERATURE SENSOR WITH WIRE
009-1	RLM-8L-1	HEATER BRACKET (L)	047-1	D266-TCC1200	TEMPERATURE SENSOR WITH WIRE
010	RLM-9(SLVR)	MIDDLE GUIDE PLATE	048	SB-4	FOOT PAD
011	RLM-10	FEEDING PLATE (L)	049	RLM-45	CHAIN
012	3H1-D30	THERMO SET	050	RLM-46	QUARTZ TUBE CAP
013	RLM-12	FEEDING PLATE (UPPER)	052	RLM-48(BLK)	POWER SWITCH
013-1	RLM-12	FEEDING PLATE (LOWER)	053	EP-31-110	POWER CORD
014	RLM-13	PAD	054	RLM-50	FUSE SET
015	RLM-14N	TOP ROD	055	EP-10-15A	FUSE
015-1	RLM-14N-1	BOTTOM ROD	056	RLM-53-SR	WIRE JACKET
016-2	RLM-15A	EXPAND SHAFT Ø5	057	RLM-54	PAD
016-3	RLM-15B	EXPAND SHAFT (MOVABLE)	058	RLM-55	PAD
017	RLM-16	FIXED SHAFT	059	20C-M	HEAT SINK (ALUMINUM)
018	RLM-17	ADJUSTMENT SHAFT	062	RLM-59A	SHIELD
019	RLM-P18N(SLVR)	REAR COVER	063	RLM-60	FIXED POLE
020	RLM-19-1(SLVR)	INNER COVER	064	D266-Q	CUT-OFF FUSE
021	RLM-20-1	FRONT ROLLER SPROCKET (32T)	064-1	D266-Q-1	WIRE (CUT-OFF FUSE TO PCB)
022	RLM-20-2	REAR ROLLER SPROCKET(31T)	065	RLM-62-110	TRANSFORMER
023	RLM-20-3	MOTOR SPROCKET (31T)	067	RLM-27-3	CONNECT WIRE
025	RLM-21	FIXING PLATE	069	D266-A-1	LED LAMP
026	RLM-22N (NVY)	SIDE COVER (R)	070	D252	LED LAMP SET
026-1	RLM-22-1N (NVY)	SIDE COVER (L)	071	WM-05R-02D0-Z	LIMIT SWITCH WITH WIRE
027	RLM-23	TENSION ADJUSTMENT KNOB	071-1	RLM-61	RACK
027-1	D509040070400 E	SCREW	072	D266-D-1	LIMIT SWITCH WITH WIRE
027-2	HP-10	CAP	073	P6KE30A	VARISITOR
027-3	RLM-W1	WASHER	074	D2A7	RING CORE
028	RLM-P25	CU BUSH	075	R13-220BA	MOTOR CONTROL SWITCH
029	RLM-25	CU BUSH	076	RC15KKFT00B	SWITCH (AUTO SHUT-OFF)
030	RLM-26	PANNEL RACK	076-1	RC15KKFT00B	SWITCH (BOTTOM ROLLER HEATER)
031	RLM-27A (BLK)	CONTROL PANEL	080	RLM-P63	FAN
032	RLM-27-1B-D7D	PCB (CPU#D7D)	080-1	RLM-P63-1	FAN'S NET
032-1	RLM-27-1B-D7D-1	LED PCB	081	3RLM-P8	SWITCH (FAN)
033	RLM-28TA(BLK)	BUTTON NAMEPLATE	082	NH-D37A	FIXING PLATE (R)
034	RLM-29	THANSMIT PARTS	083	NH-D38A	FIXING PLATE (L)
035	FD-39	BUSH	084	RLM-P64	FIXING PLATE
036	RLM-31	QUARTZ TUBE	085	RLM-47-1	BLADE
	UL-65-075	HEATER	086	D266-B-1	WIRE (MOTOR TO PCB)
	3H1-P8-3B-NYLOK	FIXED SCREW	087	D266-C-1	WIRE (AUTO SHUT-OFF TO PCB)
	RLM-46	QUARTZ TUBE CAP	088	D266-L	WIRE (POWER SWITCH TO PCB)
036-1	3H1-P11	BAKELITE SHEET	089	D266-M	WIRE (POWER SWITCH TO FUSE SET)
036-2	D266O-1	WIRE (HEATER TO PCB)	090	D266-K	WIRE (POWER SWITCH TO WIRE P AND POWER CORD WHITE)
036-3	D266M-1	WIRE (SWITCH & LOWER HEATER)	091	D266-P	WIRE (WIRE K AND POWER CORD WHITE TO PCB)
036-4	D266L-1	WIRE (SWITCH TO PCB)	092	D266-H-1	WIRE (MOTOR SWITCH TO MOTOR WHITE)
037	RLM-32(SLVR)	HANDLE	093	D266-I-1	WIRE (MOTOR SWITCH TO MOTOR BLACK/WIRE D-1)
038	RLM-33(SLVR)	SIDE GUIDE (L)	094	D266-K-1	WIRE (MOTOR WHITE TO LIMIT SWITCH)
038-1	RLM-33-A(SLVR)	SIDE GUIDE (R)	095	TB-10	PAD
039	3H1-P9	CERAMIC PAD			

A



