

TCC-2700I LAMINATOR PART MENU

DRAWING NO.	PART NO.	DESCRIPTION	DRAWING NO.	PART NO.	DESCRIPTION
001	RLM-1BR	BRACKET (L)	036-1	3H1-P11	BAKELITE SHEET
002	RLM-2A	TOP/ BOTTOM ROLLER	036-2	D266-O-1	WIRE (HEATER TO PCB)
004	RLM-3N	FEED TRAY	036-3	D266-N	WIRE (UPPER & LOWER HEATER)
005	RLM-4	FIXING PLATE FOR HEATER	037	RLM-32	HANDLE & CAP
006	RLM-5-1:75	DC MOTOR (DC 24 N1:75)	038	RLM-33	SIDE GUIDE (L)
007	RLM-6	PRESS PLATE	038-1	RLM-33-A	SIDE GUIDE (R)
008	RLM-7	POWER BRACKET (R)	039	3H1-P9	ISOLATION PAD
008-1	RLM-7-1	POWER BRACKET (L)	040	RLM-37N	SLITTER
009	RLM-8L	HEATER BRACKET (R)	040-1	RLM-38N	SLITTER
009-1	RLM-8L-1	HEATER BRACKET (L)	040-2	RLM-37A	PROTECTIVE FILM
010	RLM-9	MIDDLE GUIDE PLATE	041	RS-8	SPACER SUPPORT
011	RLM-10	FEEDING PLATE	042	CB-3	GUIDE SCREW
012	3H1-D30	THERMO SET	044	RLM-42	SPRING
013	RLM-12	FEEDING PLATE	045	RLM-43-1	SPRING
014	RLM-13	PAD	046	RLM-44	CORE GRIPPER
015	RLM-14N	TOP ROD	048	SB-4	FOOT PAD
015-1	RLM-14N-1	BOTTOM ROD	049	RLM-45	CHAIN
016-2	RLM-15A	EXPAND SHAFT Ø5	051	RLM-47-1	BLADE
016-3	RLM-15B	EXPAND SHAFT (MOVABLE)	052	RLM-48	POWER SWITCH
017	RLM-16	FIXED SHAFT	053	EP-31	POWER CORD
018	RLM-17	ADJUSTMENT SHAFT	054	RLM-50	FUSE SET
019	RLM-18	REAR PLATE	055	EP-10-15A	FUSE
020	RLM-19-1	INNER COVER	056	RLM-53-SR	WIRE JACKET
021	RLM-20-1	FRONT ROLLER SPROCKET (32T)	057	RLM-54	PAD
022	RLM-20-2	REAR ROLLER SPROCKET(31T)	058	RLM-55	PAD
023	RLM-20-3	MOTOR SPROCKET (31T)	059	20C-M	HEAT SINK (ALUMINUM)
025	RLM-21	FIXING PLATE		2N3773	TRANSISTOR
026	RLM-22	SIDE COVER (R)	062	RLM-59A	SHIELD
026-1	RLM-22-1	SIDE COVER (L)	063	RLM-60	FIXED POLE
027	RLM-23	KNOB	064	D266-Q	CUT-OFF FUSE
027-1	D509040070400 E	SCREW	065	RLM-62	TRANSFORMER
027-2	HP-10	CAP	066	3H1-D33	TEMPERATURE SENSOR & WIRE
027-3	RLM-W1	WASHER	067	RLM-27-3	CONNECT WIRE
029	RLM-25	CU BUSH	069	R13-220BA	MOTOR CONTROL SWITCH
	RLM-25-1	BUSH	071	P6KE30CA	VARISITOR
030	RLM-26	PANNEL RACK	072	D2A7	TOROIDS CORE
031	RLM-27T	CONTROL PANEL	073	D266-D-1	FOR TOP/BOTTOM ROLL
032	RLM-27-1-B-19A-80-1	PCB (CPU#19A-80)	074	D266-L	WIRE (POWER SWITCH TO PCB)
032-1	RLM-27-4	LED PCB	075	D266-M	WIRE (POWER SWITCH TO FUSE SET)
033	RLM-28T	BUTTON NAMEPLATE	076	D266-K	WIRE (POWER SWITCH TO WIRE P AND POWER CORD WHITE)
034	RLM-29	THANSMIT PARTS	077	D266-P	WIRE (WIRE K AND POWER CORD WHITE TO PCB)
035	FD-39	BUSH	078	D266-H-1	WIRE (MOTOR SWITCH TO MOTOR WHITE)
	RLM-31	QUARTZ TUBE	079	D266-I-1	WIRE (MOTOR SWITCH TO MOTOR BLACK/LIMIT SWITCH)
036	UL-65-075	HEATER	080	TB-10	PAD
	3H1-P8-3B-NYLOK	FIXED SCREW			
	RLM-46	QUARTZ TUBE CAP			



