

2700EP PART MANUAL

NO.	PART NO.	DESCRIPTION	NO.	PART NO.	DESCRIPTION
001	RLM-P1BR	BRACKET	047	3H1-D33	TEMPERATURE SENSOR WITH WIRE
001-1	RLM-P1-1	UPPER BRACKET (L)	047-1	D266-TCC1200	TEMPERATURE SENSOR WITH WIRE
001-2	RLM-P1-2	UPPER BRACKET (R)	048	SB-4	FOOT PAD
001-3	RLM-P1-3	LOWER BRACKET (L)	049	RLM-45	CHAIN
001-4	RLM-P1-4	LOWER BRACKET (R)	050	RLM-46	QUARTZ TUBE CAP
002	RLM-2A	TOP/BOTTOM ROLLER	052	RLM-48(BLK)	POWER SWITCH
002-1	RLM-2HC-1	BUSH	053	EP-31-110	POWER CORD
004	RLM-3N(SLVR)	FEED TRAY	054	RLM-50	FUSE SET
005	RLM-4	FIXING PLATE	055	EP-10-15A	FUSE
006	RLM-5-1:75	DC MOTOR (1:75)	056	RLM-53-SR	WIRE JACKET
007	RLM-6	PRESS PLATE	057	RLM-54	PAD
008	RLM-7	POWER BRACKET (R)	058	RLM-55	PAD
008-1	RLM-7-1	POWER BRACKET (L)	059	20C-M	HEAT SINK (ALUMINUM)
009	RLM-8L	HEATER BRACKET (R)	061	RLM-58-1	3" ADAPTER
009-1	RLM-8L-1	HEATER BRACKET (L)	062	RLM-59A	SHIELD
010	RLM-9(SLVR)	MIDDLE GUIDE PLATE	063	RLM-60	FIXED POLE
012	3H1-D30	THERMO SET	064	D266-Q	CUT-OFF FUSE
013	RLM-12	FEEDING PLATE (UPPER)	064-1	D266-Q-1	WIRE (CUT-OFF FUSE TO PCB)
013-1	RLM-12	FEEDING PLATE (LOWER)	065	RLM-62-110	TRANSFORMER
014	RLM-13	PAD	067	RLM-27-3	CONNECT WIRE
015	RLM-14NA	TOP ROD	078	RLM-P61-H	STAND
015-1	RLM-14NA-1	BOTTOM ROD	080	RLM-P61-I	BAR
016-2	RLM-15A	EXPAND SHAFT Ø5	083	D273-2"	TUBE CAP
016-3	RLM-15B	EXPAND SHAFT (MOVABLE)	084	RLM-P61-7	WHEEL
017	RLM-16	FIXED SHAFT	086	RLM-P63	FAN
018	RLM-17	ADJUSTMENT SHAFT	086-1	RLM-P63-1	FAN'S NET
019	RLM-P18N(SLVR)	REAR COVER	087	RLM-P64	FIXING PLATE
020	RLM-19-1(SLVR)	INNER COVER	090	3LM-P8	SWITCH (FAN)
021	RLM-20-1	FRONT ROLLER SPROCKET (32T)	091	R13-220BA	MOTOR CONTROL SWITCH
022	RLM-20-2	REAR ROLLER SPROCKET(31T)	092	RC15KKFT00B	SWITCH (AUTO SHUT-OFF)
023	RLM-20-3	MOTOR SPROCKET (31T)	093	RC15KKFT00B	SWITCH (BOTTOM ROLLER HEATER)
025	RLM-21	FIXING PLATE	095	D266-D-1	LIMIT SWITCH WITH WIRE
026	RLM-22N (NVY)	SIDE COVER (R)	096	RLM-P73	BUSH
026-1	RLM-22-1N (NVY)	SIDE COVER (L)	097	RLM-BR2-B	BACK ROLLER
027	RLM-23	TENSION ADJUSTMENT KNOB	097-1	RLM-BR8A	TURNING BAR
027-1	D509040070400 E	SCREW	097-2	RLM-BR7-E	FIXING PLATE (FOR TURNING BAR)
027-2	HP-10	CAP	097-3	RLM-37-1	BUSH
027-3	RLM-W1	WASHER	098	RLM-LR3	FIXED PALTE A
028	RLM-P25	CU BUSH	099	RLM-LR4	FIXED PLATE B
029	RLM-25	CU BUSH	100	RLM-LR5	FIXED PLATE C
030	RLM-26	PANNEL RACK	101	RLM-LR6	FIXED PLATE D
031	RLM-27A (BLK)	CONTROL PANEL	102	RLM-63L	FIXED PLATE (L)
032	RLM-27-1B-D7D	PCB (CPU#D7D)	103	RLM-63L-1	FIXED PLATE (R)
032-1	RLM-27-1B-D7D-1	LED PCB	104	RLM-64L	BRACKET
033	RLM-28TA(BLK)	BUTTON NAMEPLATE	105	RLM-65L	ADJUSTMENT POLE
034	RLM-29	THANSMIT PARTS	106	RLM-66N	DE-CURLING BAR
035	FD-39	BUSH	107	RLM-67L	KNOB
036	RLM-31	QUARTZ TUBE	108	CB-3L	REGISTER SCREW
	UL-65-075	HEATER	111	NH-D37A	FIXING PLATE (R)
	3H1-P8-3B-NYLOK	FIXED SCREW	112	NH-D38A	FIXING PLATE (L)
	RLM-46	QUARTZ TUBE CAP	113	RLM-66L-1A	BUSH(DE-CURLING BAR)
036-1	3H1-P11	BAKELITE SHEET	114	WM-05R-02D0-Z	LIMIT SWITCH WITH WIRE
036-2	D2660-1	WIRE (HEATER TO PCB)	115	RLM-61	RACK
036-3	D266M-1	WIRE (SWITCH & LOWER HEATER)	116	D266-A-1	LED LAMP
036-4	D266L-1	WIRE (SWITCH TO PCB)	117	D252	LED LAMP SET
037	RLM-32(SLVR)	HANDLE	118	P6KE30A	VARISITOR
038	RLM-33(SLVR)	SIDE GUIDE (L)	119	D2A7	RING CORE
038-1	RLM-33-A(SLVR)	SIDE GUIDE (R)	120	RLM-47-1	BLADE
039	3H1-P9	CERAMIC PAD	121	D266-B-1	WIRE (MOTOR TO PCB)
040	RLM-37N	SLITTER	122	D266-C-1	WIRE (AUTO SHUT-OFF TO PCB)
040-1	RLM-38N	SLITTER	123	D266-L	WIRE (POWER SWITCH TO PCB)
040-2	RLM-37A	PROTECTIVE_SHEET	124	D266-M	WIRE (POWER SWITCH TO FUSE SET)
040-3	RLM-37R	SLITTER	125	D266-K	WIRE (POWER SWITCH TO WIRE P AND POWER CORD WHITE)
041	RS-8	SPACER	126	D266-P	WIRE (WIRE K AND POWER CORD WHITE TO PCB)
042	CB-3	GUIDE SCREW & NUT	127	D266-H-1	WIRE (MOTOR SWITCH TO MOTOR WHITE)
044	RLM-42	SPRING	128	D266-I-1	WIRE (MOTOR SWITCH TO MOTOR BLACK/WIRE D-1)
045	RLM-43-1	SPRING	129	D266-K-1	WIRE (POWER SWITCH TO WIRE I-1)
046	RLM-44	CORE GRIPPER	130	TB-10	PAD





