



Roll Laminator
Operating Manual

Versalam2700-P

OPERATING INSTRUCTIONS

Versalam2700P

1 IMPORTANT SAFEGUARDS

When using electrical machines, basic precautions should always be followed to reduce the risk of electric shock and injury to people, including the following:

1. Read all instructions.
2. Always unplug the machine when not in use or before cleaning.
3. Do not use outdoors.
4. Extreme caution should be taken when the machine is used by or near children or disabled persons.
5. To protect against risk of electrical hazards, do not immerse cord, plugs, or the whole machine in water or other liquids.
6. Do not operate the machine with a damaged cord or plug, or after the machine malfunctions, has been dropped or is damaged in any manner. Return the machine to the nearest authorized service facility for examination, repair, or adjustment.
7. Do not use accessory attachments not recommended or sold by the machine's manufacturer.
8. Do not let the cord touch hot surfaces or hang over the edge of the work table.
9. Do not use the machine for other than its intended use. This machine is intended for Office or Household use only.
10. The socket outlet shall be near the machine and shall be easily accessible.
11. Warning-hazardous moving parts-keep fingers and other body parts away.

2 LOCATION

1. Please remove the laminator carefully from its packaging and place it on a flat work surface. Place the machine in an area where it will normally be used, ensuring adequate room for the finished laminate to flow or slide out at the back.
2. Please install the shield and feed tray at the correct positions until the two LED lights on the left side panel turn off, otherwise the machine will not feed the film.

3 MACHINE OPERATION

A. LAMINATING FUNCTION

(1) TWO-SIDED LAMINATION

LOADING THE FILM

This machine has the capability of loading laminating film with 1” cores or with 3” cores using the included core adapters. Unpack the upper and lower rods. Remove the feed tray. **Load the film onto the rods by turning the top rod clockwise and the bottom rod counter-clockwise as you push the rods through. Make sure to leave equal lengths of rod out of each end using the guide marks to correctly position the roll of film.** Load the rods on the laminator. When using the adapters for film with 3” cores, follow an adapter---film---adapter sequence onto the rod and fit the adapters onto the paper core. **Note: you cannot interchange the upper and lower rods.**


THREADING THE FILM

Read the threading card supplied with each roll of film carefully. Do not mistake the stabilizer bar for the idler roller.

1. To thread the film through the “hot rollers” & “pull rollers”, please pull the handle to the “UP” position **to separate upper & lower hot rollers. User can slide down the lower idler bar along the slot for easier installation.**
2. **Thread the film by the rollers** and make sure the film is perfectly aligned at the top and bottom
Note: Overlap will cause the top film to deposit adhesive on the hot rollers and pull rollers, so this procedure is critical.
3. Make sure the film is correctly threaded based on the threading guide. A threading diagram is also located on the right side panel of the machine.

ADJUSTING THE FILM TENSION

The top and bottom supply rolls should have about the same tension. By turning the top roll with one hand and the bottom roll with the other, it can be determined if one of the rolls is tighter than the other. Also, if the tension is not equal between the top and bottom rolls, the laminated product will curl. If it curls up when it comes out of the machine, the top roll is likely tighter than the bottom. If it curls down, the bottom roll is likely tighter. To increase tension, turn the adjusting knob clockwise. To decrease tension, turn the knob counter clockwise. Even tension on the top and bottom rolls ensures flat lamination.

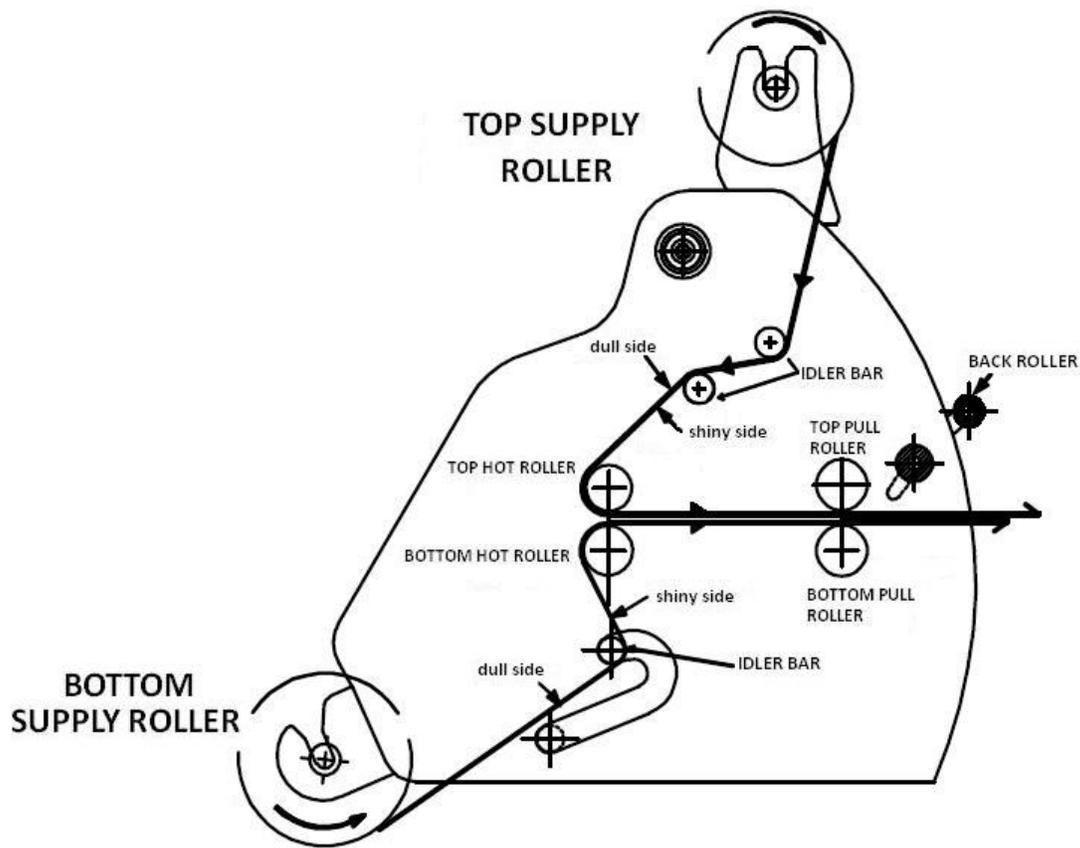

ADJUSTING THE TEMPERATURE & SPEED

1. User should set up the temperature for upper and lower rollers separately. Turn on the power switch and press the “U” key, then the digital screen display will show the previous temperature setting of upper roller. Please adjust the temperature to the recommended setting based on the thickness of film being used by pressing the “TEMP/SET” “^” or “~” arrow keys. Similarly do the same way to set up the temperature of bottom roller by pressing the “L” key. Said recommendations are found in front of the machine’s left side panel. The digital screen display will beep showing the set temperature for about 3 seconds before showing the actual machine temperature.
NOTE: To check the current temperature or temperature setting of upper or lower roller, please press the “U” or “L” key.
2. Once the set temperature is achieved and the roller temperature is stabilized, the machine will start beeping and the ready light will turn on. Once the ready light stays on, you can set the recommended speed.
3. Press the “MOTOR” “^” or “~” arrow keys to set the motor speed. The following table gives some common temperature/speed setting for typical uses.

Film Thickness	Temperature	Speed
1.5 Mil (38 Micron)	110°C (230°F)	4
3 Mil (75 Micron)	110°C (230°F)	3
5 Mil (125 Micron)	125°C (257°F)	3
10 Mil (250 Micron)	135°C (275°F)	3

LAMINATING PROCEDURES

1. Push the handle to “DOWN” position to engage the rollers. Make sure the motor switch is in “RUN” position. The user can now start laminating or mounting as the machine starts feeding in film.
2. To put the lamination temporarily on hold without turning off the machine, the user can turn the motor control switch to “STOP” position. This will cause the motor to stop running and the film will stop feeding.
3. To resume the lamination job, turn the switch back to “RUN” position again.

(2) ONE-SIDED LAMINATION

LOADING THE FILM

Unpack only the upper rod. Install nylon, BOPP or even thermal film by following an adapter---film---adapter sequence onto the rod and fit the adapters onto the paper core. Leave equal lengths of the rod out of each end. Use the guide to position the roll of film then tighten the screw on the adapter to secure the roll film. Load the rod on the laminator.

*Note: BOPP film is mainly suitable for 1-sided lamination on mounting boards or thick print sheets as it has a natural tendency to curl even with very little heat. For best results on 1-sided lamination without mounting, we recommend using nylon or thermal film for this application.

THREADING THE FILM

Refer to threading diagram for one side lamination. Do not mistake the reinforcing bar for the idler roller.

1. Please pull the handle to the “UP” position to release pressure on all the rollers, then thread the film through the upper hot rollers & pull rollers.
2. Thread the film by the rollers and make sure the film is perfectly aligned.

ADJUSTING THE TEMPERATURE & SPEED


1. Turn off the “BOTTOM ROLLER HEATER” switch on the right side of machine.
2. Press the “U” key and the digital screen display will show the previous temperature setting of upper roller. Adjust the upper roller temperature by pressing the “TEMP/SET” “^” or “~” arrow keys and the digital screen display will beep showing the set temperature for 3 seconds before showing the actual machine temperature.
3. Once the temperature is set, press the “HOT” key to start the heating process and the heater light will turn on. Once the set temperature is achieved and roller temperature is stabilized, the machine will start beeping and the ready light will turn on. Once the ready light stays on, you can set the recommended speed.
4. Press the “MOTOR” “^” or “~” arrow keys to set the motor speed. The following table gives a common temperature/speed setting for typical use.

Nylon Film Thickness	Temperature	Speed
0.5 Mil(12 Micron)	100°C(212°F)	3 ~ 4

5. Turn on the rear fans to prevent film from bunching in the back of the machine.

LAMINATING PROCEDURES

1. Align the material to be laminated evenly onto the mounting board before feeding it in.
2. Push the handle to the “DOWN” position to engage the rollers. The user can now start laminating as the machine starts feeding in film.
3. Make sure the film does not wrap around the back roller before the first board is out by pulling on the film from the back until the board comes out a few inches.
4. To put the lamination temporarily on hold without turning off the machine, user can turn the motor control switch found on the right side panel to “STOP” position. This will cause the motor to stop running and the film will stop feeding.
5. To resume the lamination job, turn the switch to the “RUN” position again
6. For laminating with mounting, feed more film as soon as the last board is fed until it is all the way out.
7. When done lamination, turn the motor control switch to “STOP” position, then trim the film using the included slitter.

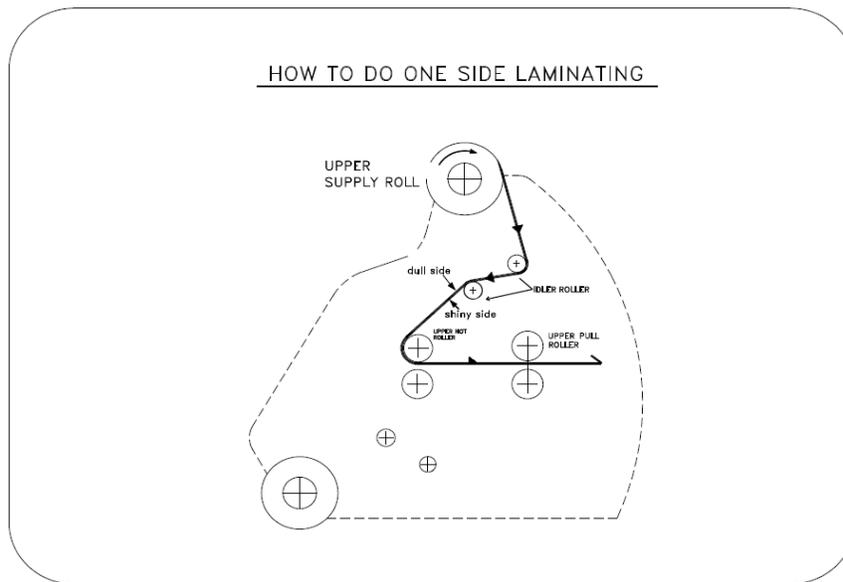

B. TEMPERATURE CONVERSION

This machine can display temperatures in either Celsius or Fahrenheit. To change to either one, simply press and hold the “TEMP/SET” arrow keys simultaneously.

C. GUIDE PLATES

This machine is equipped with guide plates on the left and right sides of the feed tray for proper alignment of materials to be laminated. Aside from being able to laminate 27" wide sheets one at a time, the user can also laminate up to two (2) 8.5"x11" prints simultaneously in either orientation by aligning them on each of the plates on both sides of the tray.

D. REVERSE FUNCTION


The machine is equipped with a reverse function. By pressing the “REVERSE” key, the machine will release the documents out from the front of the machine to prevent any jam or damage.


E. MOUNTING FUNCTION

1. This machine is equipped with a mounting function. The user can choose to mount prints or posters using up to 1/4" thick foam boards.
 - a. For mounting and encapsulating using thermal film, simply set the machine up for **2-SIDED LAMINATION**. Line up the material evenly on a standard foam board and set the temperature on the machine.
 - b. For simultaneous mounting with 1-sided lamination using nylon, BOPP or even thermal film, set the machine up for **1-SIDED LAMINATION**. Turn the bottom roller heater switch to the “off” position. Adjust the temperature based on the thickness of the top roller film and make sure the

print is properly aligned onto the board.

- c. For cold mounting only using self stick boards that have liners, care and precision must be exercised as this has a tendency to produce wrinkles and/or uneven positioning when the print is not properly set. There is no need for film to be threaded onto the machine and it is recommended to set temperature at 50°C (122°F) on the top roller for best results. Simply remove the liner from the board, carefully and evenly align the print and set it onto the adhesive side. The pressure applied by the rollers will enhance adhesion of the print onto the board.
Please refer to instructions on how to apply prints on these types of boards that come with their packaging or consult with the mounting board supplier.
2. Once the machine is hot enough and ready to laminate, push the handle to DOWN position and put the motor switch to RUN position.
3. Feed materials between the engaged rollers.
4. Put the motor switch in “STOP” position to stop the feeding when the board is all the way out in the back.

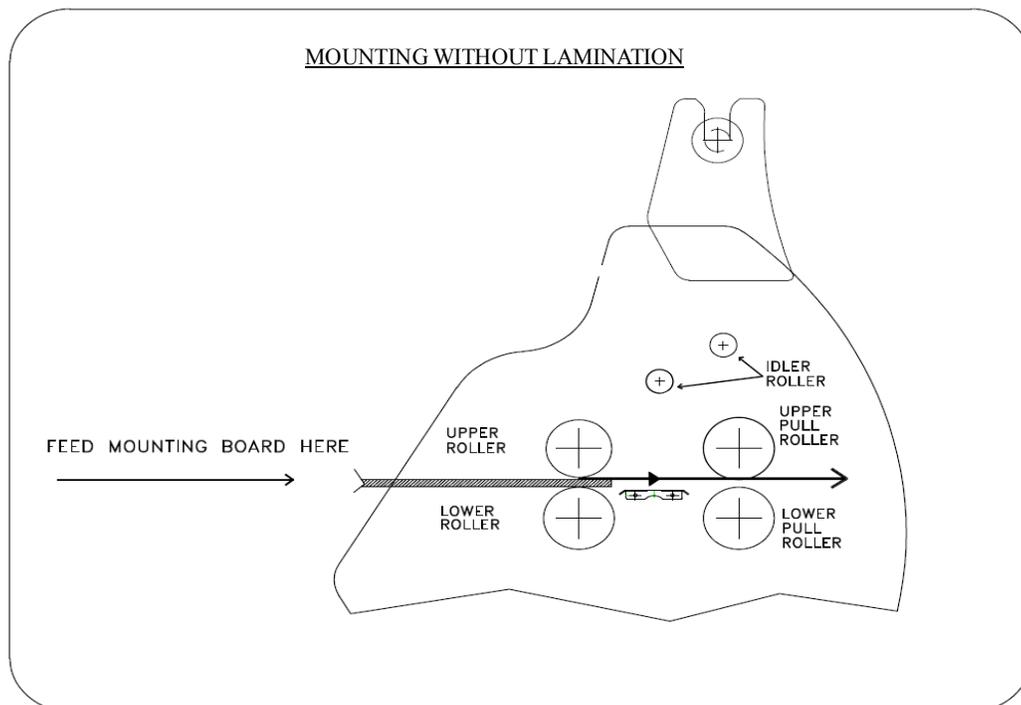

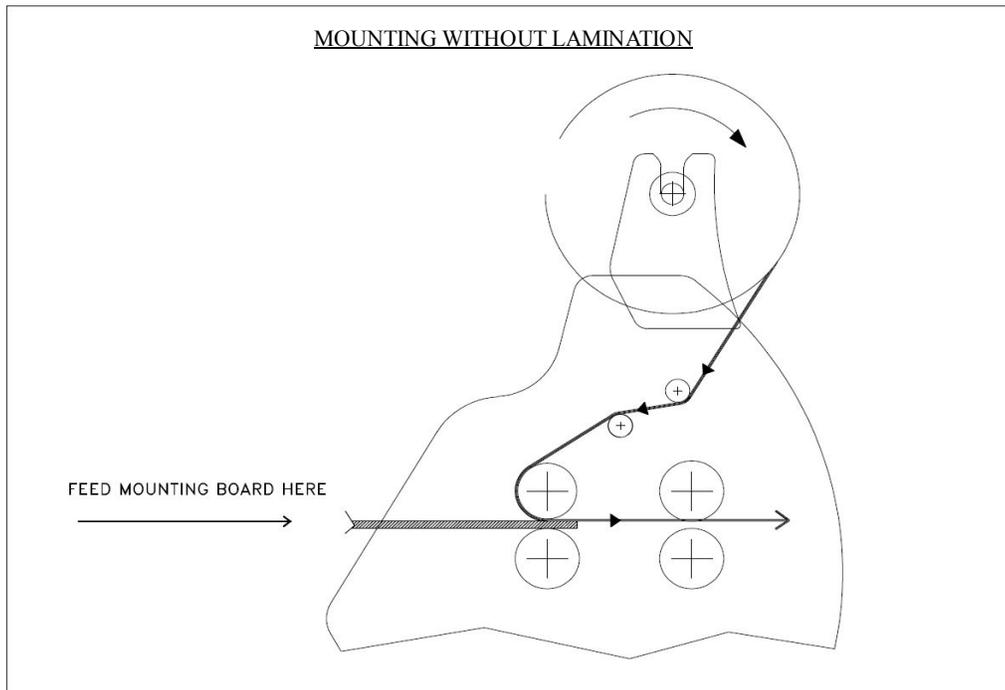

F. FILM SLITTERS

This machine is equipped with safety film slitters in the back for trimming film in between sheets of laminated material. The short slitter is for 2-side laminated film while the longer slitter is for 1-side laminated material. Simply slide the cutting edge across the film to remove the finished material.

4 TURNING OFF THE LAMINATOR

Upon completion of the laminating job, please press the “COLD” key and make sure the motor control switch is on “STOP” position. We recommend turning off the machine only after the roller temperature is lower than 80°C (176°F) to protect the heated rollers. Make sure the rear fans are also turned off.

In case you need to turn the machine off while the roller temperature is higher than 80°C (176°F), make sure that the rollers are disengaged with the handle in “UP” position before turning off the power switch.

5 CARE AND CLEANING

This machine is for Office or Household use only. Any servicing, other than cleaning and user maintenance, should be performed by an authorized service representative.

1. Do not immerse in water.
2. To reduce the risk of fire or electric shock, do not remove the machine's 4 rubber foot pads.
3. Keep your hands and cord away from hot parts of the machine during operation.
4. Never clean with scouring powders or hand implements.
5. Wipe clean with a soft cloth.

6 WARRANTY

This machine is guaranteed against defects in materials and workmanship by the Manufacturer for a period of one (1) year from the date of original purchase from an authorized distributor of Tamerica Products, Inc. If you perceive or experience any issue with the machine, kindly report it to the distributor within 10 business days of said purchase to avail of free pickup and redelivery from Tamerica's Service Center. After the first 10 days, you will either receive service instructions and parts via mail free of charge for the duration of the warranty.

Note that when returning the machine for warranty claims, the machine should be returned in its complete original packaging to avoid incidental or consequential damages that may void the claim. A copy of the invoice or other proof of purchase also needs to be sent with the machine.

Upon evaluation of the machine and the determination of the actual defect, the machine will be restored to its regular working condition by the Service Center and shipped back to you free of charge. If you change your mind and simply want to return the machine, a 20% restocking fee is charged even within the 10-day grace period. Further, you will have to cover freight to return the machine and it has to be in brand-new resalable condition, otherwise, you might incur more charges.

This warranty covers all defects incurred in the normal use of the equipment except in the following cases:

1. Loss or damage to the equipment due to improper operation, abuse, mishandling or failure to follow the operating instructions.
2. Removal or alteration of the serial number.
3. The machine being serviced or modified by anyone other than a certified technician authorized by TAMERICA.

This warranty expresses the entire obligation of the Manufacturer. Unless prohibited by law, neither this warranty nor any other warranty expressed or implied, including implied warranties of merchantability, shall extend this warranty period. Again, no responsibility is assured for incidental or consequential damages.

This warranty is valid only within the United States, or its provinces and territories.