

2700P PART MANUAL

NO.	PART NO.	DESCRIPTION	NO.	PART NO.	DESCRIPTION
	RLM-P1BR	BRACKET	040-2	RLM-37A	PROTECTIVE SHEET
001-1	RLM-P1-1	UPPER BRACKET (L)	040-3	RLM-37R	SLITTER
001-2	RLM-P1-2	UPPER BRACKET (R)	041	RS-8	SPACER
001-3	RLM-P1-3	LOWER BRACKET (L)	042	CB-3	GUIDE SCREW & NUT
001-4	RLM-P1-4	LOWER BRACKET (R)	044	RLM-42	SPRING
002	RLM-2A	TOP/BOTTOM ROLLER	045	RLM-43-1	SPRING
002-1	RLM-2HC-1	BUSH	046	RLM-44	CORE GRIPPER
004	RLM-3N(BGE)	FEED TRAY	047	3H1-D33	TEMPERATURE SENSOR WITH WIRE
005	RLM-4	FIXING PLATE	047-1	D266-TCC1200	TEMPERATURE SENSOR WITH WIRE
006	RLM-5-1:180	DC MOTOR (1:180)	048	SB-4	FOOT PAD
007	RLM-6	PRESS PLATE	049	RLM-45	CHAIN
008	RLM-7	POWER BRACKET (R)	050	RLM-46	QUARTZ TUBE CAP
008-1	RLM-7-1	POWER BRACKET (L)	052	RLM-48(BLK)	POWER SWITCH
009	RLM-8L	HEATER BRACKET (R)	053	EP-31-110	POWER CORD
009-1	RLM-8L-1	HEATER BRACKET (L)	054	RLM-50	FUSE SET
010	RLM-9(BGE)	MIDDLE GUIDE PLATE	055	EP-10-15A	FUSE
012	3H1-D30	THERMO SET	056	RLM-53-SR	WIRE JACKET
013	RLM-12	FEEDING PLATE (UPPER)	057	RLM-54	PAD
013-1	RLM-12	FEEDING PLATE (LOWER)	058	RLM-55	PAD
014	RLM-13	PAD	059	20C-M	HEAT SINK (ALUMINUM)
015	RLM-14NA	TOP ROD	061	RLM-58-1	3" ADAPTER
015-1	RLM-14NA-1	BOTTOM ROD	062	RLM-59A	SHIELD
016-2	RLM-15A	EXPAND SHAFT Ø5	063	RLM-60	FIXED POLE
016-3	RLM-15B	EXPAND SHAFT (MOVABLE)	064	D266-Q	CUT-OFF FUSE
017	RLM-16	FIXED SHAFT	064-1	D266-Q-1	WIRE (CUT-OFF FUSE TO PCB)
018	RLM-17	ADJUSTMENT SHAFT	065	RLM-62-110	TRANSFORMER
019	RLM-P18(BGE)	REAR COVER	067	RLM-27-3	CONNECT WIRE
020	RLM-19-1(BGE)	INNER COVER	078	RLM-P61-H	STAND
021	RLM-20-1	FRONT ROLLER SPROCKET (32T)	080	RLM-P61-I	BAR
022	RLM-20-2	REAR ROLLER SPROCKET(31T)	083	D273-2"	TUBE CAP
023	RLM-20-3	MOTOR SPROCKET (31T)	084	RLM-P61-7	WHEEL
025	RLM-21	FIXING PLATE	086	RLM-P63	FAN
026	RLM-22N (BGE)	SIDE COVER (R)	086-1	RLM-P63-1	FAN'S NET
026-1	RLM-22-1N (BGE)	SIDE COVER (L)	087	RLM-P64	FIXING PLATE
027	RLM-23	TENSION ADJUSTMENT KNOB	090	3LM-P8	SWITCH (FAN)
027-1	D509040070400 E	SCREW	091	R13-220BA	MOTOR CONTROL SWITCH
027-2	HP-10	CAP	093	RC15KKFT00B	SWITCH (BOTTOM ROLLER HEATER)
027-3	RLM-W1	WASHER	095	D266-D-1	LIMIT SWITCH WITH WIRE
028	RLM-P25	CU BUSH	096	RLM-P73	BUSH
029	RLM-25	CU BUSH	097	RLM-BR2-B	BACK ROLLER
030	RLM-26	PANNEL RACK	097-1	RLM-BR8A	TURNING BAR
031	RLM-27A (BLK)	CONTROL PANEL	097-2	RLM-BR7-E	FIXING PLATE (FOR TURNING BAR)
032	RLM-27-1B-D7D	PCB (CPU#D7D)	097-3	RLM-37-1	BUSH
032-1	RLM-27-1B-D7D-1	LED PCB	098	RLM-LR3	FIXED PALTE A
033	RLM-28TA(BLK)	BUTTON NAMEPLATE	099	RLM-LR4	FIXED PLATE B
034	RLM-29	THANSMIT PARTS	100	RLM-LR5	FIXED PLATE C
035	FD-39	BUSH	101	RLM-LR6	FIXED PLATE D
036	RLM-31	QUARTZ TUBE	108	CB-3L	REGISTER SCREW
	UL-65-075	HEATER	111	NH-D37A	FIXING PLATE (R)
	3H1-P8-3B-NYLOK	FIXED SCREW	112	NH-D38A	FIXING PLATE (L)
	RLM-46	QUARTZ TUBE CAP	118	P6KE30A	VARISITOR
036-1	3H1-P11	BAKELITE SHEET	119	D2A7	RING CORE
036-2	D266O-1	WIRE (HEATER TO PCB)	120	RLM-47-1	BLADE
036-3	D266M-1	WIRE (SWITCH & LOWER HEATER)	121	D266-B-1	WIRE (MOTOR TO PCB)
036-4	D266L-1	WIRE (SWITCH TO PCB)	123	D266-L	WIRE (POWER SWITCH TO PCB)
037	RLM-32(BGE)	HANDLE	124	D266-M	WIRE (POWER SWITCH TO FUSE SET)
038	RLM-33(BGE)	SIDE GUIDE (L)	125	D266-K	WIRE (POWER SWITCH TO WIRE P AND POWER CORD WHITE)
038-1	RLM-33-A(BGE)	SIDE GUIDE (R)	126	D266-P	WIRE (WIRE K AND POWER CORD WHITE TO PCB)
039	3H1-P9	CERAMIC PAD	127	D266-H-1	WIRE (MOTOR SWITCH TO MOTOR WHITE)
040	RLM-37N	SLITTER	128	D266-I-1	WIRE (MOTOR SWITCH TO MOTOR BLACK/WIRE D-1)
040-1	RLM-38N	SLITTER	130	TB-10	PAD





