


SLITTER KNIFE HOLDER ASSEMBLY

- 1) ARBOR PRESS A $3/8'' \times 1/2'' \times 3/4''$ OILITE BEARING (PRB041) LD02 CENTERED THROUGH SLITTER KNIFE HOLDER (4285 041.4) LD02.
- 2) THREAD A SLITTER KNIFE HANDLE (4285 042.4) LD01 INTO THE SLITTER KNIFE HOLDER UNTIL NO KNIFE HANDLE THREADS ARE SHOWING.
- 3) THREAD SPI KNOB (PRK177) CP02 WITH #10 WASHER INTO CHANNELLED SIDE OF SLITTER KNIFE HOLDER.

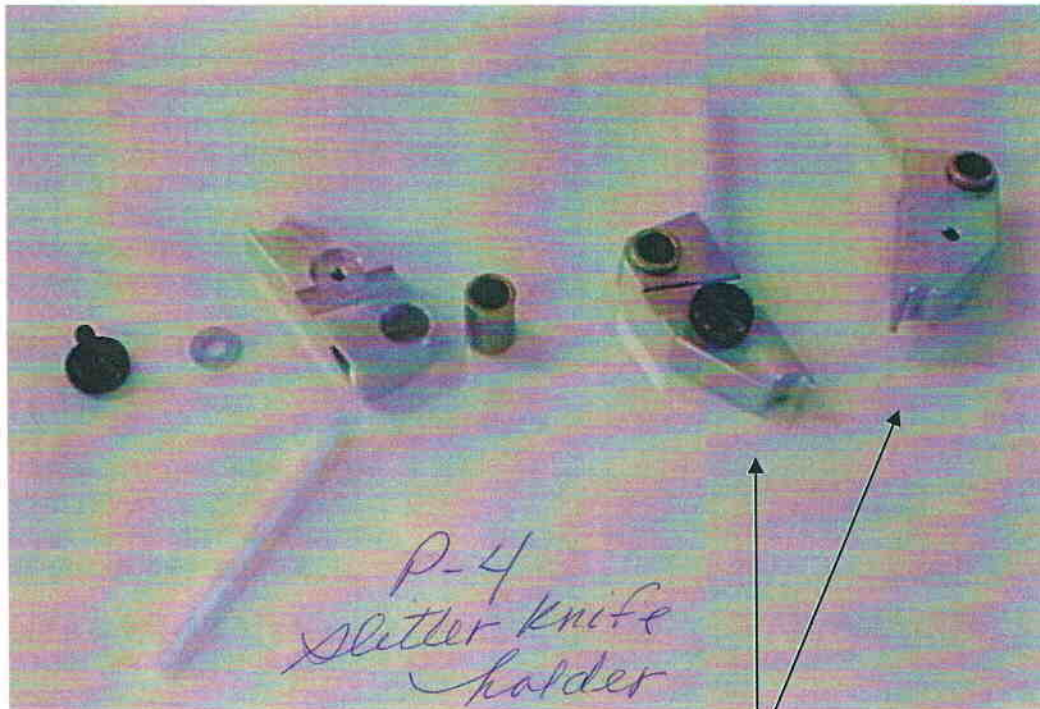

COMPLETED SLITTER KNIFE HOLDER ASSEMBLY