

**READ ALL PRECAUTIONS & INSTRUCTIONS CAREFULLY
BEFORE OPERATING LAMINATOR**

Setup
Instruction
Operation
Lamination
Maintenance

Industrial Series Laminators HDF-15

Model HDF-15

2016

Operation
Manual



[Heavily obscured and illegible text line]

[Large block of text, almost entirely illegible due to extreme noise and scan artifacts]

IMPORTANT: Don't laminate one-of-a-kind documents unless you are sure of your laminating skills and can afford to damage or ruin the document. Don't laminate valuable items such as stamps, baseball cards, autographs or other collectibles because the value of such items can be destroyed by lamination. Collectors generally value these kinds of items only in their original state.

Remember that you cannot laminate thermal paper, such as typical fax paper, because it is activated by heat and will turn black. Also, remove paper clips and staples because they can damage the rubber rollers. Be careful about laminating anything that will be affected by heat. For example, the colors in crayon drawings may run together or be smeared, especially if the crayon layer is heavy. Light crayon drawings may not be affected, but test an expendable sample of any item that may not laminate well.

IMPORTANT: Éviter de plastifier du papier thermosensible, comme le papier de télécopieur, puisqu'il noircira sous l'effet de la chaleur, et enlever les trombones et les agrafes qui risquent d'endommager les rouleaux de caoutchouc. Prendre certaines précautions avant de plastifier des articles susceptibles de réagir à la chaleur comme les dessins au pastel dont les couleurs baver et se mélanger, surtout si la couche de pastel est épaisse. Les pastels en couche mince peuvent ne pas réagir, mais, en cas de doute, il est préférable de faire un essai avec un échantillon perdu.

Ne pas plastifier les documents importants dont il n'existe qu'un seul exemplaire, à moins de bien maîtriser la technique de plastification. Ne pas plastifier non plus les articles de collection comme les timbres, les cartes de baseball, les autographes ou autres, qui peuvent perdre leur valeur pour les collectionneurs s'ils ne sont plus dans leur état d'origine.

IMPORTANTE: Recuerde que no puede laminar papel térmico, tal como el papel de fax típico, ya que es activado por el calor y se tornará negro. Retire también cualquier sujeta-papeles o grapa, puesto que pueden dañar los rodillos de goma. Evite laminar cosas sensibles al calor, por ejemplo, los colores de dibujos hechos en lápiz de pastel pueden no ser afectados, pero ensaye con alguna muestra descartable, en los ítemes que podrían no laminarse bien.

No lamine ningún documento único, a no ser que esté muy seguro de sus habilidades de laminador y pueda permitirse arruinar el documento. No lamine artículos de valor, como estampillas, tarjetas de béisbol, autógrafos, u otros coleccionables, ya que su valor puede ser destruido por la laminación. En general, las coleccionistas valoran este tipo de artículo en su estado original.

I-0 Glossary of Symbols

Part

- 1.  Forward
- 2.  Attention/General Danger Lab52
- 3.  Arm Entanglement Lab51
- 4.  Cutting of Fingers or Hand/Straight Blade Lab54
- 5.  Pinch Hazard
- 6.  International/Hot Warning Lab100
- 7.  Electrical Hazard Lab 43
- 8.  Hand Entanglement/Belt Drive
- 9.  International start
- 10.  International Stop

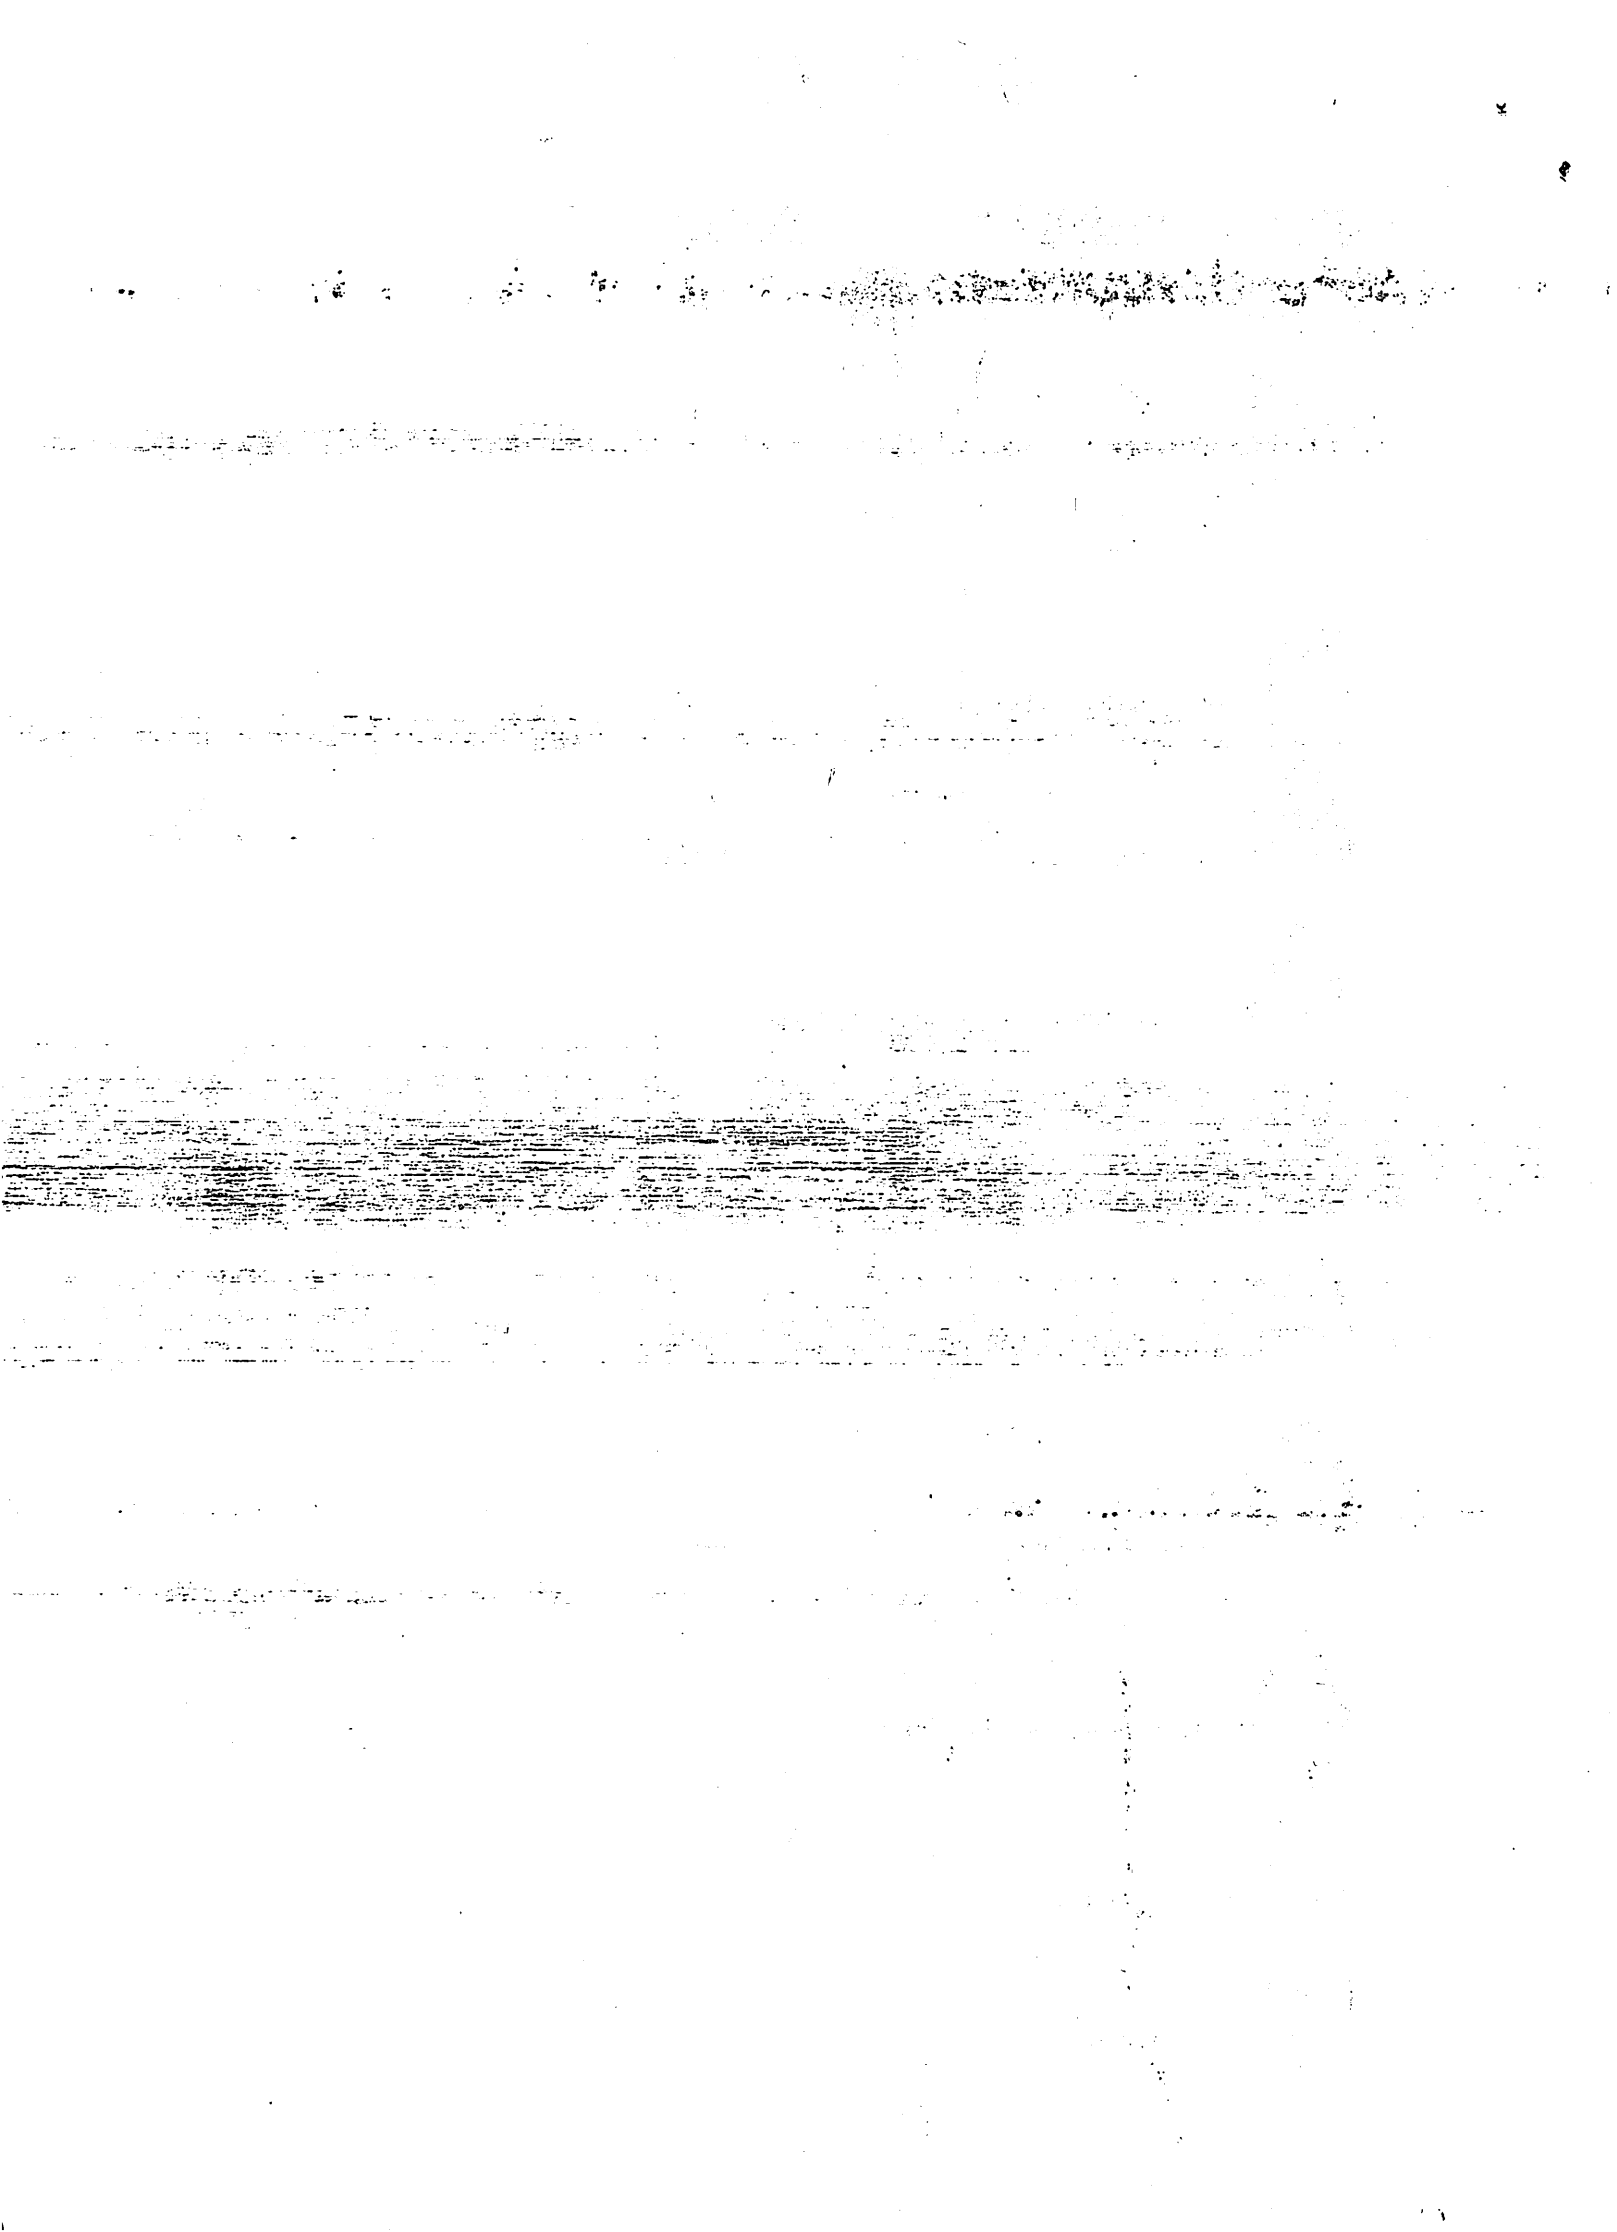


TABLE OF CONTENTS

1-1 INTRODUCTION

- 1-2 Features and benefits
- 1-3 Options
- 1-4 Specifications
- 1-5 Principles of operation
- 1-6 Laminating film
- 1-7 Warranty

2-1 UNPACKING AND INVENTORY

3-1 PRODUCT ILLUSTRATIONS & NAMES OF PARTS

4-1 SAFETY PRECAUTIONS

5-1 SETUP & OPERATION

- 5-2 Threading the laminator
- 5-3 Supply roll tension and other adjustments
- 5-4 Laminating
- 5-5 Recommended temperature settings
- 5-6 Slitter operation
- 5-7 Simultaneous Laminating and Mounting
- 5-8 Cold applications
- 5-9 Preventing and solving problems

6-1 MAINTENANCE

- 6-2 Cleaning the heat shoes
- 6-3 Cleaning the rubber rollers
- 6-4 Lubrication

1-1 INTRODUCTION

The **HDF-15** is designed to provide quality lamination of a wide range of papers and materials up to ½-inch thick using film up to ten mil thick. Common applications include, but are not limited to maps, digital imaging, packaging, posters, instructional aids, signs, presentation materials, photographs, copies (B&W or color), prints, flyers, promotional sheets and many other items.

Options include a release liner take-up, extra slitter heads, and footage counter.

To assure the best performance from your new laminator please follow the safety, installation, operation, and maintenance instructions in this manual. Read the manual before using the laminator. Keep the manual with the machine and periodically review the instructions. This manual also contains the warranty. Additional copies are available from the manufacturer.

We take this opportunity to thank you for selecting the HDF-15 "Workhorse" laminator and to assure you of our commitment to your satisfaction with our products.

As you unpack your new laminator please complete the following information. Always have this information ready when calling.

Dealer Where Purchased _____

Installation Date _____ Serial # _____

WARNING: High temperatures are present and care should be exercised in operating the laminator.

MISE EN GARDE: *La machine à plastifier produit beaucoup de chaleur et on doit l'utiliser avec prudence.*

ADVERTENCIA: *El plastificador produce temperaturas muy altas; tenga cuidado al utilizarlo.*

WARNING: The laminator should not be operated without the plexiglass safety shield.

MISE EN GARDE: *Ne pas utiliser la machine à plastifier sans son écran protecteur en plexiglass.*

ADVERTENCIA: *No utilice el plastificado sin tener el protector de plexiglass en su lugar.*

Ledco, Inc. • 4265 North Main Street • Hemlock, NY 14466

Fax: 585-367-2978 Phone: 585-367-2392

Web: ledcoinc.com E-mail: Info@ledcoinc.com

Parts: service@ledcoinc.com

Faint, illegible text at the top of the page, possibly a header or title.

Second block of faint, illegible text.

Third block of faint, illegible text.

Fourth block of faint, illegible text.

Fifth block of faint, illegible text.

Sixth block of faint, illegible text.

Seventh block of faint, illegible text.

Eighth block of faint, illegible text at the bottom of the page.

1-2

FEATURES & BENEFITS

Your new laminator has several standard features that set it apart from other models.

- **Intelligent heat controllers** simultaneously display both the set temperature and the actual temperature. The microprocessor-based control quickly learns to anticipate the heat demand of each job and keeps the actual temperature within a few degrees of the set temperature.
- **Laminating and pull rollers** are covered with quality silicone rubber for superior release, higher lamination quality and easier cleaning. The laminating rollers and pull rollers are interchangeable.
- **Removable heat shoes** are teflon coated to reduce film abrasion. They can easily be unplugged and taken off to facilitate cleaning or replacing the laminating rollers.
- **Built-in retractable slitters** save an enormous amount of cutting time by trimming away side scrap during the lamination process. The two heads can be adjusted independently with great precision, even while the laminator is running.
- **Forced air cooling** is essential when running thicker films, because the lamination needs to be cooled to get good results.
- Easy access **controls** are conveniently located and grouped for effective operation.
- The **safety guard** is built into the feed tray to make sure it will always be in place when laminating.
- **An Integral Automatic Feeder** that holds up to a full ream of paper. Also included is a **precision hand feed tray** that has moveable left and right side guides and can be replaced with the Automatic Document Feeder.
- **Laminating and pull rollers** are covered with quality silicone rubber for superior release, higher lamination quality and easier cleaning. The laminating rollers and pull rollers are interchangeable.
- **Very strong steel cores.** These prevent roller flexing and insure uniform pressure across the width of the laminate, giving you the best quality lamination available in a medium-duty commercial machine.
- **Controls to open and close the laminating rollers.** The controls make threading easier and allow even heating of laminating rollers during warm-up.
- **100% Made in the U.S.A.**

1-3 OPTIONS

- **2 ¼-inch supply roll mandrels** are available at no additional charge at time of purchase in place of the standard 3-inch mandrels.
- **Optional Scrap rewind.** Enables cold lamination by removing the release liner material from pressure sensitive adhesives, film, and vinyls. (Factory installed only)
- **Optional Footage counter.** For accurate measurement of film usage.
- **Additional slitter heads.** For multiple-up trimming.

1-4

SPECIFICATIONS LAMINATOR

Max laminating width	15"
Max Feeder Size	13 1/2" wide X 20" long
Laminating roller diameter	1.5 "
Speed	0-35 FPM
Laminating roller diameter	3" (2 1/4" option)
Supply roll core size	3"
Recommended film	up to 10 mil
Max laminating thickness	1/2"
Max film roll diameter	13"
Dimensions	38L 51H 25D
Shipping Dimensions	56L 60H 43D
Weight/shipping weight	285/560 lbs (Laminator W/Compressor)
Motor	1/4 HP D/C
Electrical (single-phase)	205-240 VAC 16 amps 3000 watts
Electrical connector	NEMA L6-20P

1-5 PRINCIPLE OF OPERATION

The HDF-15 "Workhorse" laminators operate by pulling film with a thermally activated adhesive over a heat source and into a set of laminating rollers. Film from the supply rolls passes over heat shoes to activate a polyethylene adhesive layer on the film. It then passes through rubber rollers to apply pressure and bond the film to the item being laminated. The adhesive is pressed into the ink and fibers on the surface of the paper.

The strength of the lamination bond can be checked by cutting a large "X" on the surface of a laminated sample with a sharp blade. Use the tip of the blade to pry up one corner of the "X". Grab that corner and pull up the film. Ink and/or paper fibers coming up with the layer of film indicates a good adhesive bond.

If the film comes up too easily, with no ink or paper, the lamination was probably done at too low a temperature. Check the instructions that may have come with your laminating film and/or the lamination temperature chart in section 5-5.

Please note that when doing an X-test on glossy (coated) paper, a good X-test will pull up ink only. The film should not come up easily. When laminating material that is not glossy (uncoated), the paper is often more fibrous and a good X-test will yield ink and paper fibers coming up with the film.

1-6 LAMINATING FILM

Most thermal laminating film consists of two layers: a base of polyester and an adhesive layer of polyethylene. The polyester layer forms the harder outer surface of the film and does not melt at laminating temperature. It provides rigidity and protection for your laminated items. The greater the polyester content, the higher the level of protection, rigidity and luster. The polyethylene layer melts at laminating temperature and bonds the film onto the subject material under the pressure of the laminating rollers. As an X-test demonstrates, the adhesive is pressed into the paper and fills irregularities in the surface.

The proportion of polyester and polyethylene in a film is usually described with numbers. For example, a "1-2" film consists of one mil of polyester and two mils of polyethylene. The first number refers to the base layer. The second number refers to the adhesive layer. A mil is 1/1000 of an inch.

Since polyester is the more costly of the two types of plastic generally used in laminating film, a "3-2" film will cost more than a "2-3" film. Both are 5-mil films but the "3-2" version will seem a little thicker on a piece of laminated material because it will be slightly stiffer. Thermal laminating films are available in many different base/adhesive combinations. Five mil film, for example, can be found in 1-4, 2-3, 3-2 and 4-1 combinations.

In the US laminating trade, the generally accepted practice is to describe two-sided lamination, or encapsulation, by the thickness of one layer of film. For example, "3-mil lamination" should refer to lamination with two layers of 3-mil film. If you are buying or selling laminating film or lamination services, please make sure both parties understand the film descriptions being used. There is a huge variety of thermal laminating films available to suit many different kinds of application. Here are some of the more commonly used "special" film types or film additives:

- film with low-melt adhesives, also known as co-polymer films; these often have better clarity and are less likely to curl or ripple
- matte films to eliminate glare or to accept printing or writing; many suppliers offer films with both glossy and matte finishes
- film with UV inhibitors to protect colors in the laminated material from fading in sunlight
- thermal film that has a pressure-sensitive adhesive and a release liner on its outer side; for example, a poster with this material laminated on the back could easily be mounted without fasteners or tape
- "liner films" with a protective liner on the top outer surface...after a piece of material has been laminated, trimmed, packed, and shipped, the person using the material can remove the protective liner revealing a surface perfectly free of dust, scratches or abrasion

- opaque or colored films for the back side of a lamination; these can form a border for a laminated piece
- iridescent clear films for special visual effects
- permanently waterproof films for outdoor, underwater, or special applications; the most common thermal laminating films are made with water-based primers and will eventually de-laminate if continually exposed to water or weather; truly waterproof films are made with special primers

Rolls of film may be purchased in different widths. The size of the laminator is the only limitation to the width of the film rolls you can use. Make sure the upper and lower roll widths are the same, and are aligned with each other.

When installing film, always center the rolls of film on the supply roll mandrels. Because it does not hold heat well, 1.5 mil film can be the most difficult gauge of film to use. A standard 1.5 mil film will run at about 310 °F, while a 3 mil film with the same adhesive type will run at 280 °F. Even when applied at 310 °F, the 1.5 mil film will not adhere as consistently as the 3 mil film applied at 280°F, or a 5 mil applied at 250°F. For many applications, 5 mil film does a much better job of protecting and enhancing items.

Ten mil film is suggested for those applications that need the most protection and rigidity. Seven mil films are also available.

Rolls of film are sometimes spliced. Most film suppliers will mark a splice with colored tape. This way, you can see the splice as a "dash" of color on either end of the roll. If you spot a spliced roll in advance, you can put it on the top supply roll mandrel in order to see the splice coming more easily and avoid putting material under the splice. Or you could put it on the bottom roll if you plan to be laminating items that will never be seen from the backside.

[Illegible text line]

[Illegible text line]

[Illegible text line]

[Illegible text line]

[Illegible text line]

[Illegible text line]

[Illegible text line]

[Illegible text line]

[Illegible text line]

[Illegible text line]

[Illegible text line]

1-7 WARRANTY

This laminator is guaranteed against defects in material and workmanship for a period of two years after date of shipment. Defective parts will be replaced without cost within the warranty period, provided the laminator has not been abused, altered or operated contrary to instructions. Ledco, Inc. shall not be liable for any alterations or repairs except those made with its written consent.

This obligation under warranty shall not extend to the following:

- The adjustment or replacement of parts which are the normal responsibility of the owner. For example, rubber rollers, heat shoe coatings, scratched or chipped paint, loose fasteners (screws, nuts, etc.), or other items that show wear under normal use; i.e. "normal wear parts."
- Normal operating adjustments to heat, speed, tension, etc..
- Parts that are not manufactured by LEDCO, Inc.. If the individual manufacturer warrants these items, their warranty is, in turn, passed on to the original purchaser of the laminator. LEDCO, Inc. does not incur any obligation or liability as a result of the warranties, which are the sole responsibility of the appropriate individual manufacturer.

Any laminator that proves defective during the warranty period may be returned to LEDCO, Inc. unless it is decided that the necessary repairs can be made during a service call. Notice of the defect should be submitted in writing or by phone to LEDCO before any steps are taken to repair or return the machine. Phone: 585-367-2392 Fax: 585-367-2978

If the machine is returned, the following should accompany it.

- Customer name, address and phone number
- Written particulars regarding the malfunction
- Date of installation
- Serial number of the machine.

**RETURNS MUST HAVE A RETURN AUTHORIZATION NUMBER
ON THE OUTSIDE OF THE SHIPPING CONTAINER.**

Send all returned equipment freight **PREPAID** to:
LEDCO, Inc., 4265 North Main Street, Hemlock, NY 14466

If your machine needs servicing after the warranty has expired, please contact your dealer. Ledco, Inc. does offer technical support if your dealer is unable to assist.

This warranty is expressly in lieu of all other warranties expressed or implied. This includes the warranties of Merchantability and Fitness For Use and of all other obligation or liabilities of LEDCO, Inc. LEDCO neither assumes nor authorizes any other person to assume it for any other obligation or liability in connection with the sale of this laminator except as provided for above.

Further, this warranty will not apply to any machine or part thereof which has been damaged as a result of an accident or as a result of the abuse, misuse, or neglect of the machine. The warranty is also void if the laminator has been altered or repaired by any other than an authorized repair facility or dealer.

If you have any questions about this warranty, contact:
LEDCO: Phone: 585-367-2392 Fax: 585-367-2978

THE UNIVERSITY OF CHICAGO PRESS

2-4 UNPACKING AND INVENTORY

The laminator arrives fully assembled, except that some parts such as feed trays and fan assemblies may be packed off the machine to avoid shipping damage. Upon arrival, inspect the unit immediately and thoroughly using the packing list that accompanies the shipment. Please follow these steps to correct any problem with your shipment. Ledco, Inc. cannot accept any responsibility for damage or loss unless you notify us within ten days of receipt of shipment and follow these procedures:

BREAKAGE OR DAMAGE: It is imperative that any shipping damage is reported and a claim is filed with the delivering carrier immediately upon receipt of damaged shipment. The procedure for reporting damage depends on the method of shipment. Please note damage on bill of lading.

FREIGHT, EXPRESS, or TRUCK DELIVERY: According to the contract terms and conditions of the carrier, the responsibility of the shipper ends at the time and place of shipment. The carrier then assumes full responsibility for the shipment.

1. Notify LEDCO IMMEDIATELY.
2. Hold damaged goods with container and packing for inspection by the examining agent. LEDCO will arrange the inspection.
3. **DO NOT RETURN ANY GOODS TO LEDCO PRIOR TO AUTHORIZATION BY LEDCO.**
4. Submit a copy of the inspector's report to LEDCO. LEDCO will file the claim with the carrier. LEDCO will replace your machinery if necessary. You will be credited for the damaged machinery when the claim is processed.

SHORTAGE:

1. Check the packing list notations. The apparent shortage may have been marked as an intentional short-shipped (back-ordered) item.
2. Reinspect the container and packing material, particularly for smaller items.
3. Make certain that unauthorized personnel prior to complete unpacking did not remove the item and inventory.
4. Call us and send immediate written notification of the shortage.


INCORRECT SHIPMENT:

1. If the material you receive does not correspond with your order, notify LEDCO immediately. Include the order number and item(s).
2. Hold item(s) until return instructions are received.

RETURNS: DO NOT RETURN DAMAGED OR INCORRECT ITEMS UNTIL YOU HAVE RECEIVED SHIPPING INSTRUCTIONS AND AN AUTHORIZATION NUMBER FROM LEDCO.

3-1 LAMINATOR ILLUSTRATIONS & NAMES OF PARTS

The photos below and on the following pages identify major components and operating controls. Refer to them as you study the installation, operating and maintenance procedures described in this manual. The power switch on The HDF15 is on the back of the machine.

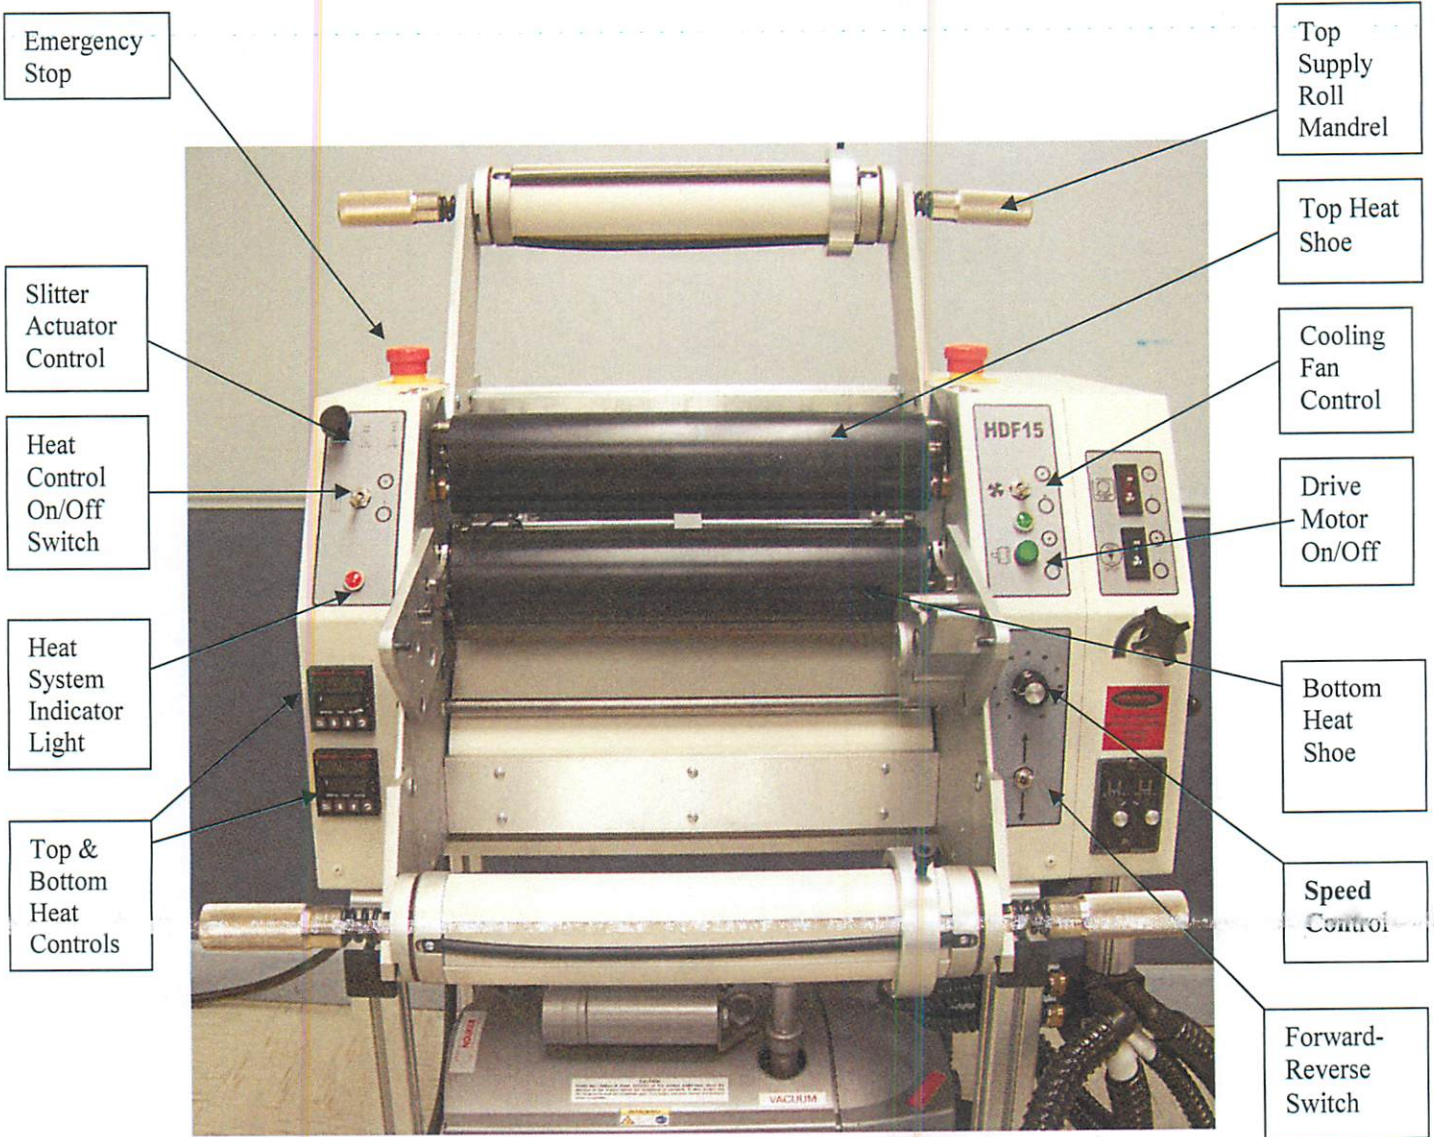

Gap Separator Adjustment

Slitter, Left Side Adjustment

Air Compressor

Release Liner Shaft

Feed Tray

Feed Table Air Adjustment



Rear Paper Stop Assembly

Top Supply Roll

Slitter, Right Side Adjustment

Front and Back Roller pressure Knobs

Lower Supply Roll



Cooling fans
On/Off

Motor
Control
Switch and
Indicator
Lamp




Compressor
On/Off
Switch


Accessory
On/Off
Switch

Paper Gap
Adjustment

Blower
Adjustment

Suction
Adjustment

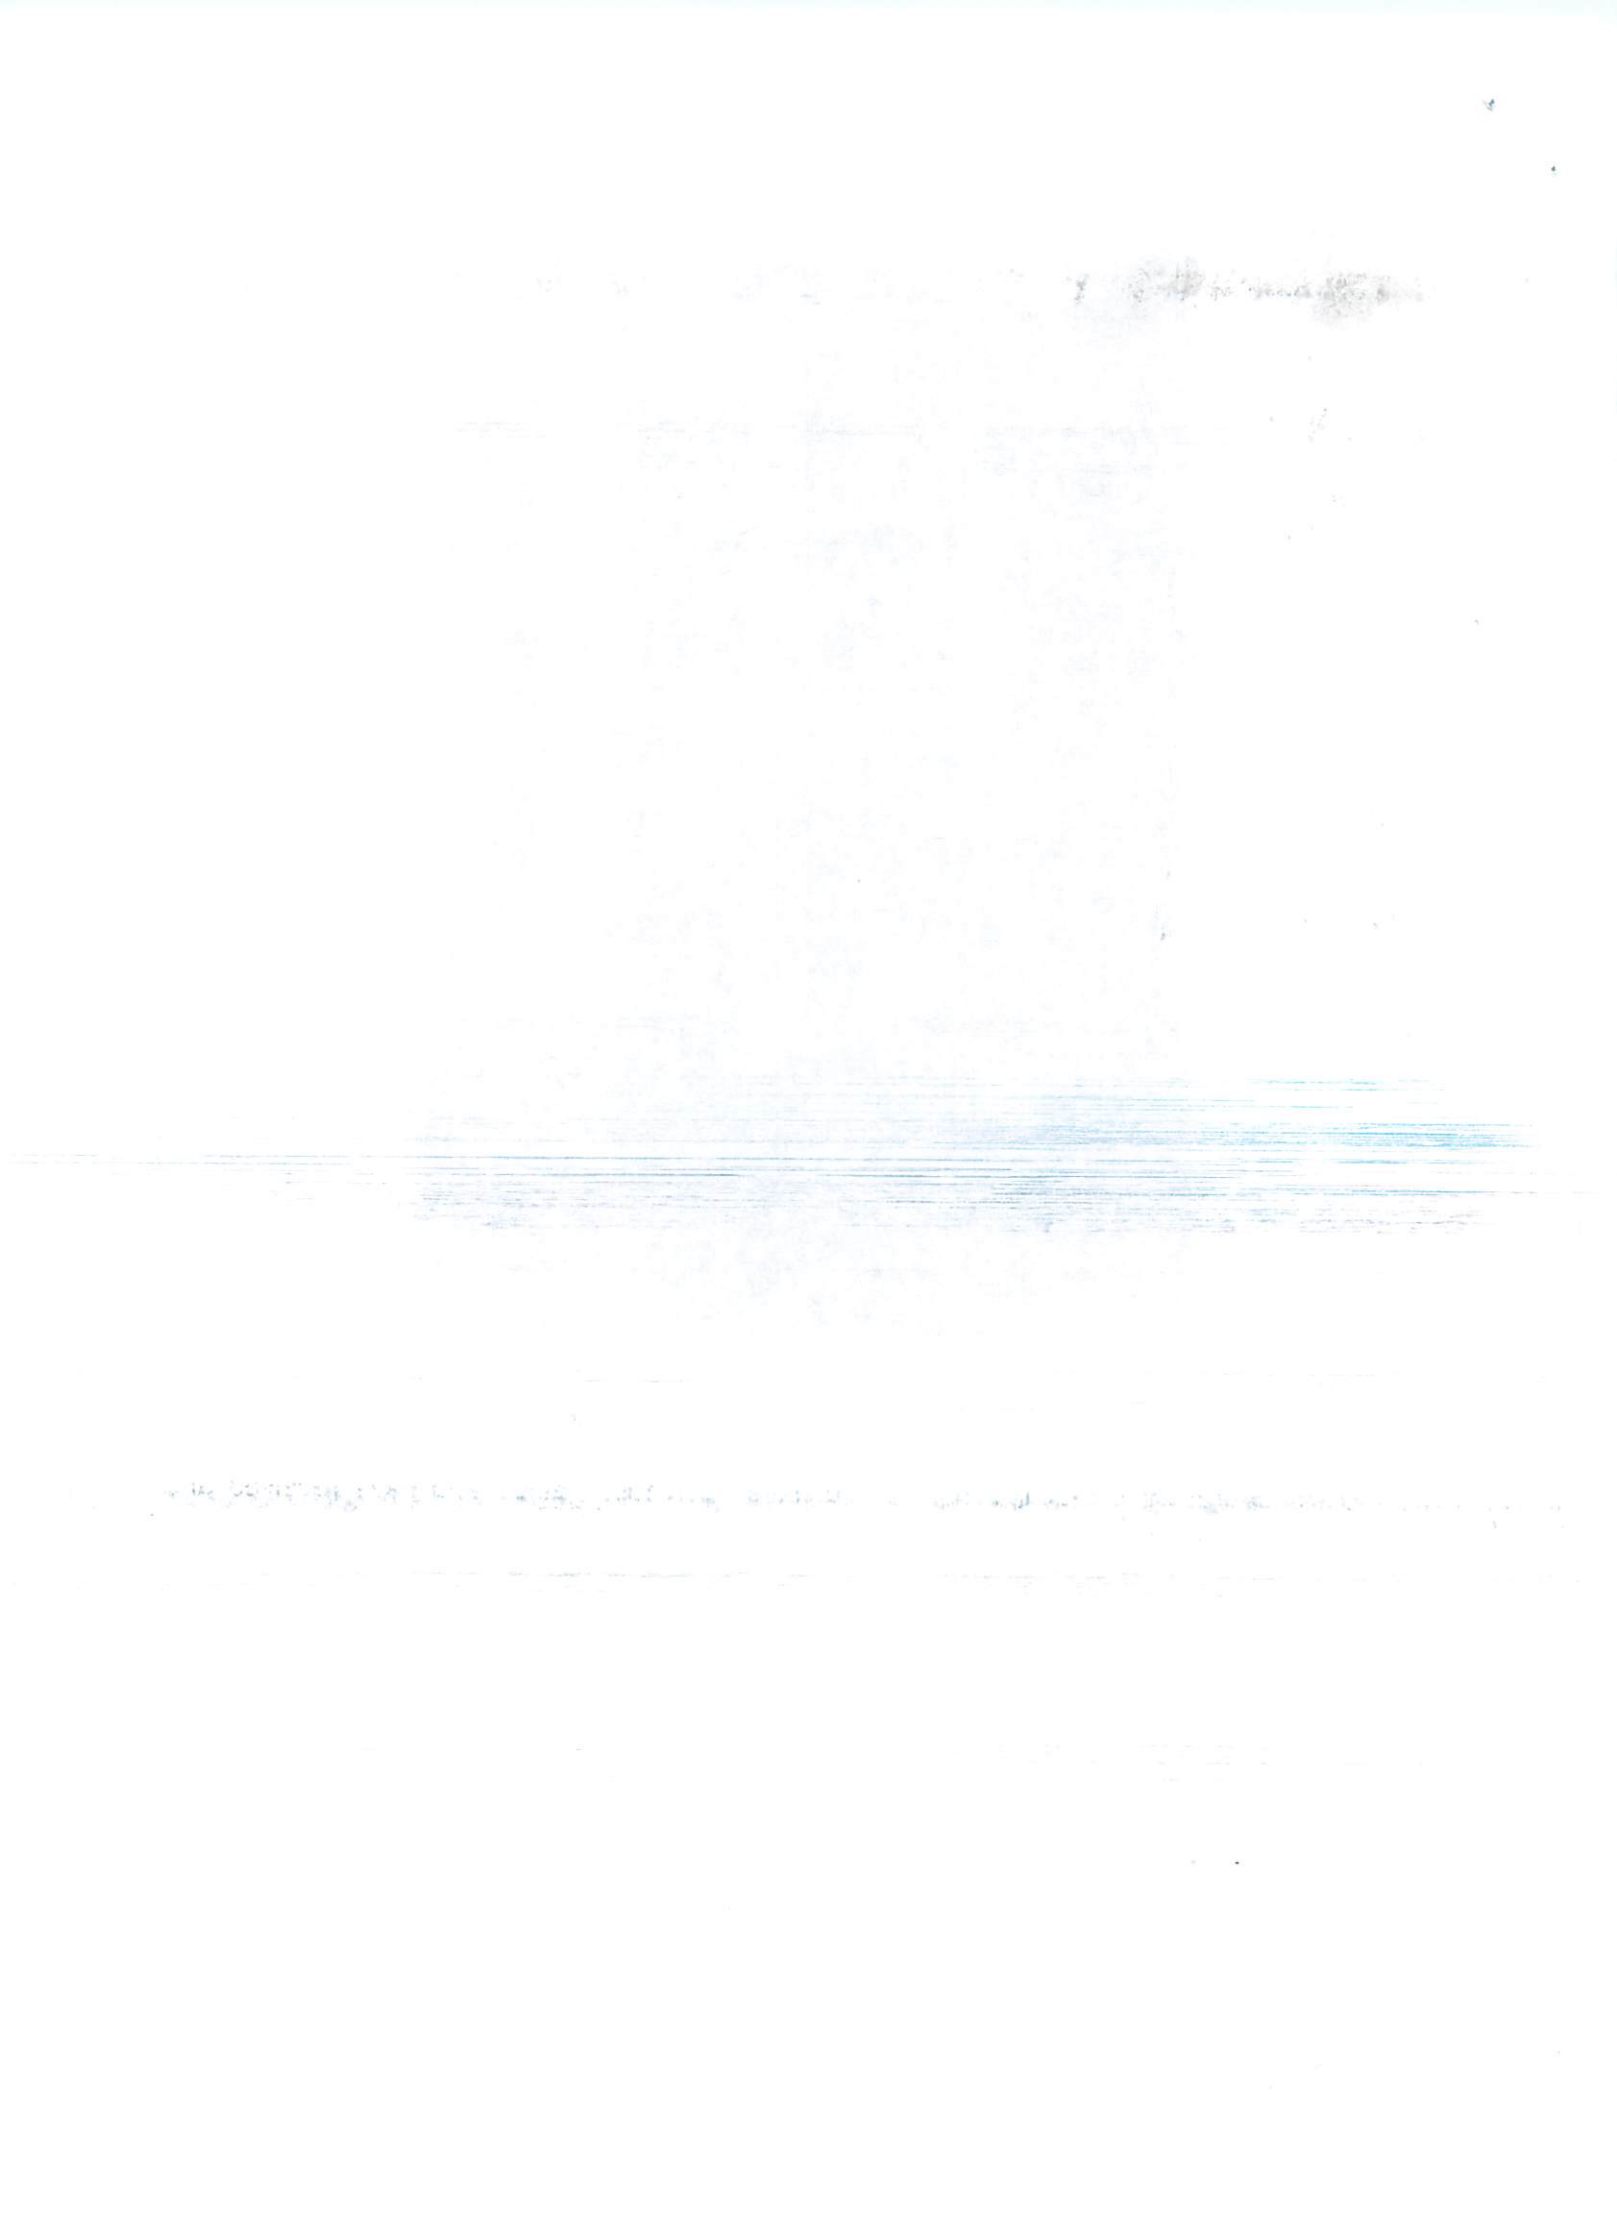


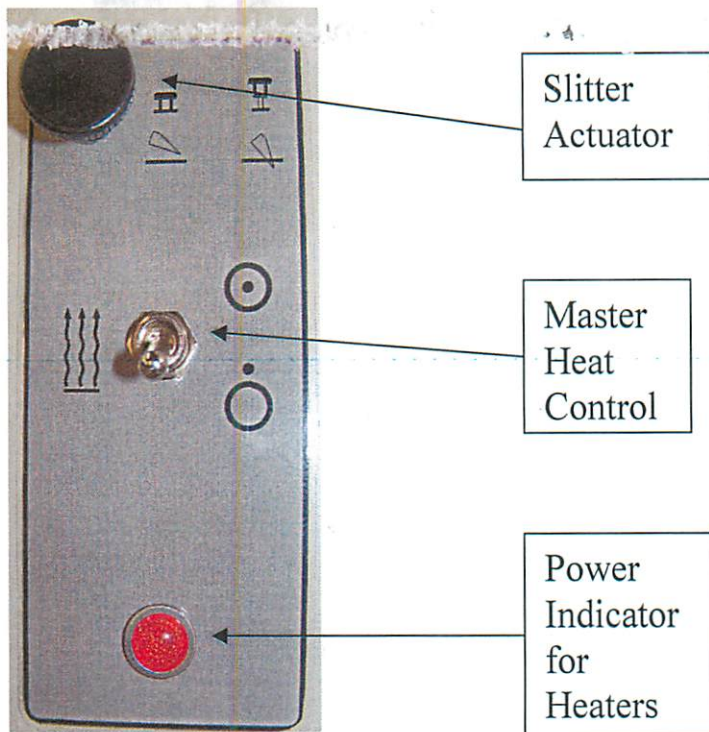

4-1 SAFETY PRECAUTION

DO NOT OPERATE THIS MACHINE UNTIL YOU HAVE READ AND FULLY UNDERSTOOD THE FOLLOWING SAFETY PRECAUTIONS.


1. Never operate this machine without reminding yourself that a big laminator is a powerful and potentially dangerous tool. If misused, used carelessly, or used without observing the rules of safe operation, very serious injury can result.
2. Never operate this machine without all guards, housings, safety shields, stop switches or other safety devices in place and fully operational.
3. Never operate this machine unless you have been fully trained and have received and understood all operating instructions. Make sure you know how the machine works and how it is controlled.
4. Never operate this machine if it is not working properly or if you notice any abnormality in its performance.
5. Never tamper with, rewire, or bypass any control or safety device on this machine.
6. Always keep all parts of your body clear of the laminating rollers, pull rollers, and heated surfaces of the laminator when the power is on.
7. Remember that even after the machine has been turned off for some time, the laminator's heated parts, and adjoining parts, can remain hot enough to burn you.
8. Never attempt to clean the heated areas or laminating and pull rollers while the power is on.
9. Never remove the machine housing or attempt any kind of maintenance without disconnecting power to the unit.

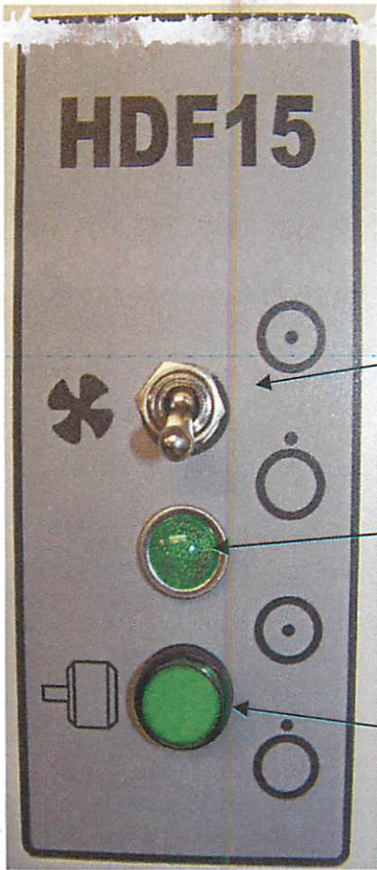

Cooling Fans


Motor on Indicator Light

Drive Motor On/Off

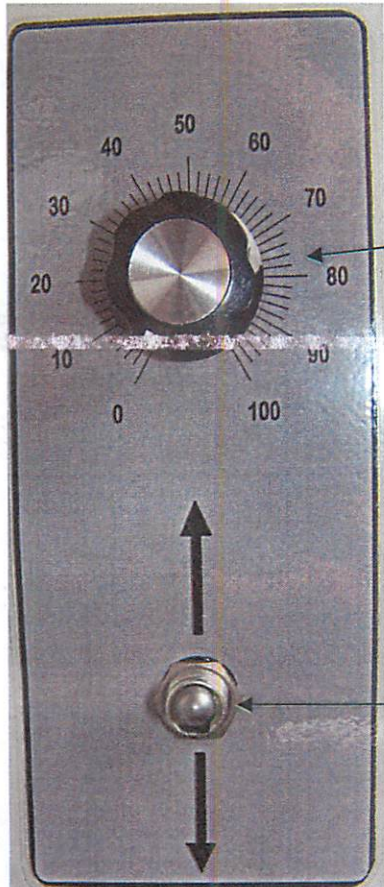

Drive Motor Variable Speed Control

Drive Motor Forward-Reverse

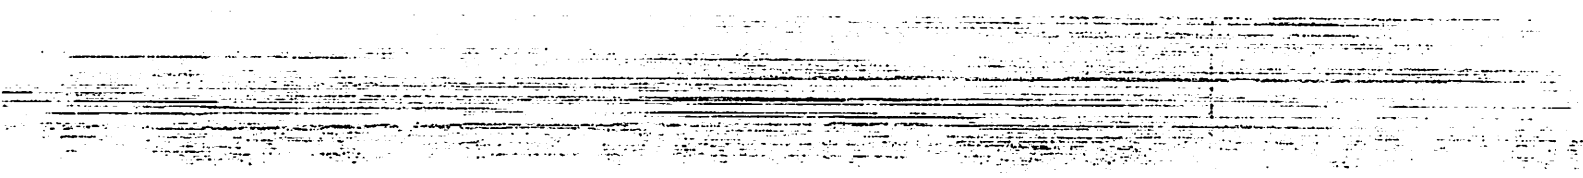

... ..

10. Always be sure all persons are clear of the machine before advancing or reversing the pressure rollers, especially when multiple operators or observers are present.
11. Never wear loose clothing, ties, jewelry or any item, which could be caught in the rollers or machinery when operating the machine. Operators with long hair must put their hair up before running the machine.
12. Always keep your hands clear of any slitter mechanism or blade except when the power is off and you intend to adjust the mechanism or change a blade.
13. Use casters only when the machine needs to be moved because casters raise the center of gravity and increase the risk of tipping. Use a minimum of two people. Move slowly and avoid any obstructions. Remove the casters when the machine is in its proper position.

NOTICE TO EMPLOYER: A copy of these safety precautions must be given to all operators, set-up personnel, maintenance people, and supervisors of this machine. A copy should also be hung on the machine readily accessible and visible to the operator. Additional copies are available upon request.

IMPORTANT: Where a language barrier or insufficient schooling would prevent a person from reading and understanding these safety precautions, you should either translate this information or have it read or interpreted to the person, and get assurance that it is understood.

5-1 SET-UP & OPERATION

With the laminator on an unobstructed, level surface, perform the following checkout before threading the machine with film.

WARNING: Make sure the power cord is clear of the underside of the machine prior to operation to avoid overheating the cord.

MISE EN GARDE: *S'assurer que le cordon d'alimentation ne passe pas sous la machine, ce qui l'exposerait à la chaleur élevée produite par le sabot inférieur.*

ADVERTENCIA: *Antes de operar la máquina, asegúrese que el cordón eléctrico no está debajo de la misma, para evitar el recalentamiento del cordón.*

1. Remove all packing straps, rubber bands, tape, and plastic ties from the machine. Remove the protective paper from the safety shield. Unwrap and put in the feed tray sections. Remove the protective paper from the safety shield. Remove the protective material from the slitter blades. Be careful to keep your hands away from the blades.
2. Make sure the master switch (at the back of the unit next to the power cord), the heat switch, fan switch, and the drive switch are turned off.
3. Connect the machine to a 220V single-phase power source of at least 20 amps.

[The page contains several lines of text that are almost entirely illegible due to extreme horizontal streaking and heavy noise. The text appears to be organized into paragraphs, but the individual words and sentences cannot be discerned.]

4. Turn on the master switch (at the back of the unit next to the power cord). The power indicator on the left front panel should light. Turn the heat power switch to the ON position. Both heat controllers should go on. The upper window of each unit displays actual temperature, the bottom window displays the set temperature.

5. To change the set point temperature to a desired setting appropriate to your film/application, simply depress either up or down arrow button for 3-5 seconds until the bottom window display starts to increase or decrease. Continue depressing the respective arrow till you've reached desired set temperature, then release the arrow button. Wait approximately another 3-5 seconds till the entire display flashes once indicating the parameters are now set and will be held until manually changed again, even if the unit is turned off and on.

The Chromalox heat controllers come set with a 400 degree F high limit. The highest common operating temperature setting for this machine would be 325° F with a standard 1.5 mil film. For the vast majority of applications, the temperature should never be set higher than 300° F. For 3 to 10 mil low-temperature films, the temperature would be in the 200-260° F range.

6. Turn the fan switch to the ON position. You should hear the fans begin to operate. Turn the fan switch off.

7. The laminating and pull rollers are shipped in the open position. Turn the two large 3-arm knobs on the right side of the unit counter-clockwise to close the laminating and pull rollers. Open and close both sets of rollers several times. Notice that starting from the "open" position there is first a "closed" position and a "closed & locked" position for laminating.

Both rollers must be in the "closed & locked" position for laminating. Leave the rollers open if you are not going to thread the machine now. Always shut down or ship the machine with the rollers open. Close the rollers if you are about to thread the machine.

8. Turn the drive direction switch to the FORWARD position and turn the drive power switch on. The pull rollers and the laminating rollers should rotate. Turn the drive power switch off.

Unless you are going to thread the laminator now, make sure all power switches are off, including the master switch on the back of the machine.


[The following text is extremely faint and illegible due to severe scan artifacts and noise. It appears to be a multi-paragraph document with several lines of text per page, but the content cannot be transcribed accurately.]


5-2 Threading the Laminator

1. Although this machine can be threaded cold, most operators feel it's easier to thread while it is warming up or already hot. Remove the supply roll mandrels and the feed tray. The supply roll mandrels are now ready to be loaded with film. The film is usually wound with the adhesive side "out" on the rolls of film.



(There are (2) 3" diameter stop collars included with the machine. These components are designed to help you conveniently align your top and bottom rolls of film.)

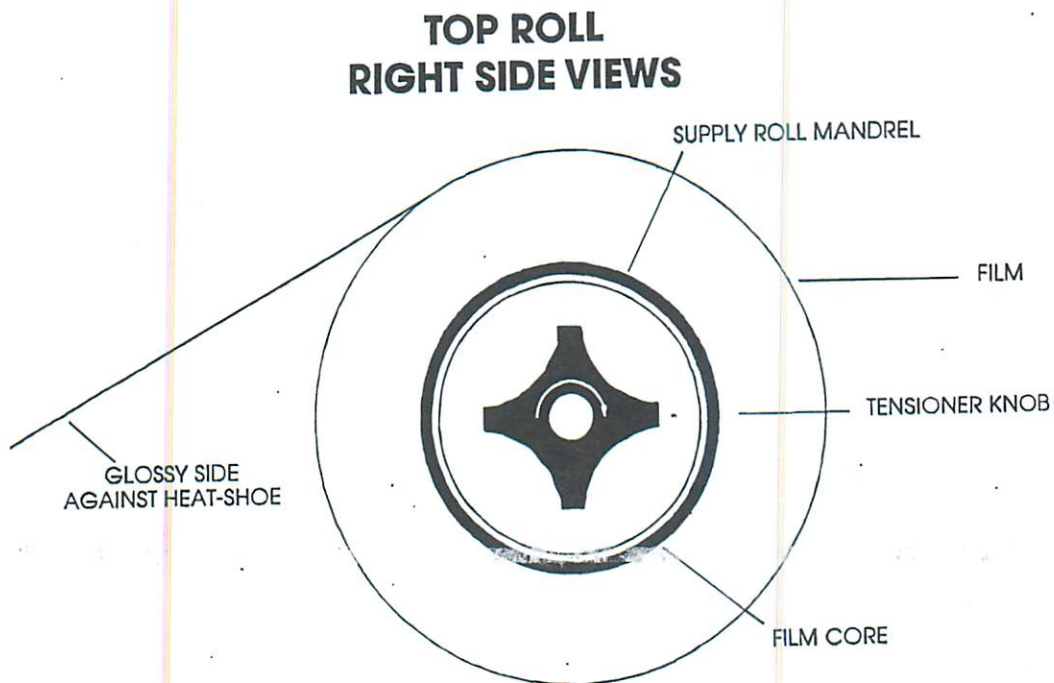

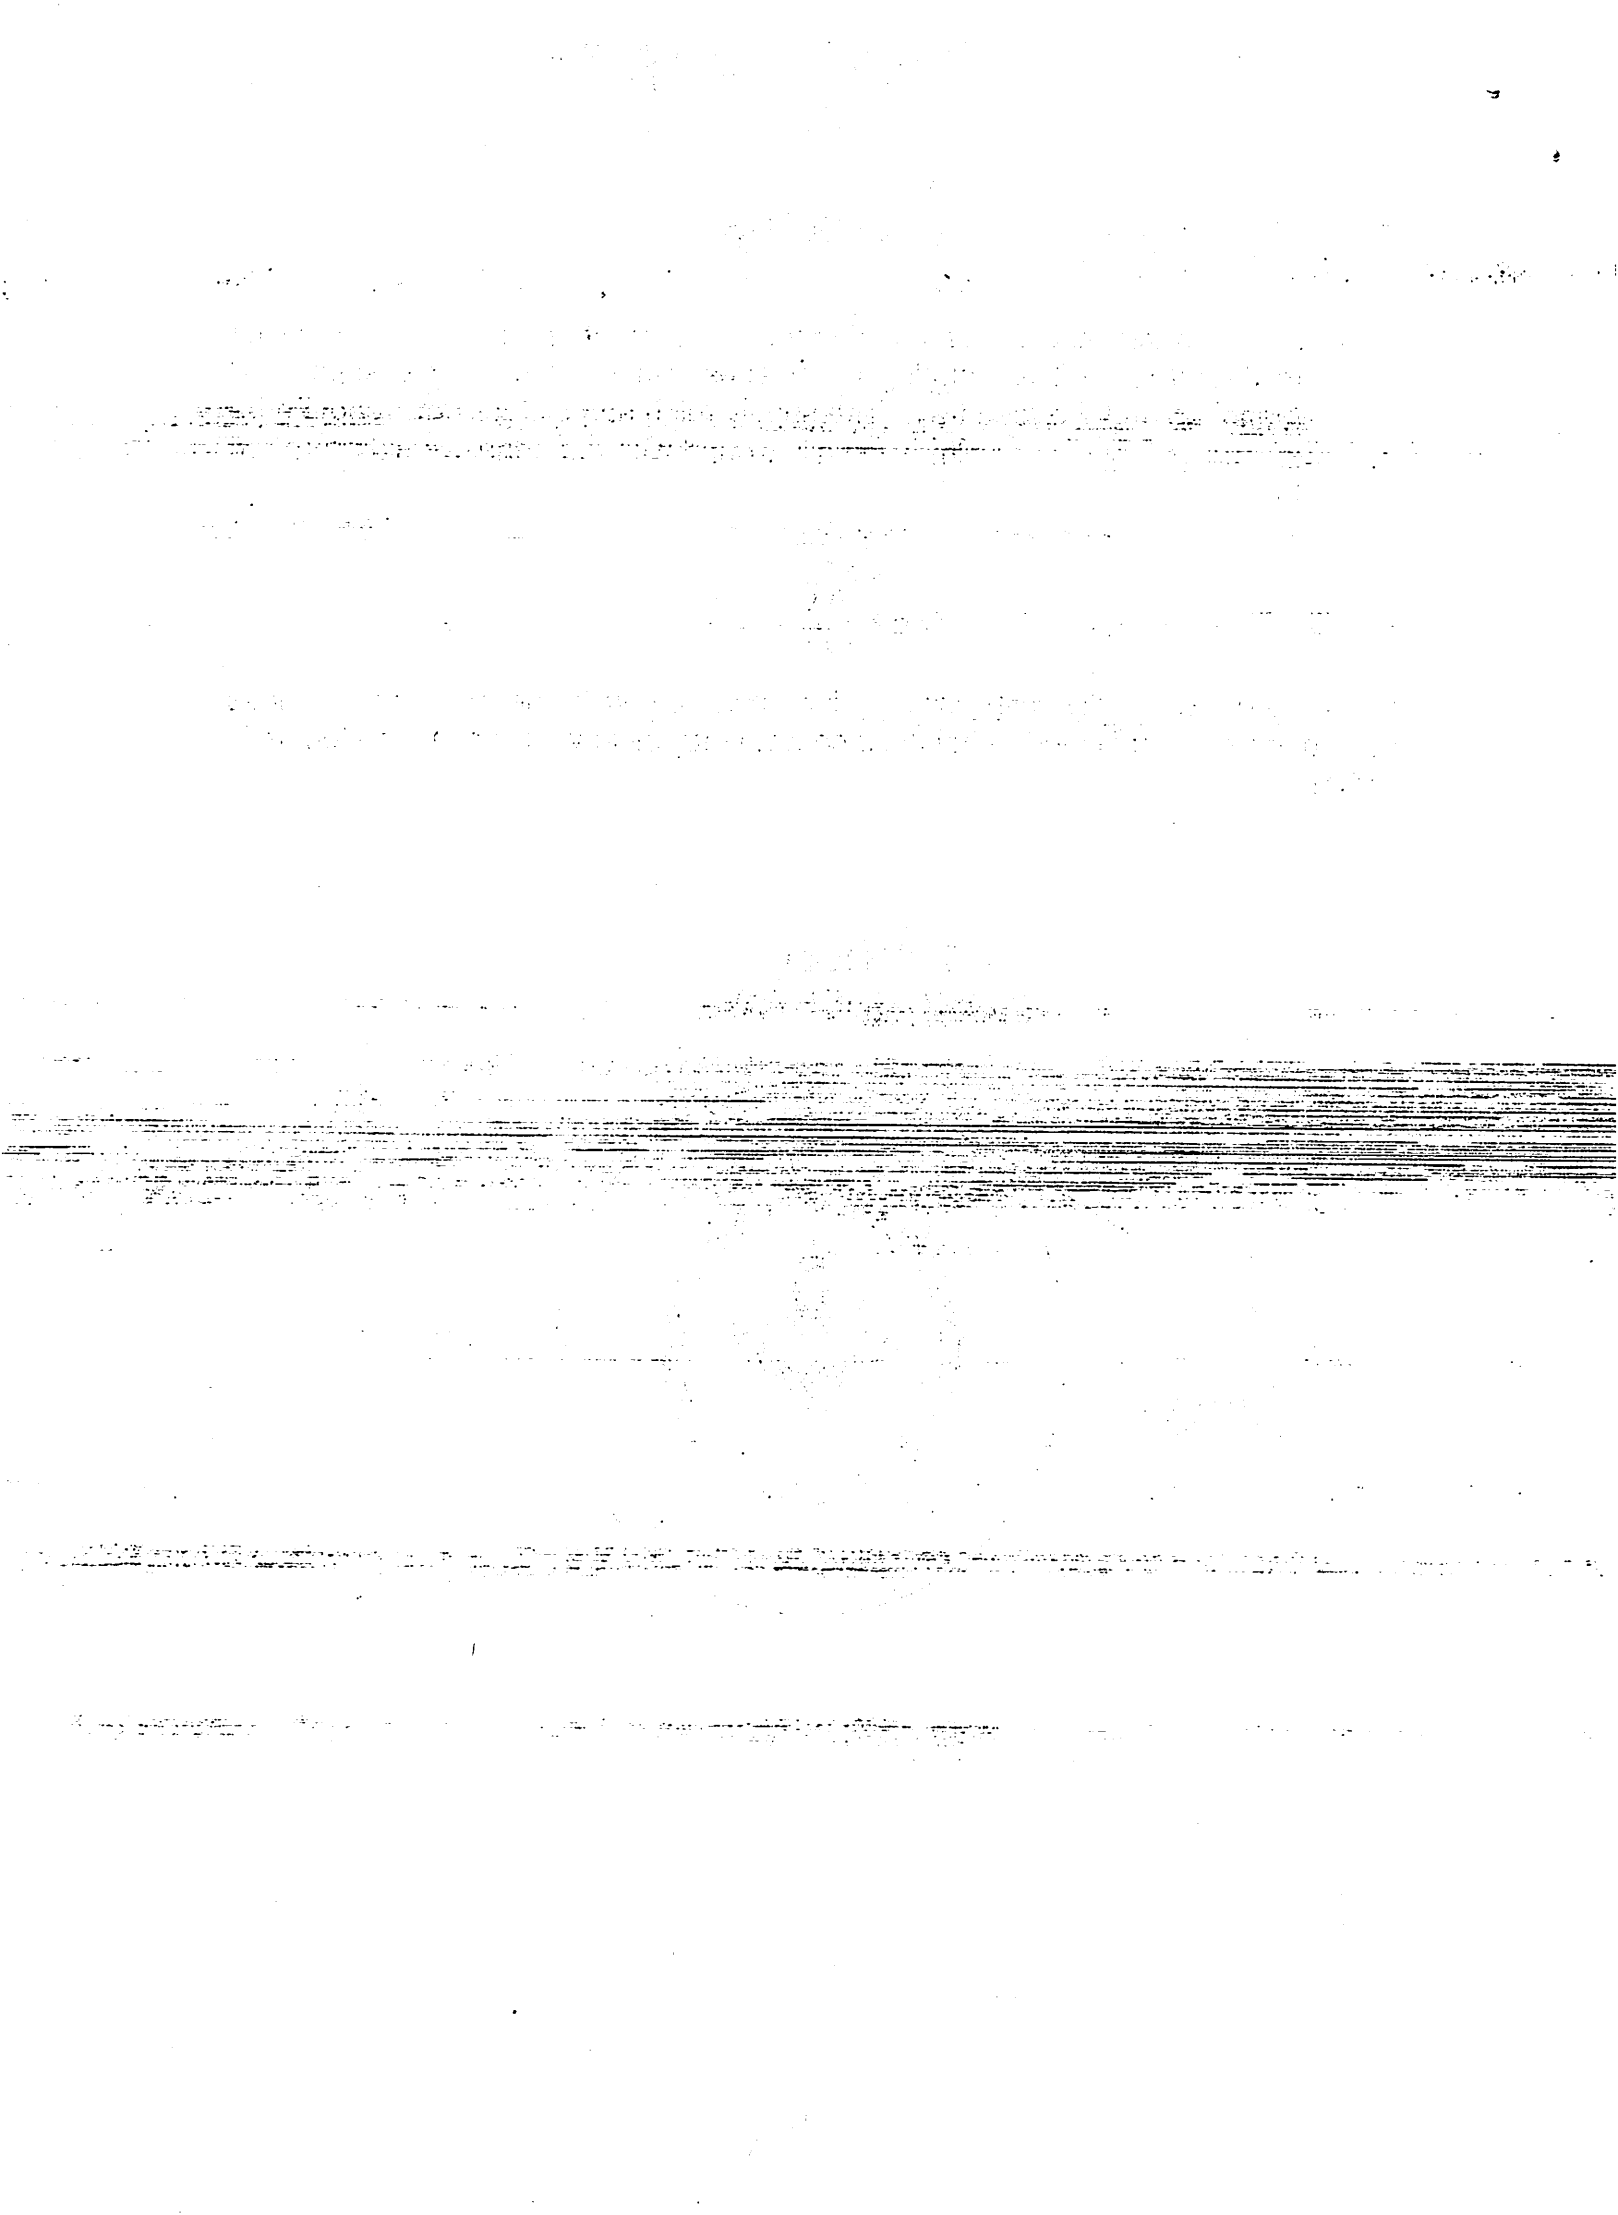


2. Slide a roll of film onto the top supply roll mandrel. Center the roll on the mandrel and place the mandrel in the top bracket. **Make sure the dull side of the film is facing up and the shiny side is facing the heat shoes during the threading.**




3. Review the threading diagram **Remember, the shiny side of the film must always go against the shoe. The dull (adhesive) side must face away from the shoe.**

With the top roll of film centered on the mandrel and the shiny side facing down, pass the film under the lower idler, over the top idler, and then drape it over the top heat shoe. You are now ready to load the bottom supply roll mandrel.

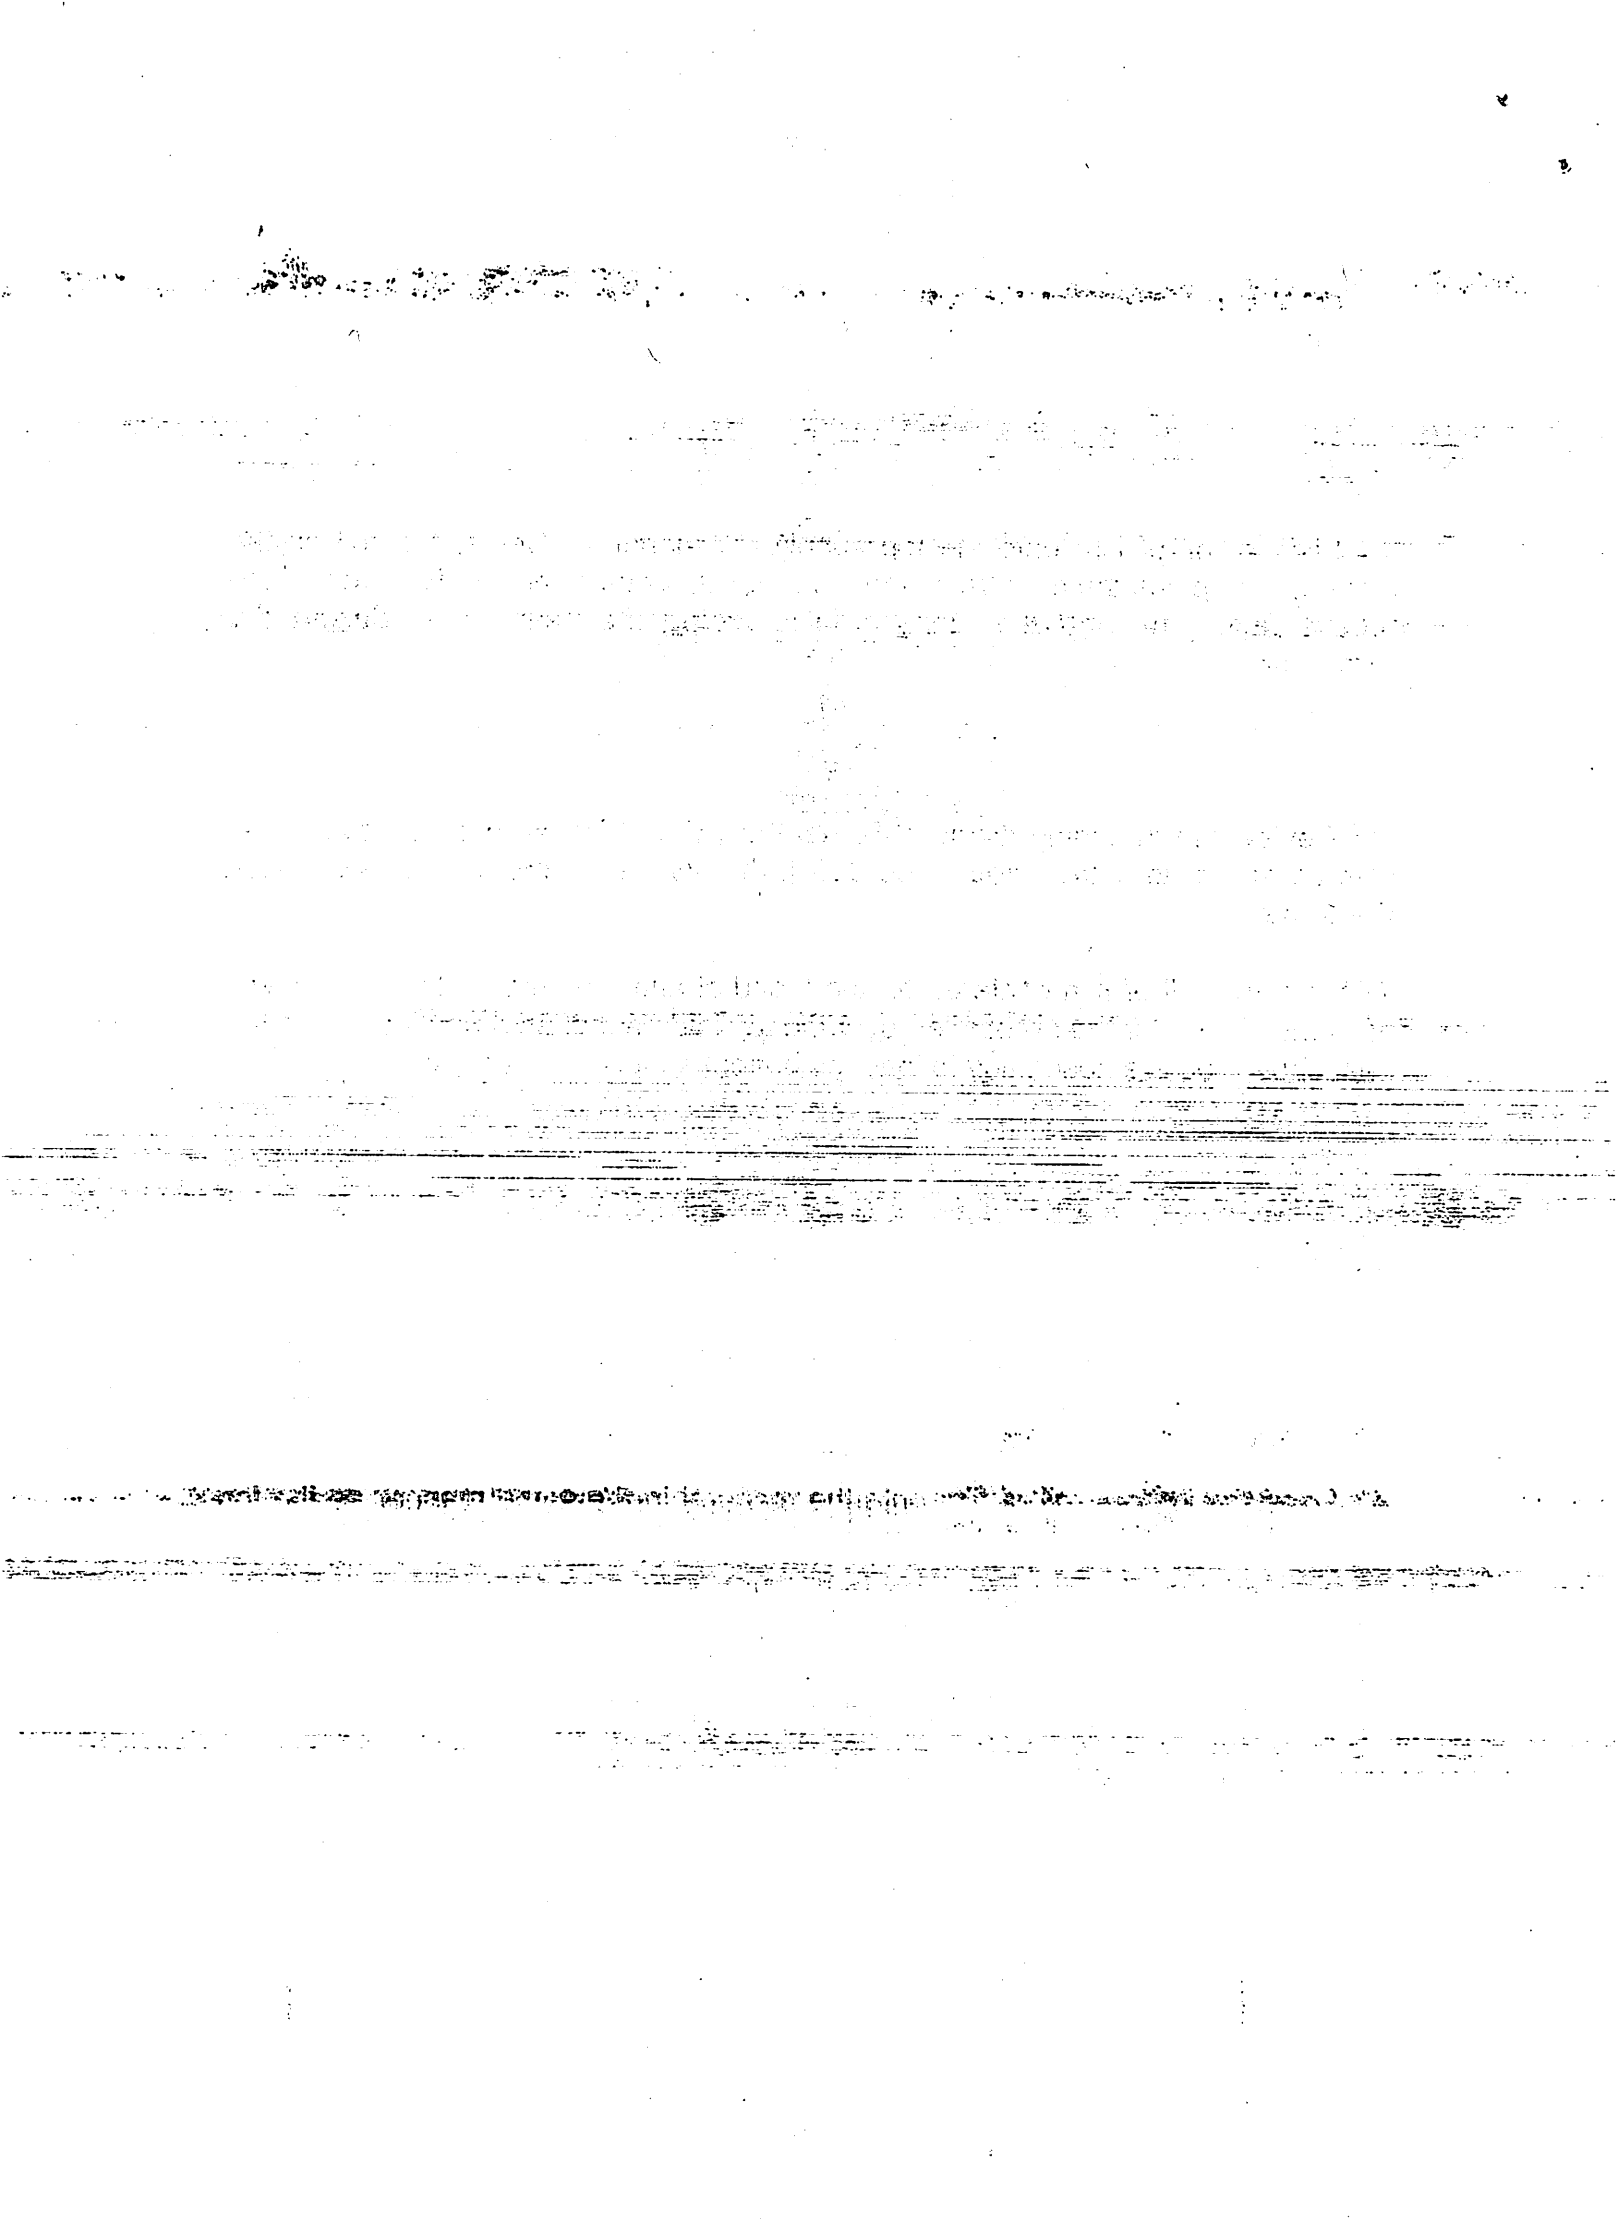


**SHOWS LOADING OF GLOSSY
FILM WHICH HAS BEEN WOUND
"ADHESIVE OUT."**

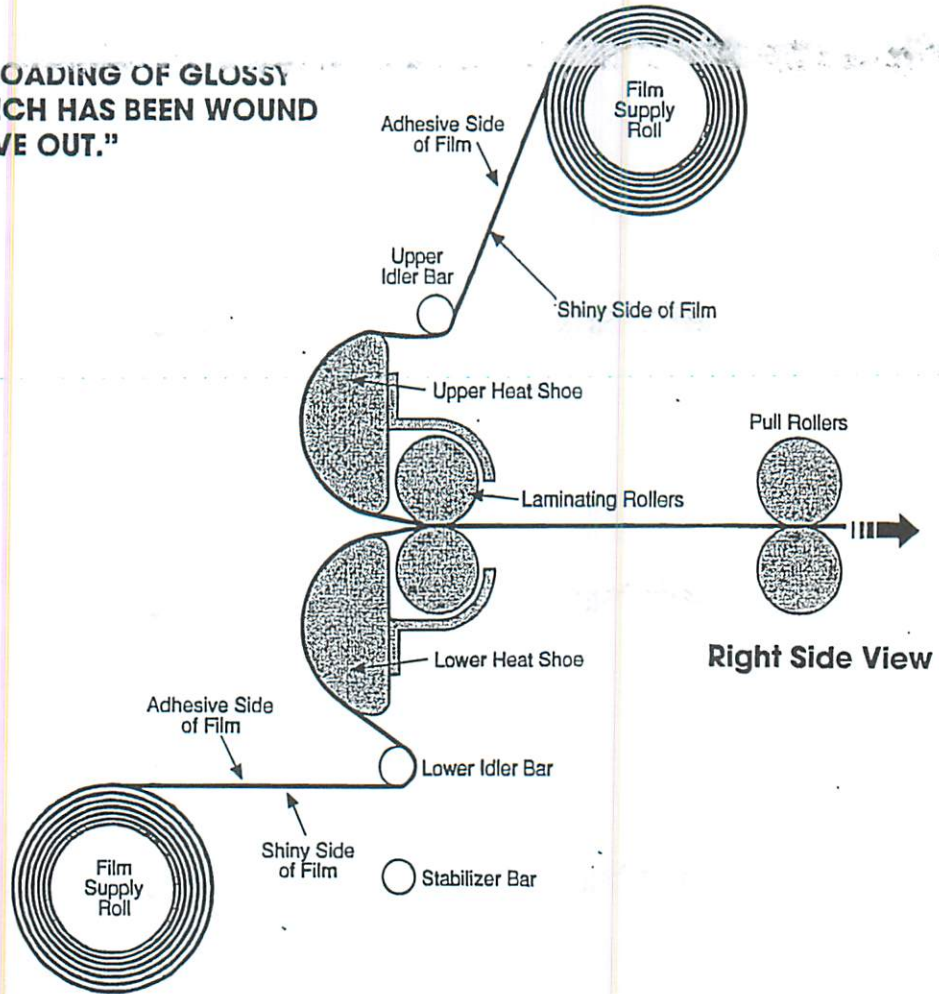

4: Load the bottom roll of film onto the mandrel in the same manner as the top roll. Remember, the **shiny side of the film must always go against the shoe.** The **dull (adhesive) side must face away from the shoe.** Make sure the two rolls are aligned with each other before going to the next step. Pass the web under the idler bar near the bottom heat shoe. Use extreme care if the heat shoe is already heated up. Pull the bottom web up and drape it over the top web. When the machine is hot, the two webs will stick to each other. If threading while cold, use tape to hold the bottom web in place.



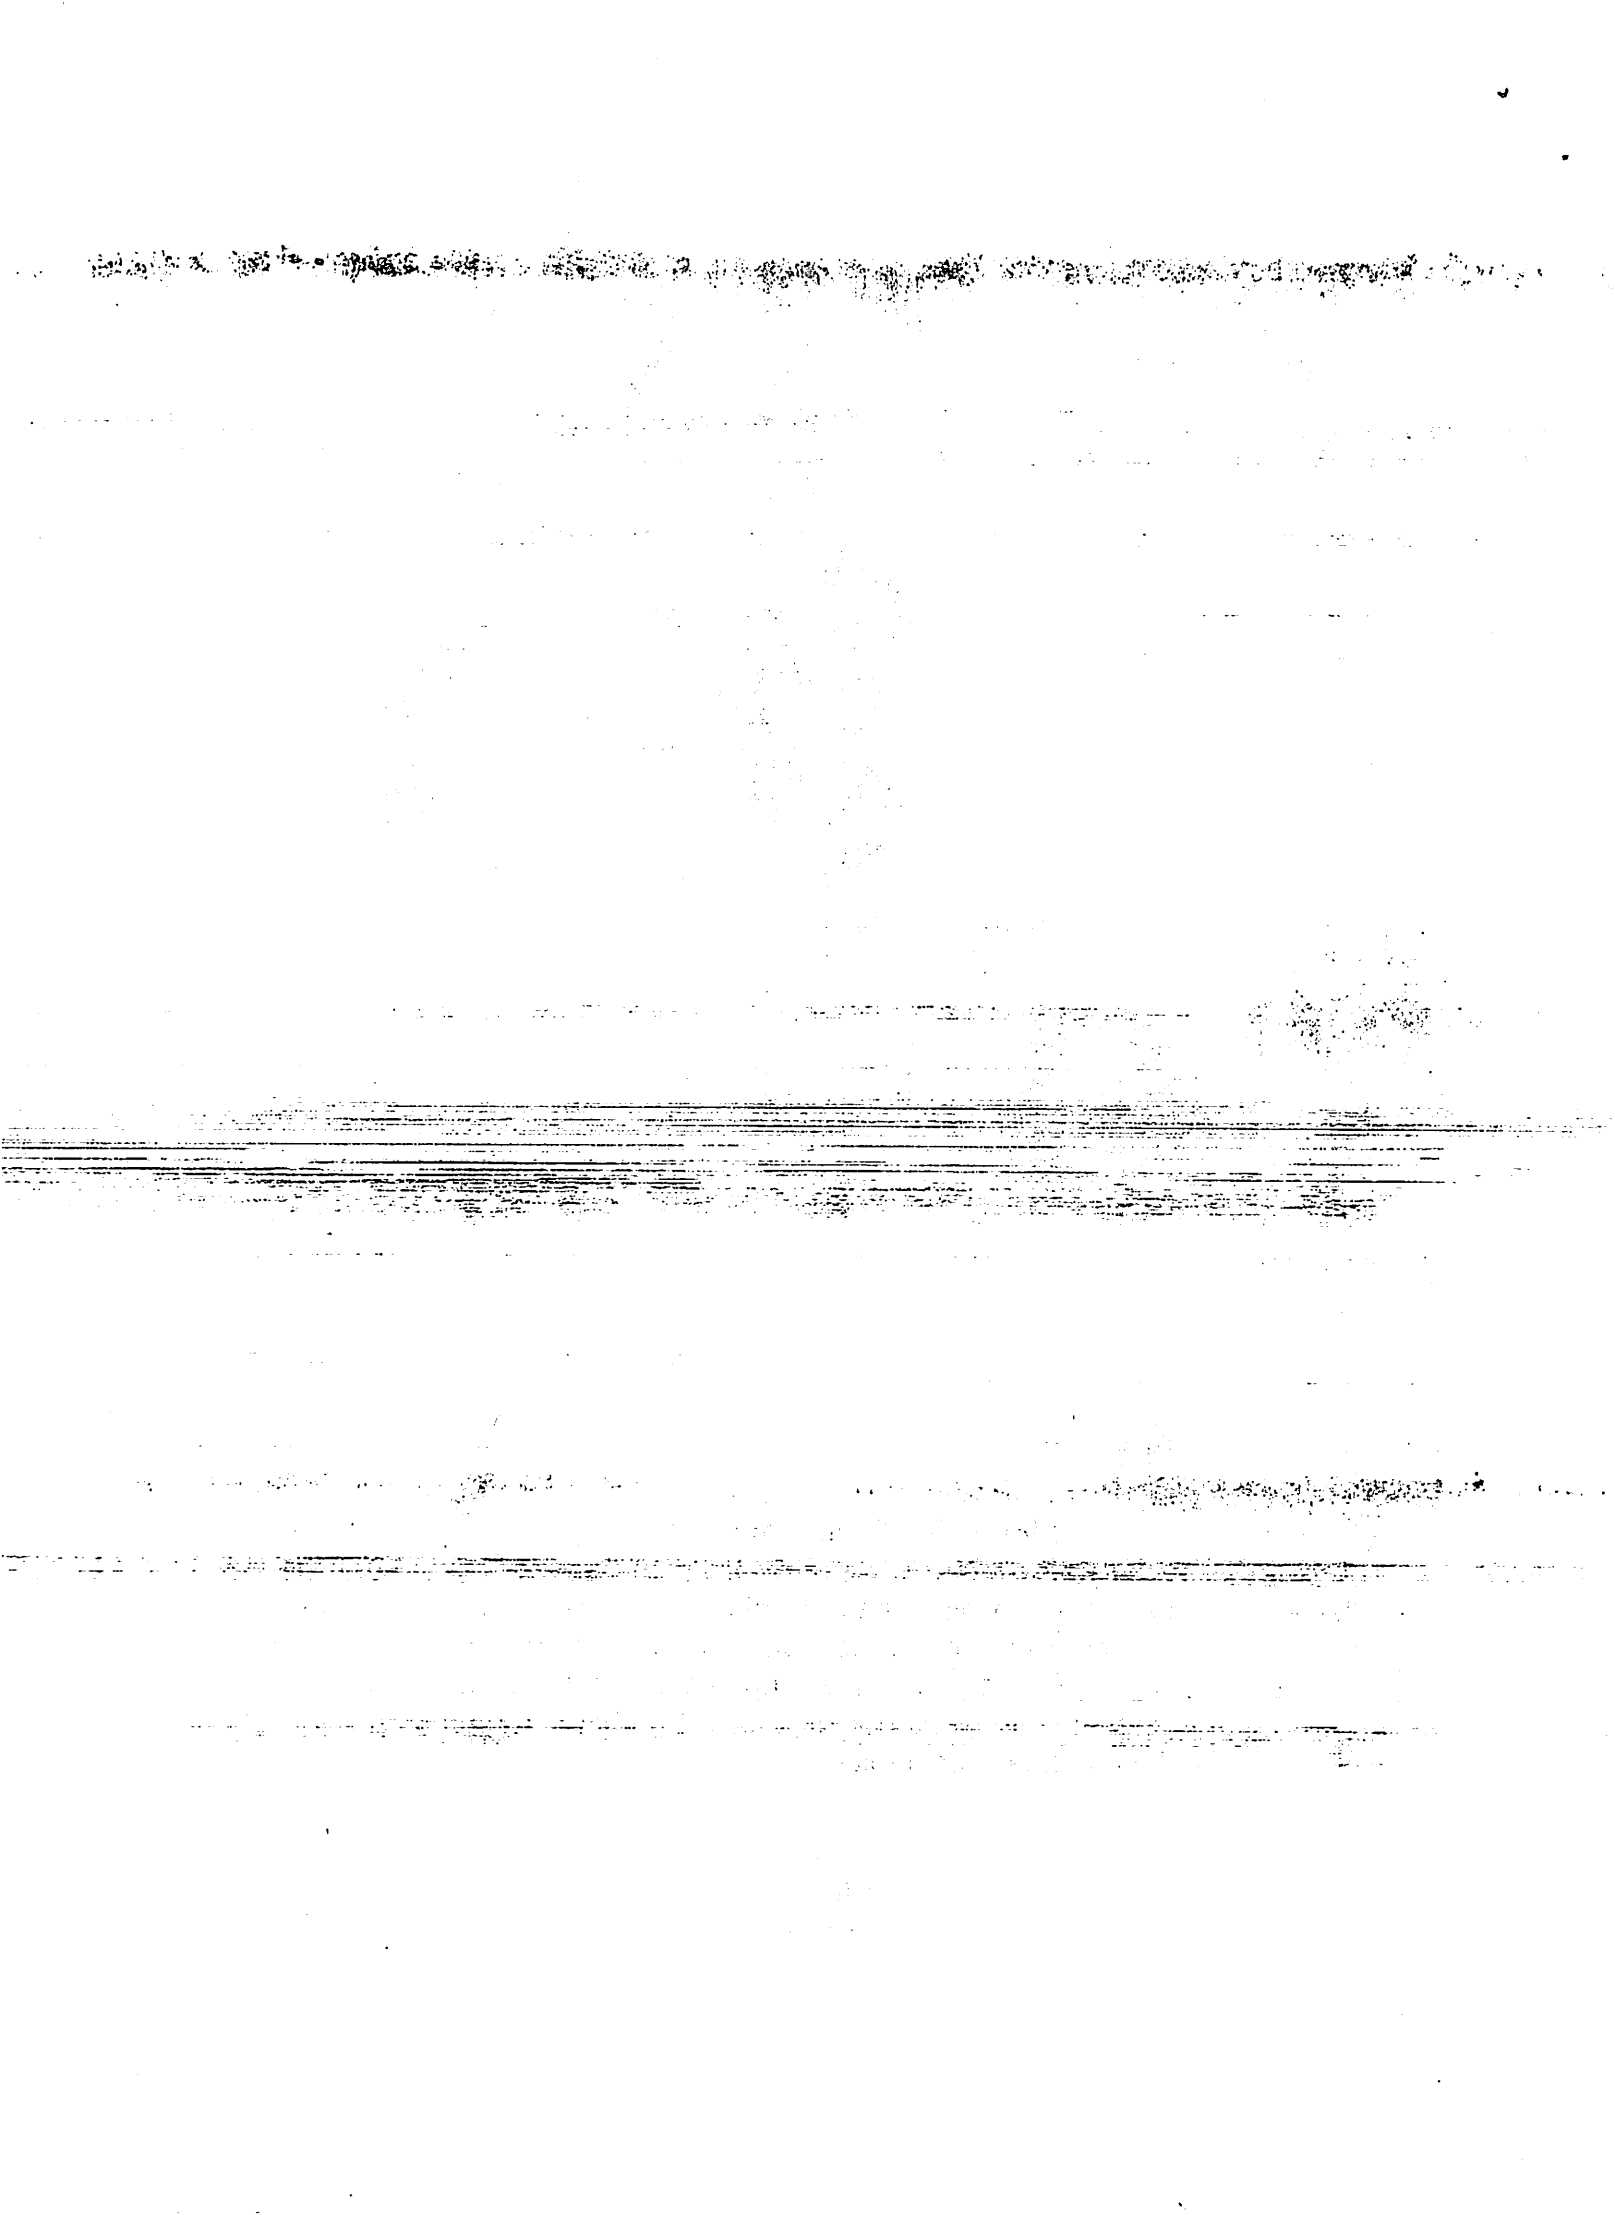


5. With both rolls threaded and installed in their respective brackets, unwind the top and bottom supply rolls about half turn each. This will provide enough slack in the web to allow the feed tray to slide on easily.

6. Slide the feed tray into position. Position the safety shield forward toward the heat shoe. Remember the drive will NOT engage without the feed table and the safety shield in their proper positions.


7. Adjust Feeder side rails to maximum width and place a threading card against each rail. To avoid changing or damaging orange gap adjuster the threading cards should not contact orange gap adjuster.

Orange Gap Adjuster

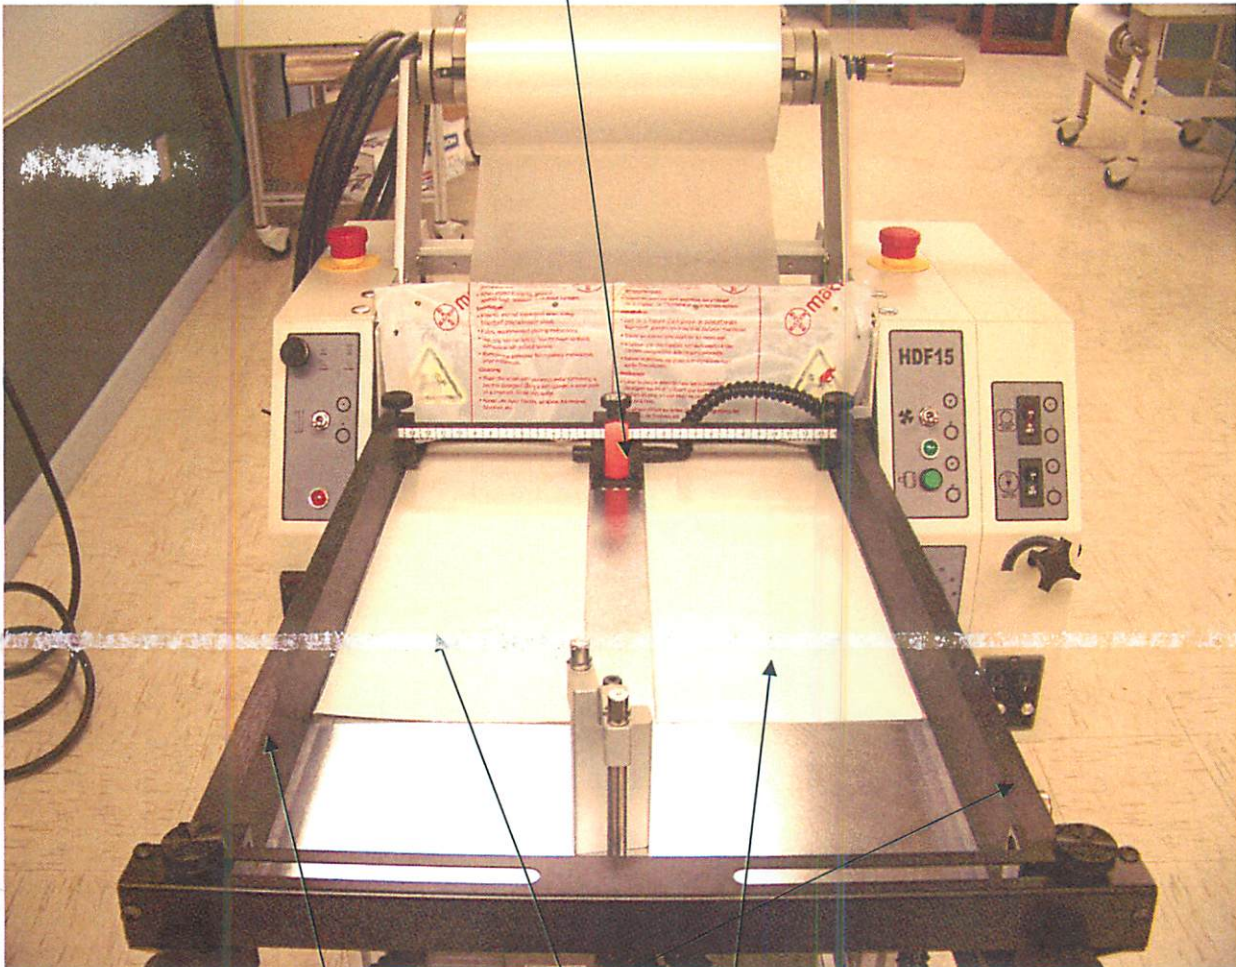


Feeder Side Rails


Threading Cards

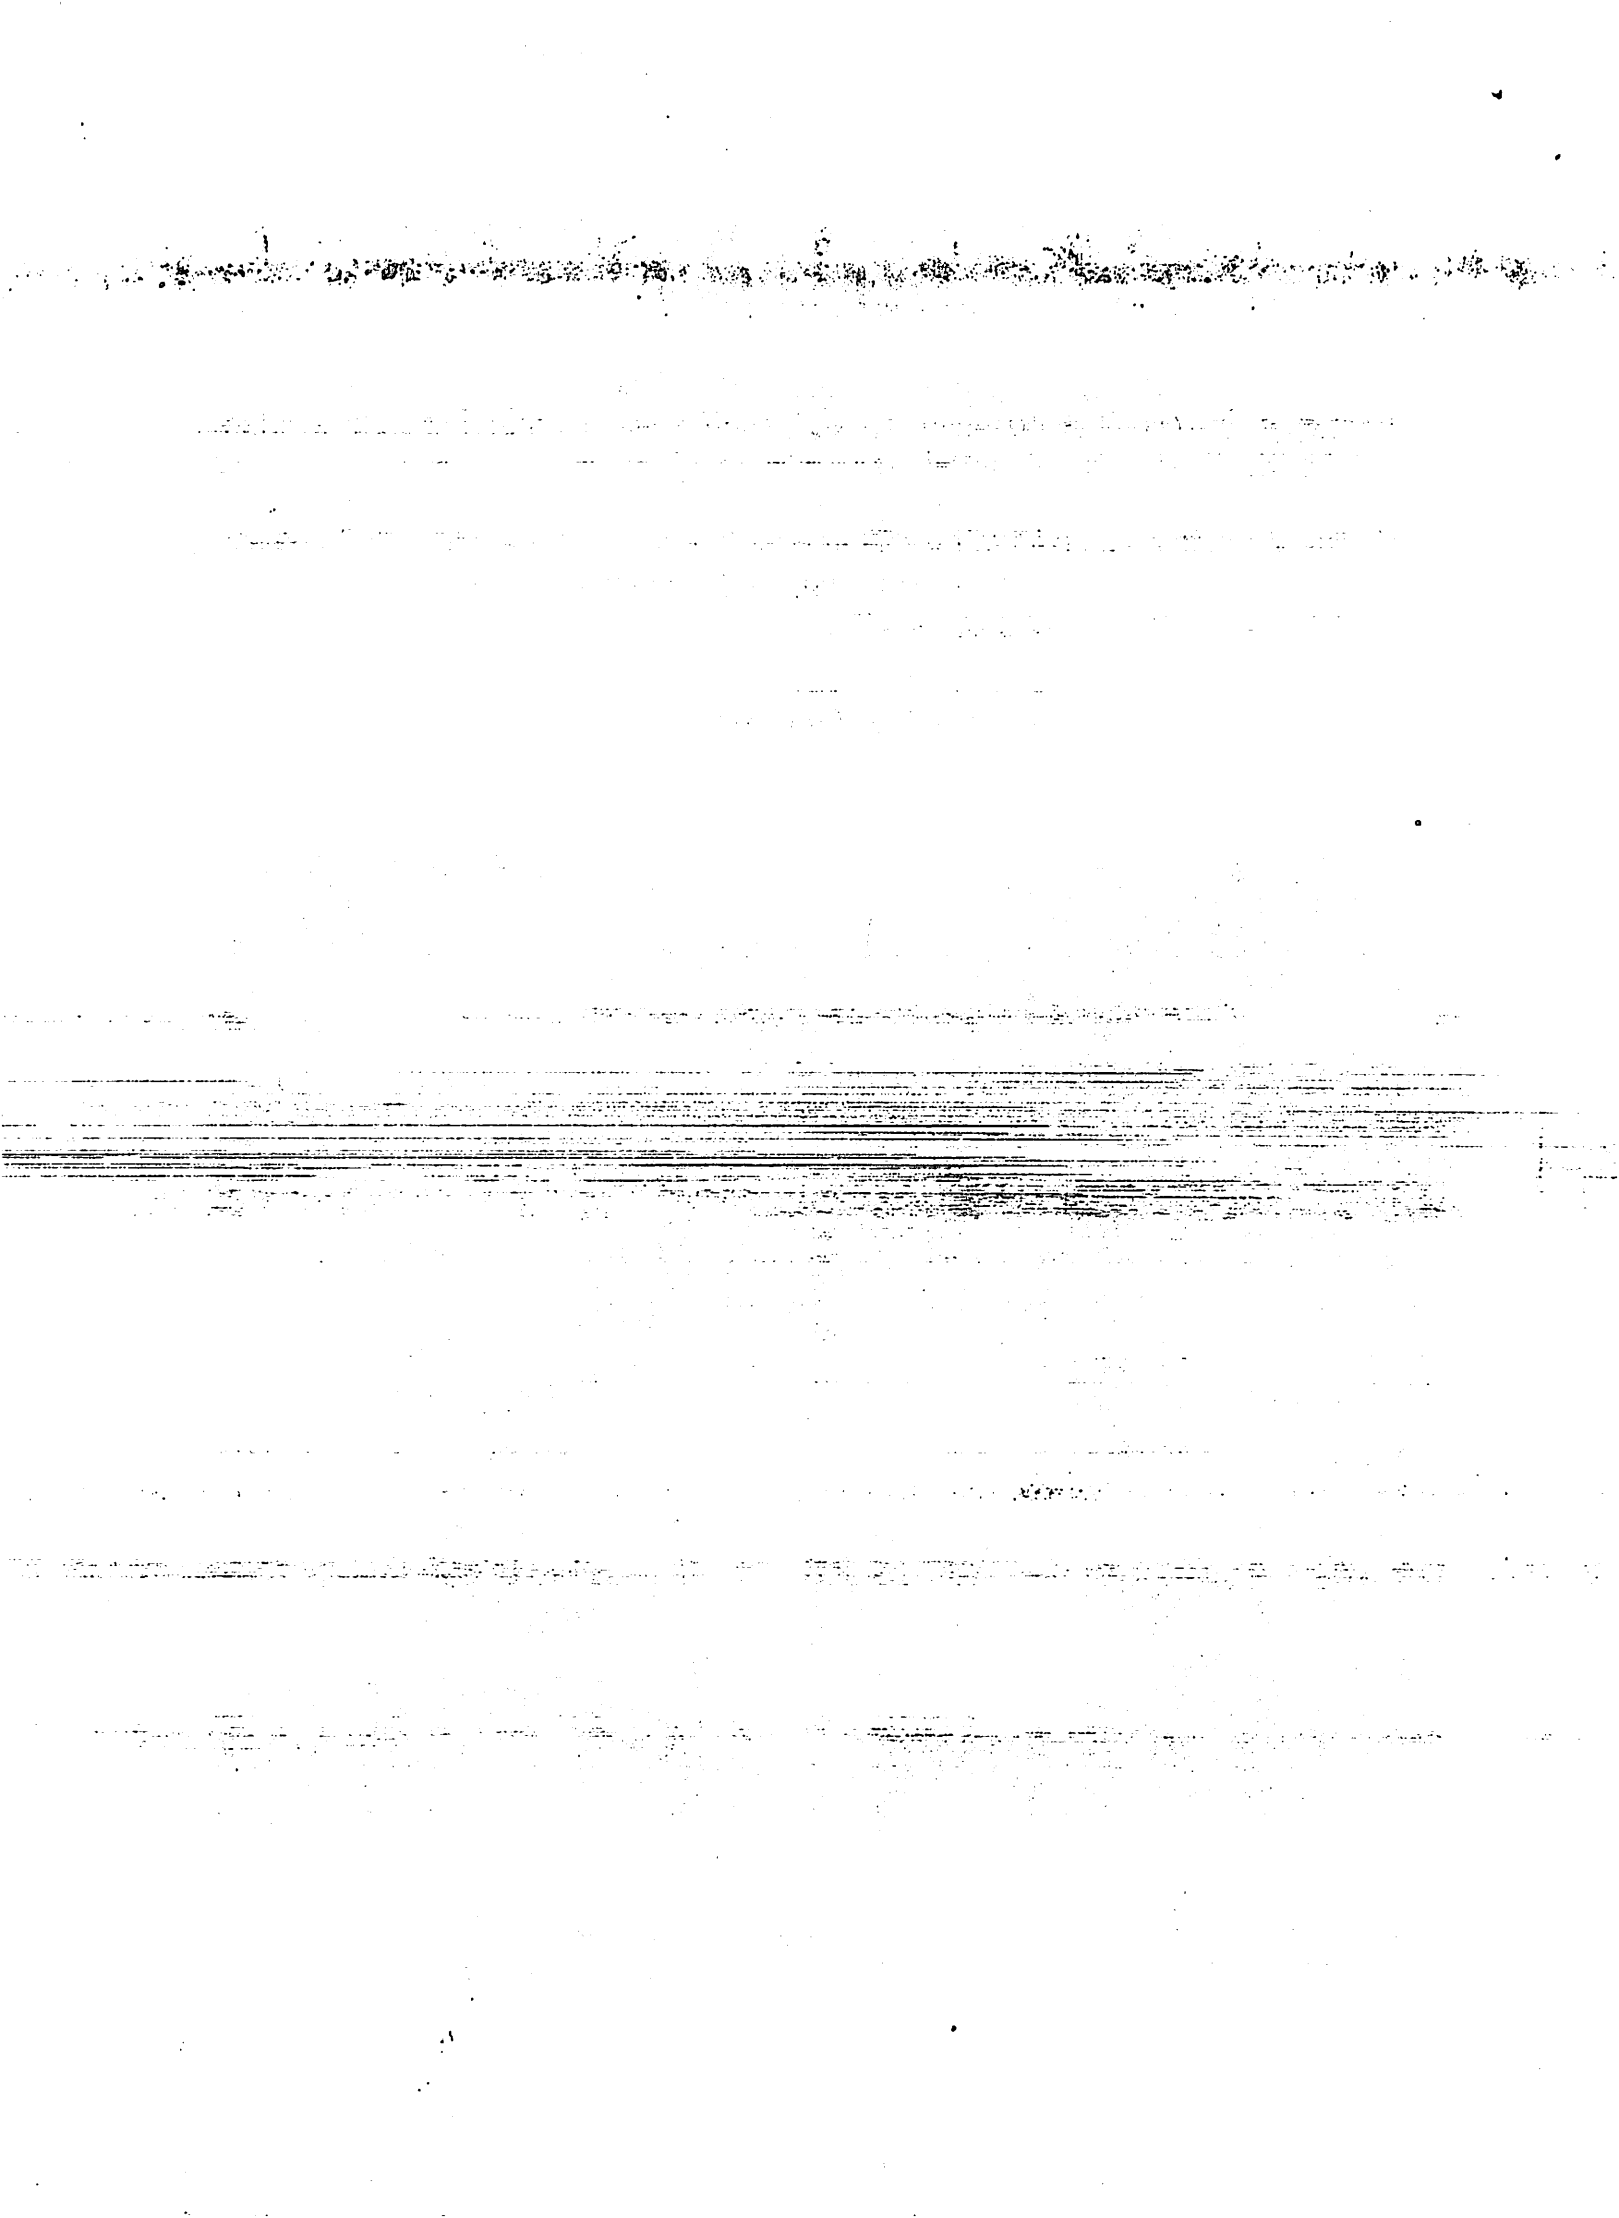

8. Make sure there is still enough slack in the web. Close the laminating rollers with the two large knobs on the right side of the unit. With the film draped over the two heat shoes, and melted or taped together, push one edge of the threading card between the heat shoes so that the film is firmly positioned against the laminating rollers. Make sure the rubber rollers are in the closed position. If threading cards are not available card stock or poster board will work.

9. Push the forward drive switch. If the film and the cards are in the nip (the point where the laminating rollers meet), the film and the threading cards will start into the laminator and will pass through both sets of rubber rollers. When the threading cards have cleared the back of the machine press the STOP switch.

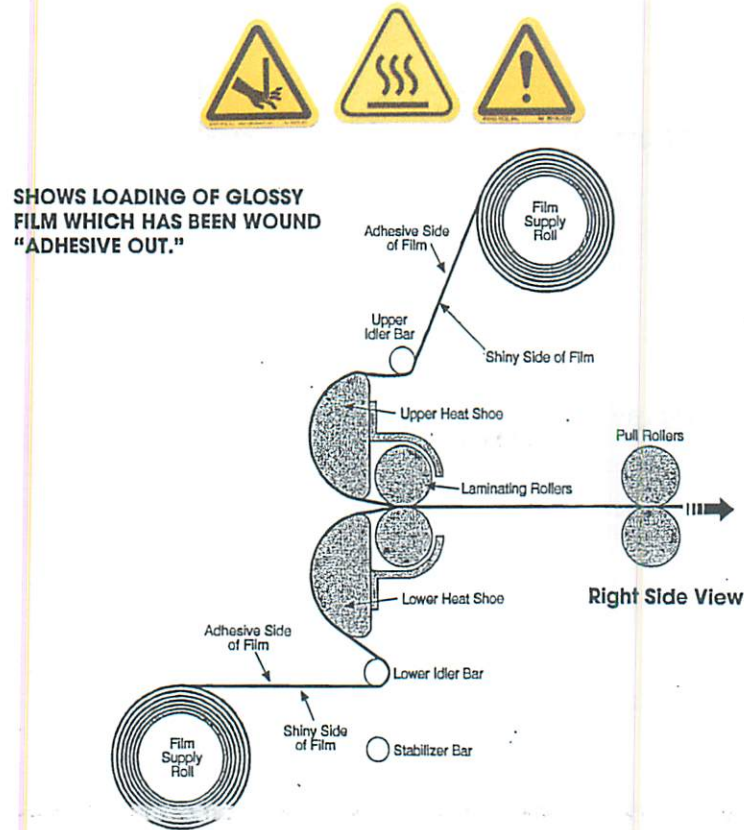

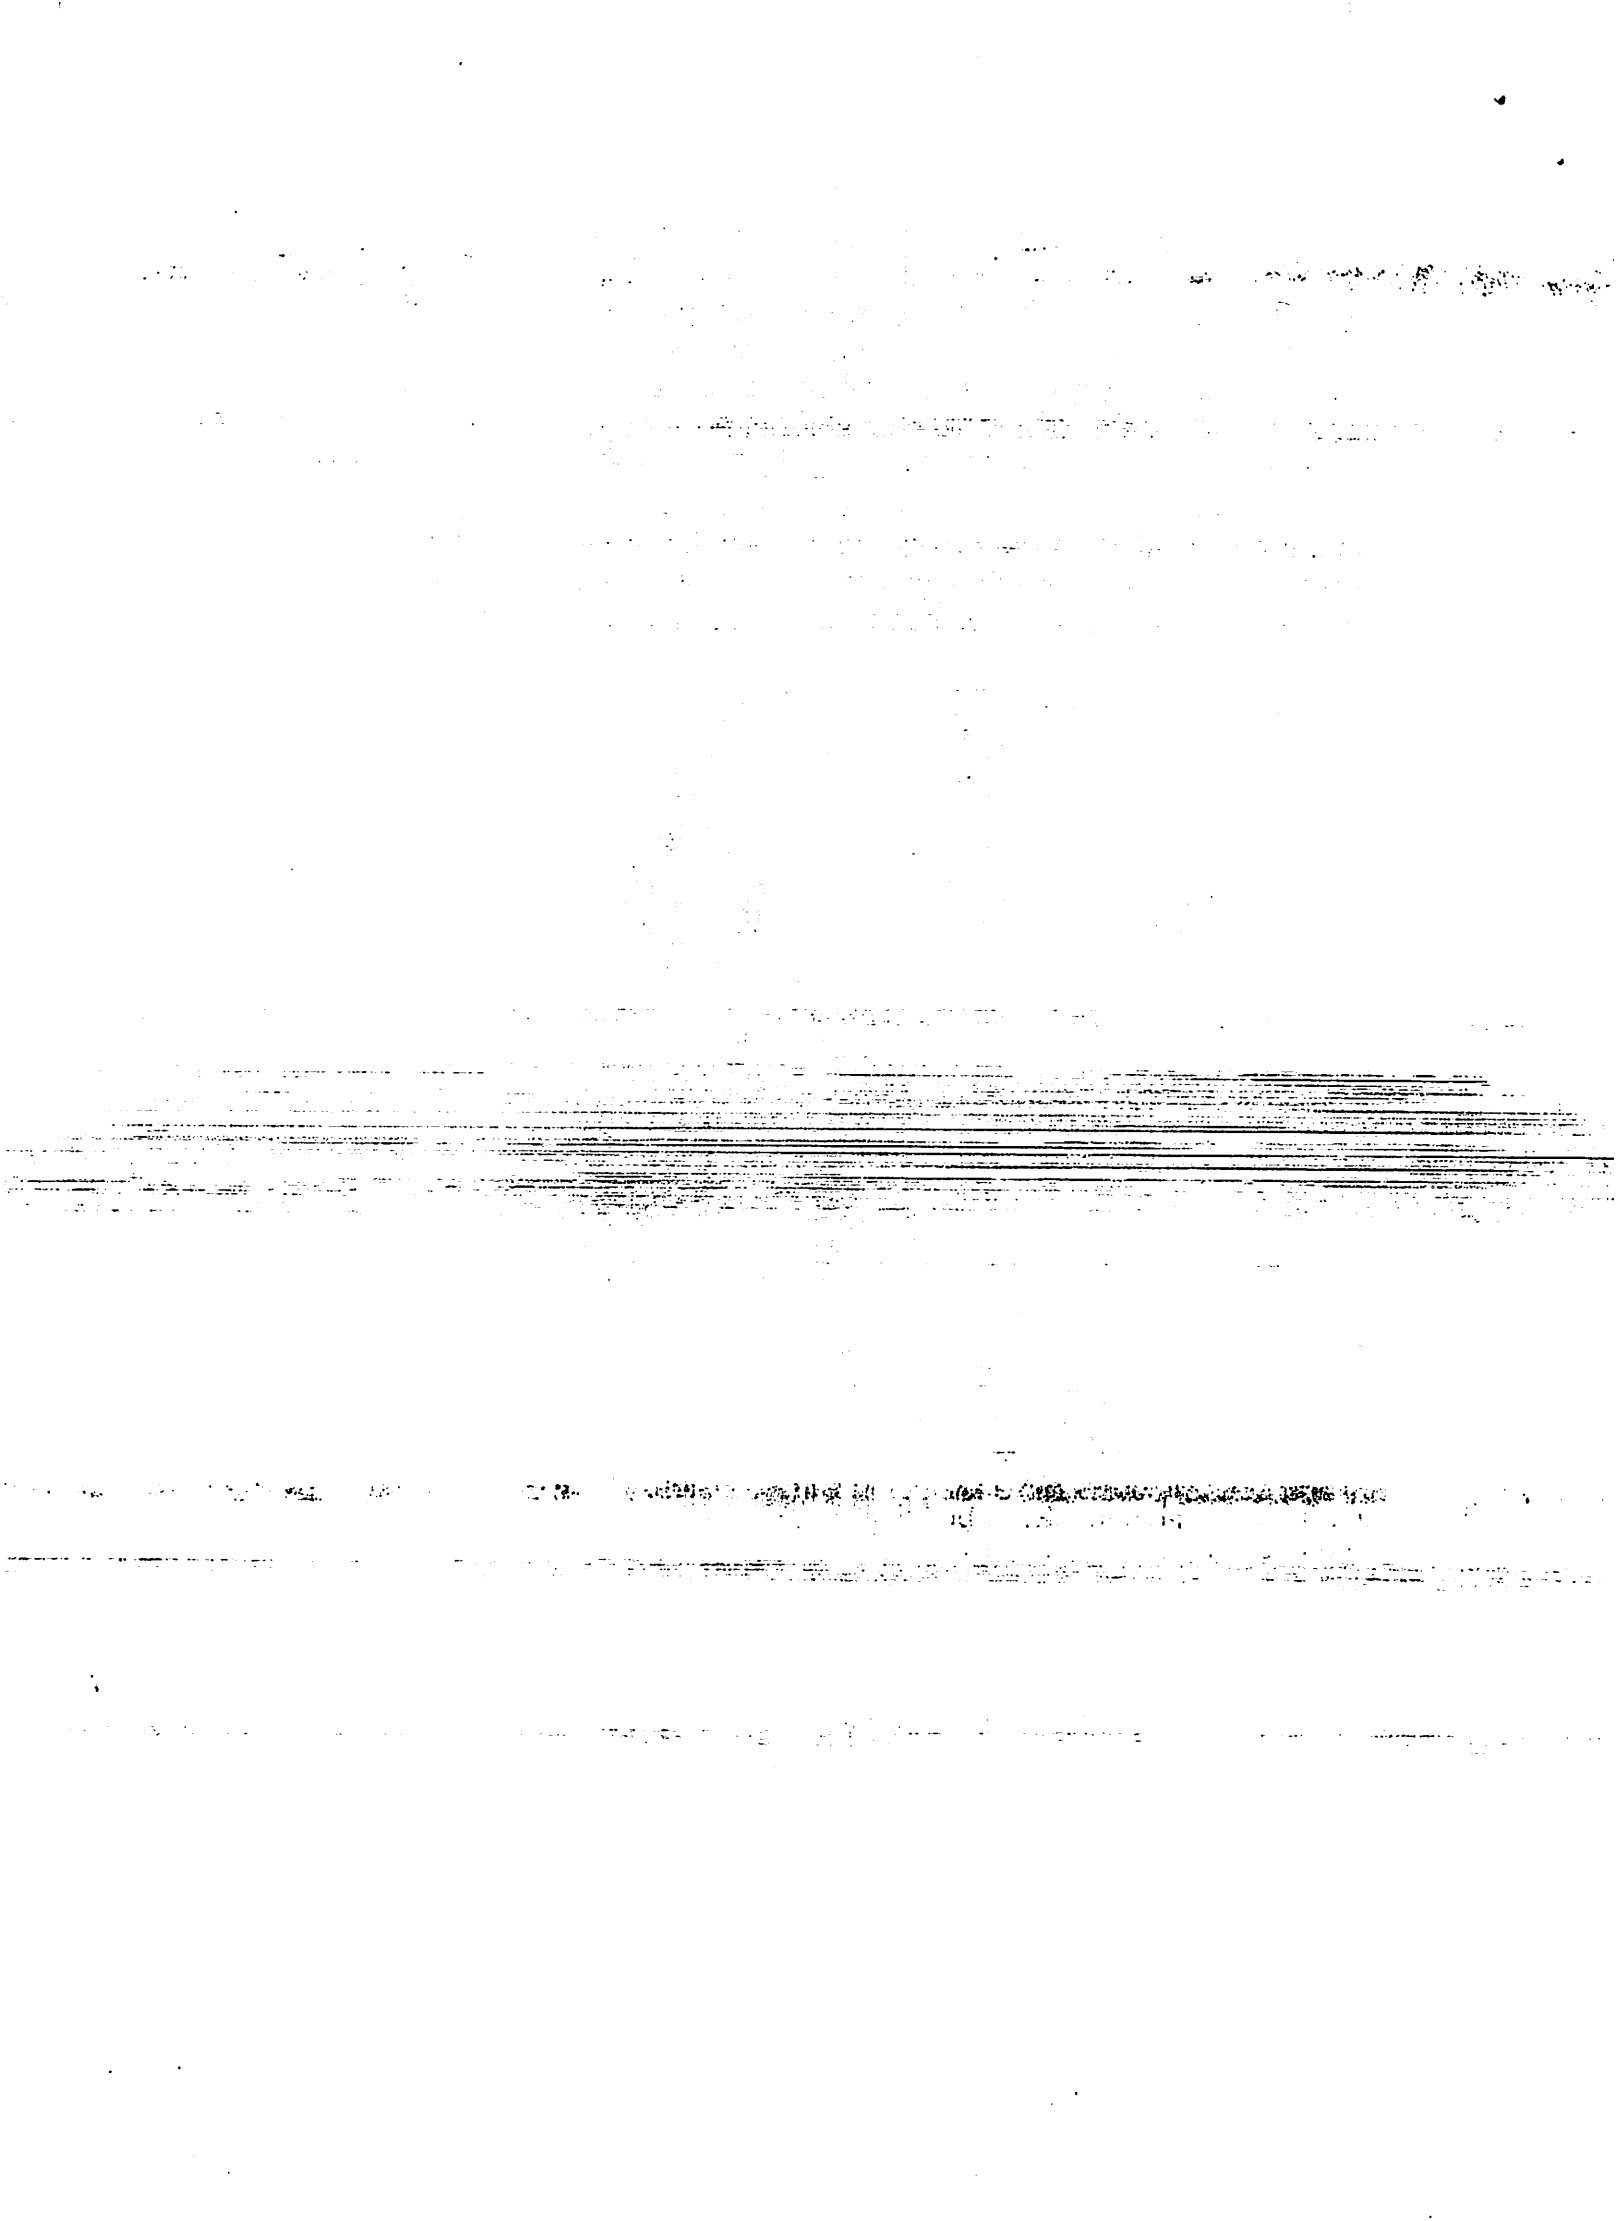

5-3 SUPPLY ROLL TENSION AND OTHER ADJUSTMENTS

1. Now adjust the supply roll tension. First loosen all four supply roll tension knobs, then tighten them (turn clockwise) until they just begin to press on the springs. Another $\frac{1}{4}$ to $\frac{1}{2}$ turns (one turn equals 360 degree rotation of the knob) of tension on all four knobs is usually sufficient for 1.5 or 3 mil film. More tension is required for 3-mil or heavier films. More tension is also required as the width of the film increases.

The best way to do the fine adjustment or readjustment of supply roll tension is to observe the film going over the shoes while the drive is on. Turn on the drive. Both laminating and pull rollers must be closed and locked. Adjust the speed to match the expected lamination work.

If the supply roll tension is too loose, some wrinkles can be observed at the leading edges of both shoes. Lines of air may also be observed between the film and the shoes at the leading edges. The visual effect caused by air between the film and the shoes is known as "waterfalling."

If some wrinkles and/or a waterfalling effect extend about $\frac{1}{3}$ of the way across both shoes from the leading edges toward the trailing edges, the supply roll tension is close to "perfect" for most jobs. (The leading edge of the top shoe is the top edge. The leading edge of the bottom shoe is the bottom edge. The trailing edges of both shoes lead into the "nip", where the two laminating rollers come together.)

If the film is going over both shoes without any wrinkling or waterfalling, supply roll tension is too high. If the wrinkling is extending into the nip, supply roll tension is too low. Supply roll tension is not an absolute adjustment. The acceptable range of tension settings is fairly wide. If little wrinkling or waterfalling is visible on the leading edges, tension could be reduced a little. If the wrinkling or waterfalling is extending to the trailing edges, tension could be increased a little. Make sure that top and bottom rollers have about the same tension.

2. What we call the "drape test" is an effective way to evaluate supply roll tension simply by examining the laminate. Run about two feet of film out the back of the machine. Cut the web of film at the exit point. Hold the two corners of the film on the side where it was cut away from the laminator with the bottom side facing you. Let it drape straight down. If the film hangs perfectly straight and flat, or if there's a small amount of curl in one of the bottom corners, the supply roll tension is set about right.


If the bottom edge is curling toward you, there is too much tension on the bottom roller.

- If the bottom edge is curling away from you, there is too much tension on the top roller.


If the two rollers are rotating in opposite directions, supply roll tension is too high on both top and bottom.

Both novice and experienced operators of laminators tend to use too much supply roll tension. The best amount of supply roll tension is the least amount that will do the job.

3. Stop the machine for approximately fifteen seconds to allow the laminating rollers to leave an indentation on the plastic web, known as a "dwell line". Allow this "dwell line" to pass through the pull rollers, so that it can be observed. The "dwell line" should be approximately 3/8" wide at each edge of the web of plastic and possibly a little narrower in the center. It should look similar to this:



If the laminating rollers are not balanced properly the "dwell line" will look something like this:



Apply additional pressure as required. Repeat the above test to see if the rolls are balanced properly.


5-4 LAMINATING

1. Turn on the power and the heaters.
 - Set the temperature. The small red output light will come on while the machine is warming up, approximately twenty minutes.
 - When the two heat indicators are at the desired temperature the machine is ready to laminate.
 - Open both sets of rollers.
 - Put the drive direction switch in forward and turn on the drive. This allows the laminating rollers to turn and get evenly heated while the machine is warming up. Evenly heated rollers contribute to the quality of the lamination.

WARNING: Never permit the temperature to exceed 310° Fahrenheit while film is threaded and the laminator is not running. The film could disintegrate and require cleaning and rethreading of the machine. When it is necessary to laminate at temperatures in excess of 310° F such as for poster board - pull some excess film off the film supply rolls to provide slack so the film is not tight against the heat shoes while the machine is heating. This will keep the film from melting when the laminator is not advancing film.

MISE EN GARGE: Ne jamais laisser la température dépasser 310° F lorsque le film est chargé et que la machine n'est pas utilisée, car le film risque de fondre, auquel cas il faudrait nettoyer la machine et procéder à nouveau au chargement du film. Lorsqu'il est nécessaire d'utiliser une température de plastification supérieure à 310° F (160° C), par exemple pour plastifier des affiches, tirer un peu plus de film pour lui donner du mou de manière à ce qu'il ne soit pas tendu sur les sabots chauffants. On emploiera ainsi que le film fonde lorsqu'il n'avance pas.

ADVERTENCIA: No permite que la temperatura exceda los 310° F (160° C) mientras el plástico está cargado y el plastificador no está en uso. El plástico puede desintegrarse, lo que requeriría limpiar y recargar la máquina. Si es necesario laminar a temperaturas más elevadas que 310° F, como cuando se lamina cartón para cartelería, hale un exceso de película del rollo de abastecimiento para proveer huelgo, evitando que la película quede muy agredada contra las zapatas calefactoras. Evitará así que el plástico se derrita el periodo de tiempo en que la película no está avanzando.

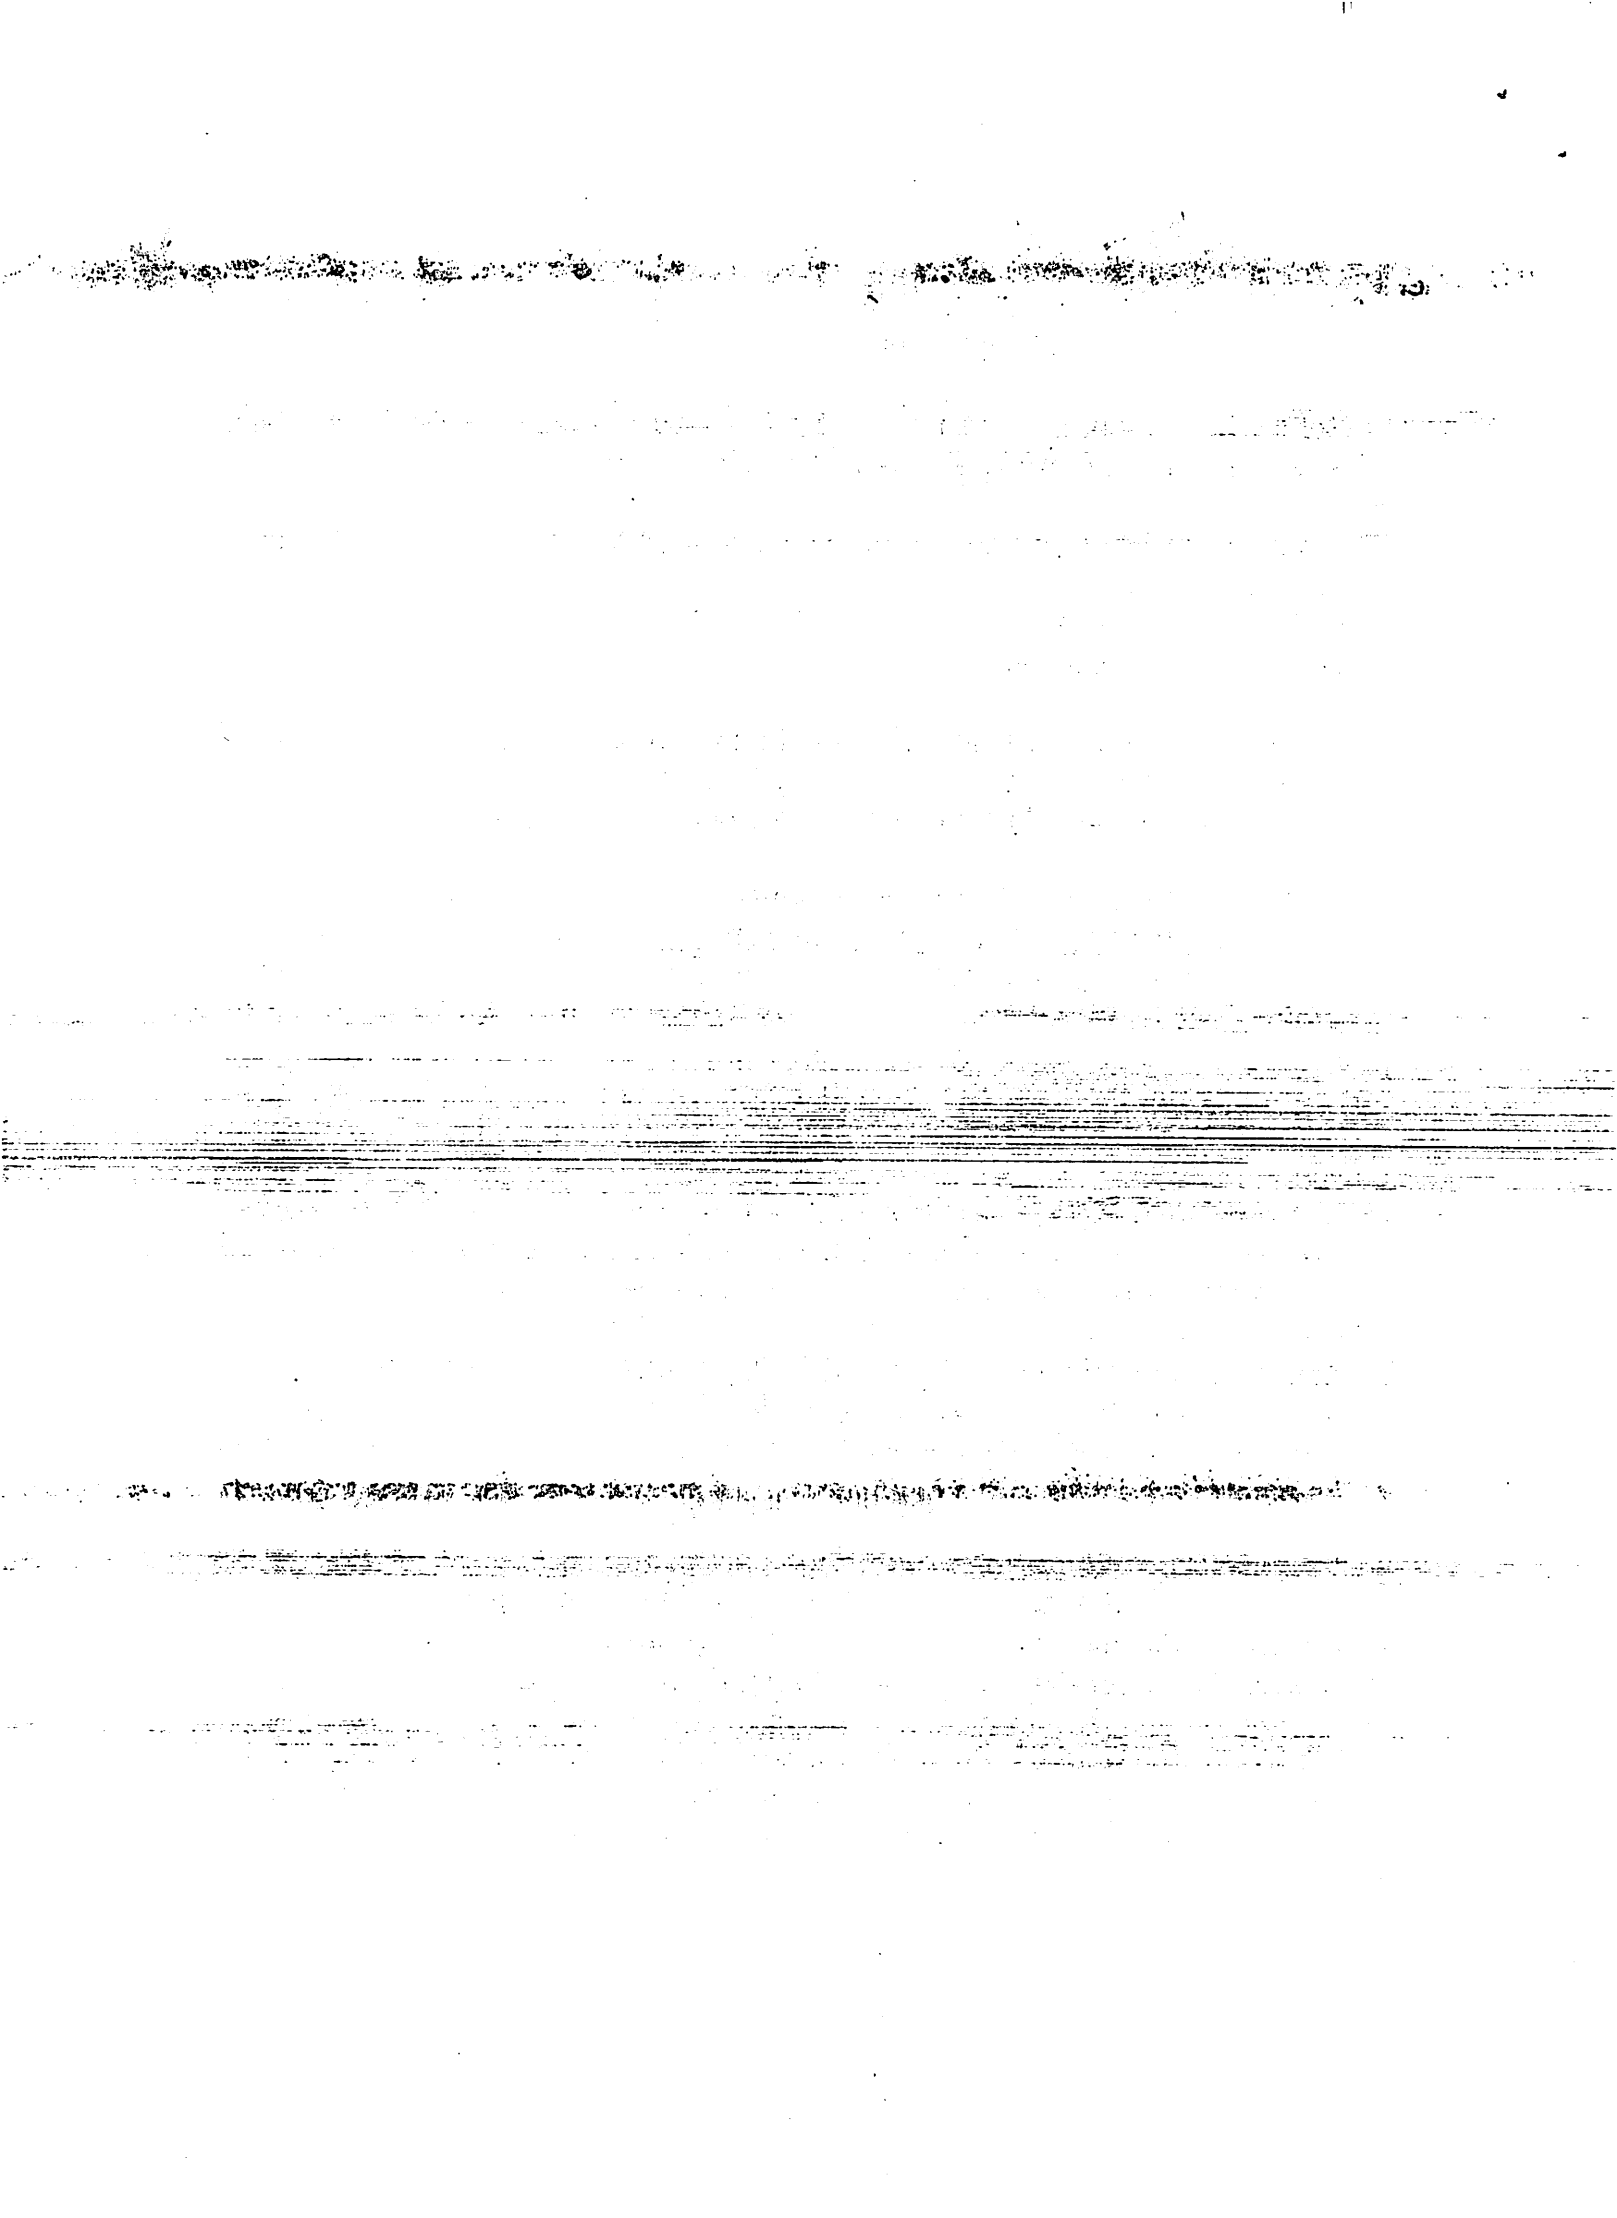

2. During warm up the actual temperature will sometimes overshoot the set temperature by more than a few degrees. Then when laminating is begun the actual temperature may initially drop below the set temperature. Unless these temperature swings are extreme there is no cause for concern.

The heat controllers each contain an intelligent processor which gauges the heat requirements of any job being run on the laminator. The processor adjusts the power to the heat shoes to keep the actual temperature steady and close to the set temperature. This process of gauging and adjusting the heat takes a few minutes. The actual temperature will become more stable as you continue to laminate.



3. Add or remove feed tray sections. Position the two side sections for the work to be performed. You will get the best results by centering items in the web of film.

4. Check the supply roll tension per the instructions in the previous section. Make sure the top and bottom supply rolls have about the same tension.

5. Once the machine has come up to temperature you are ready to laminate. Close the pull rollers first then close the laminating rollers. Adjust the film speed as required. Once the film starts to move watch it as it passes over the heat shoes. Allow any wrinkling to clear out before inserting material to be laminated. Each time you stop the advance of film, whether by opening the rollers or turning off the drive, slack will form in the web of film. It will take a few inches of film to get the slack and the resulting wrinkles past the shoes.

6. Examine the film as it exits the machine. If there are bubbles or wrinkles in the film it could mean there is not enough tension to draw the film tight and smooth over the heat shoes. It could also indicate that the rollers are not closed.

7. As mentioned earlier in this operators' guide many users tend to use too much supply roll tension. Some film, such as 1.5 mil, requires very little tension. Here are some indicators that you might have excessive supply roll tension.

- unusually loud squealing (many films will squeal a little)
- necking (the web of film gets narrower as it goes across the shoe)
- No waterfalloing or wrinkling anywhere on the shoe... the film is perfectly smooth and tight across the surfaces of both shoes (please see the previous section on adjusting supply roll tension).

If the film curls up as it leaves the machine, loosen the top supply roll mandrel (turn counterclockwise) and/or tighten the bottom supply roll mandrel (turn clockwise).

If the film curls down after it leaves the machine, tighten the top supply roll mandrel (turn clockwise) and/or loosen the bottom supply roll mandrel (turn counter-clockwise). In making these adjustments, make sure that top and bottom supply roll tension are kept about equal.

8. When running films of 3 mil or above turn the fans on before beginning to laminate. "Waves" or "ripples" tending to run through the center of the laminated web are usually caused by forgetting to run the fans or setting too high a temperature for the film being used.

"Heat wrinkles" are formed when the film is not cooled enough before coming out the back of the machine. For the best results the film should be cooled below melt temperature while it is pulled tight and perfectly flat between the laminating rollers and the pull rollers. If it gets out the back of the machine while still at or above melt temperature heat wrinkles can form. The major reason for fans on a laminator is to cool the laminate not to cool the machine.

9. This machine is equipped with a directional switch: forward/neutral/reverse. Turn to the forward position to laminate, or to reverse as required. The manufacturer recommends the stop switch be used to stop the laminator rather than the neutral position of the directional switch. To remove anything which may become lodged between the rubber laminating or pull rollers, remove the feed tray assembly and open rollers. Switch control to reverse if required.

10. A unique feature of the laminator is the provision for driving both top and bottom pull rollers and laminating rollers. This feature provides an even distribution of heat on a continuous basis to the laminating rollers prior to startup or when laminating production is temporarily halted.

The laminator becomes capable of accepting thick materials, without roll slippage because the top and bottom rollers are driven. Driven rollers also minimize the "curling effect" in the finished lamination by providing balanced power to the laminating and pull rollers.

11. The laminator is designed to operate with the operator directly facing the control panels and feed tray assembly.

For operator safety the feed table/heat shoe guard, an integral component of the feed table assembly, MUST BE IN ITS DESIGNATED POSITION when the temperature of the heat shoes is in excess of normal room temperature or when the drive switch is in the forward position.



5-5 RECOMMENDED TEMPERATURE SETTINGS

Your first source of information about recommended film application temperatures and operating characteristics should be your film suppliers. If you do not know the source of your film, or if the supplier cannot provide the information, please use the following table as a guide.

FILM MELT TEMPERATURE CHART (ALL FAHRENHEIT)


FILM TYPE	FILM THICKNESS		
	1.5-1.8-mil	3 mil	5-10 mil
Monopolymer	310°-320°	280°-290°	270°-280°
Low-temp (copolymer)	300°-310°	220°-270°	220°-260°
Ultra-low temperature	230°-280°	180°-270°	180°-260°

Several important notes about this chart:

1. Your film vendor must have the primary responsibility for providing information about the film that you are using.
2. **Use this chart is to serve as a general guide when better data is not available.**
3. If your film vendor cannot provide this and other information about the film you are using, it may be difficult to achieve good results.
4. When laminating heavy posters or other thick items with 1.5 to 1.8 mil films, some additional heat may be required to get a permanent bond. Never exceed 320° F for standard lamination.
5. While offset printed materials may be laminated at the lower ends of the above ranges, inkjet and other output from digital printers may require the upper end of the range in order to get a good bond.

Cooling Fans:

The cooling fans are used during lamination with 3-mil, 5-mil, 7-mil, and 10-mil film. The fans cool the plastic as it leaves the laminating rollers and before it enters the pull rollers. As mentioned earlier the fans prevent heat wrinkling and help insure lamination that is smooth and flat. The pull rollers on a laminator turn a little faster than the laminating rollers to insure that the film is perfectly flat while it is being cooled.

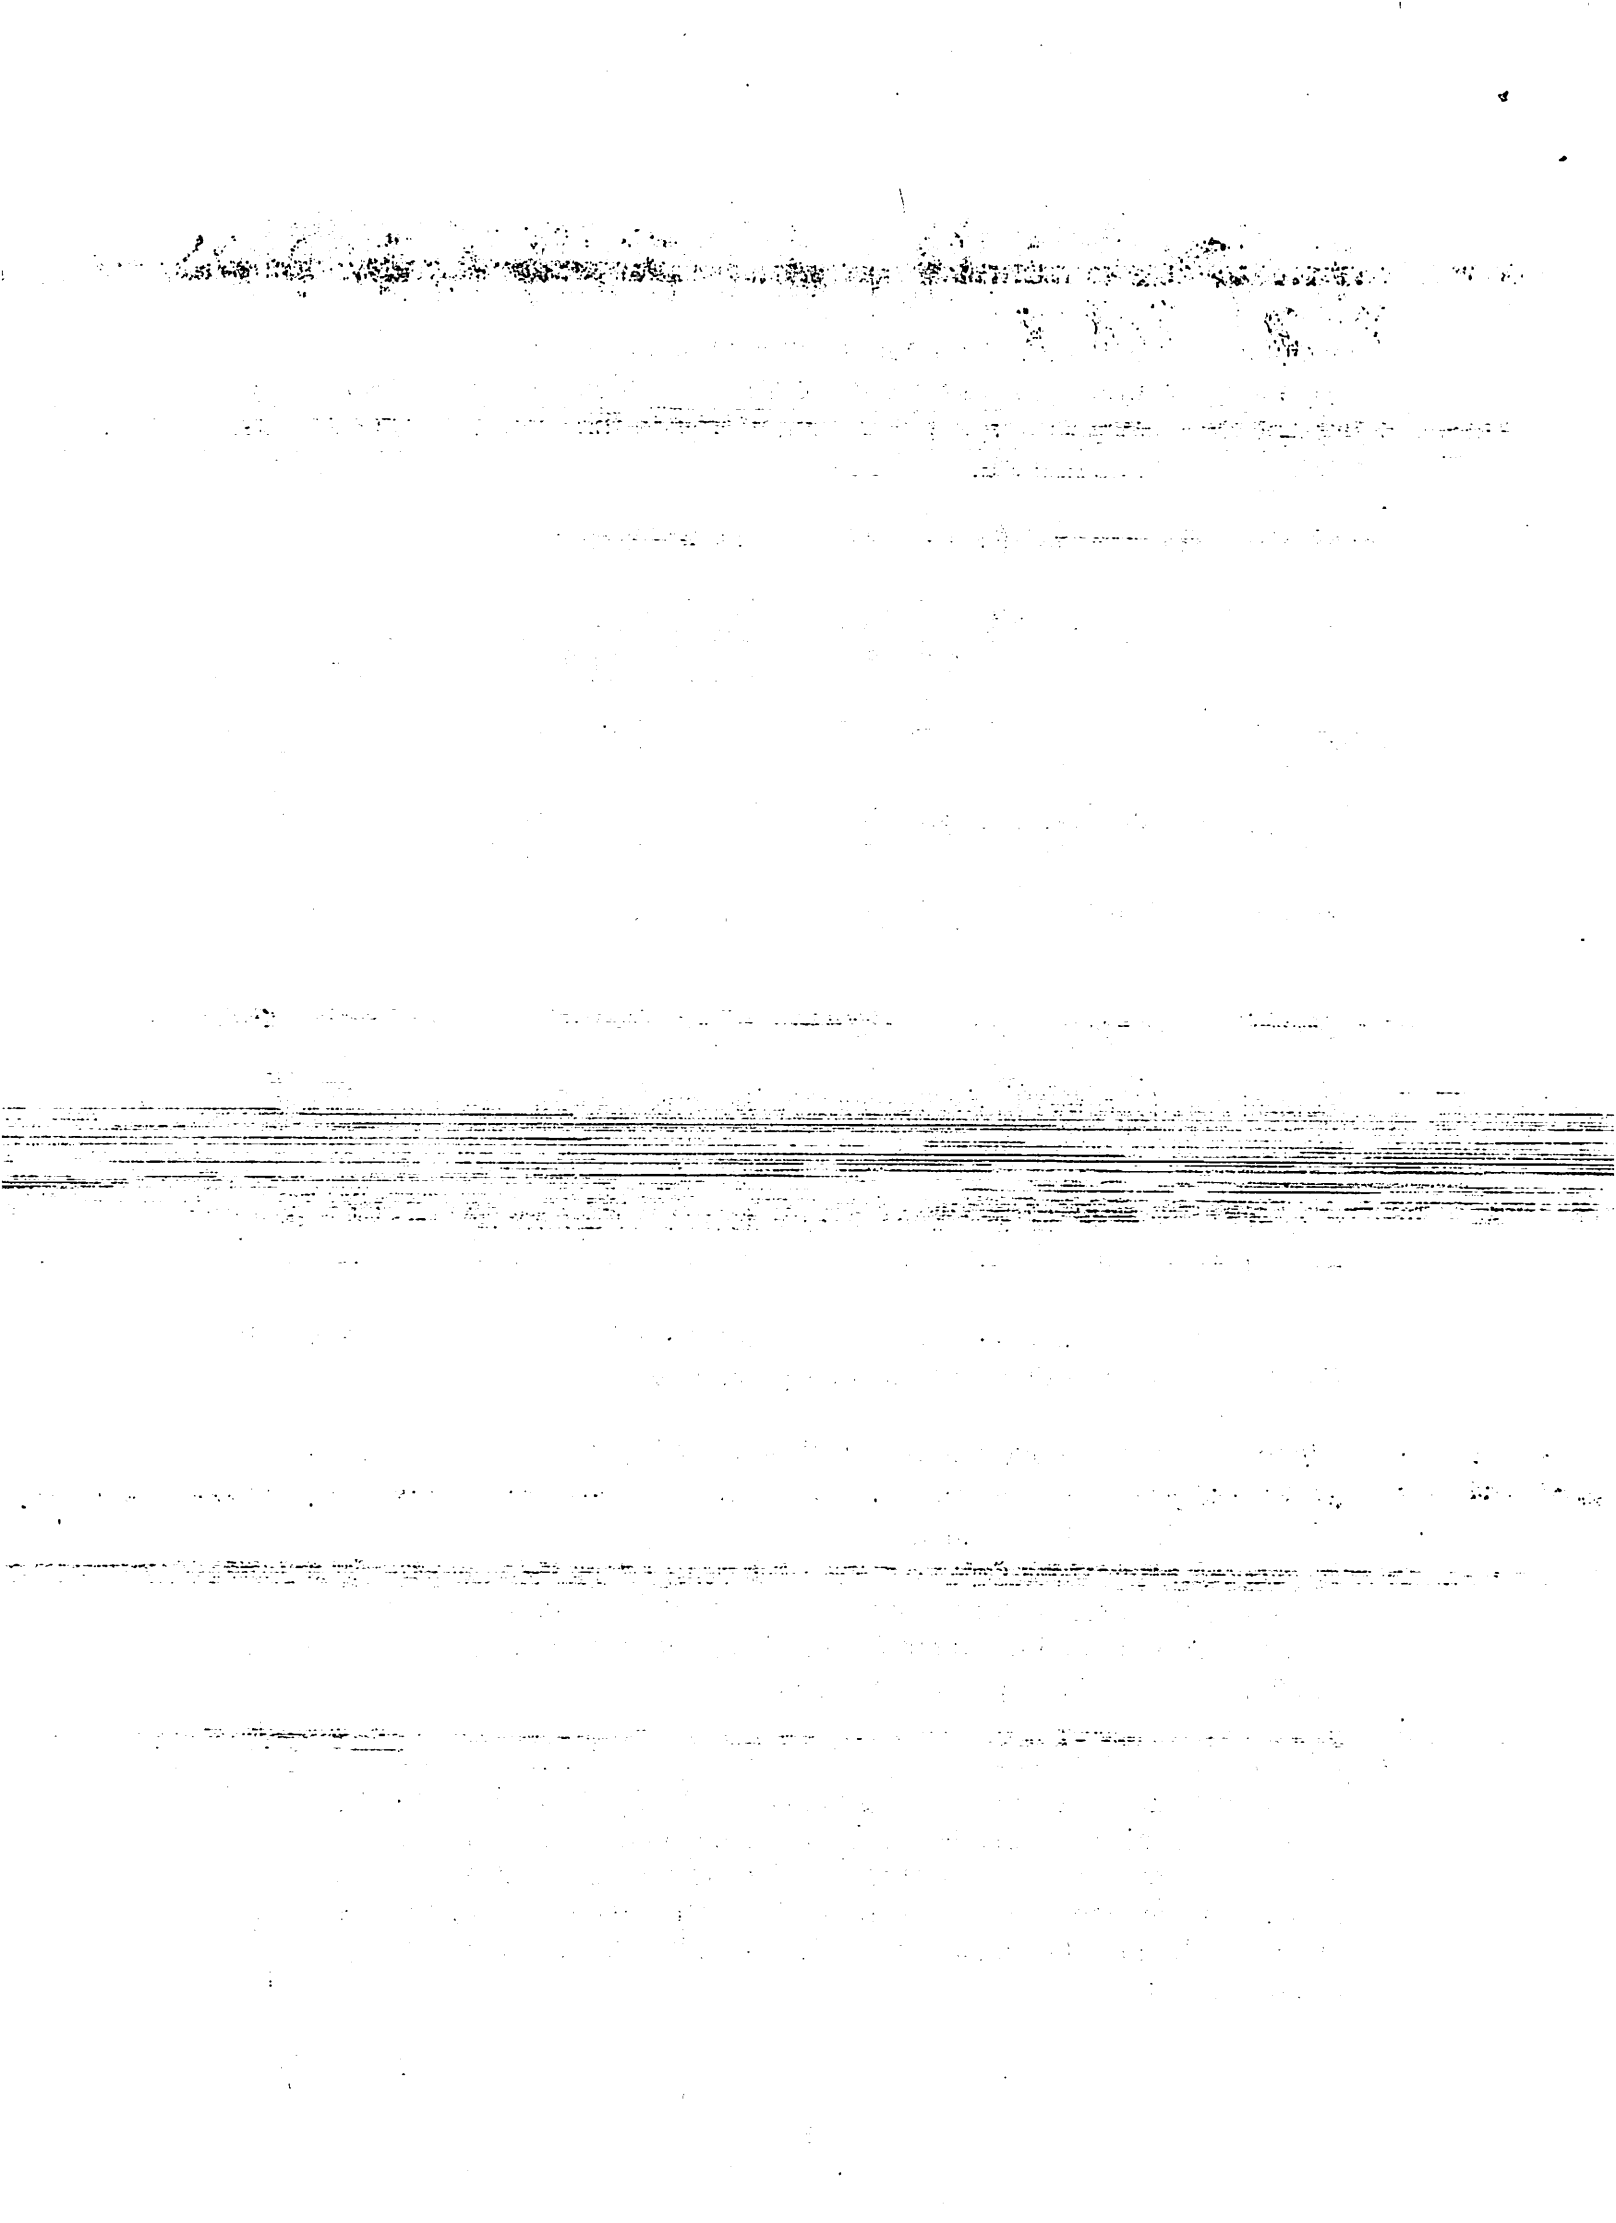



NOTE: It is possible that variances from recommended temperature settings may be necessary due to material thickness, ambient temperature, humidity, or the quality and thickness of the material being laminated.

Please note the wide range of temperatures listed especially for heavier films. This does not mean any film that thick can be run anywhere within the given range. There are "standard" or high-temperature and "low-melt" or low-temperature versions of all film thickness. Some low-melt films work at lower temperatures than others do. It is important you buy your film from a vendor who can tell you the following additional information about any film you choose:

- the thickness
- the clarity
- suggested melt-temperature range
- polyester/polyethylene content
- how well the adhesive will stick to the kinds of images you'll be protecting and enhancing

Temperatures may exceed 310° when laminating poster board or other thick items with 1.5 mil film on a continuous basis, but when the machine is stopped, turn the heat off if the setting is in excess of 310°. **Never set the heat above 350° with film in the laminator. Temperatures over 300° are not needed except with 1.5 mil film. Film that is 3 mil or thicker is generally run at 280° or less.**

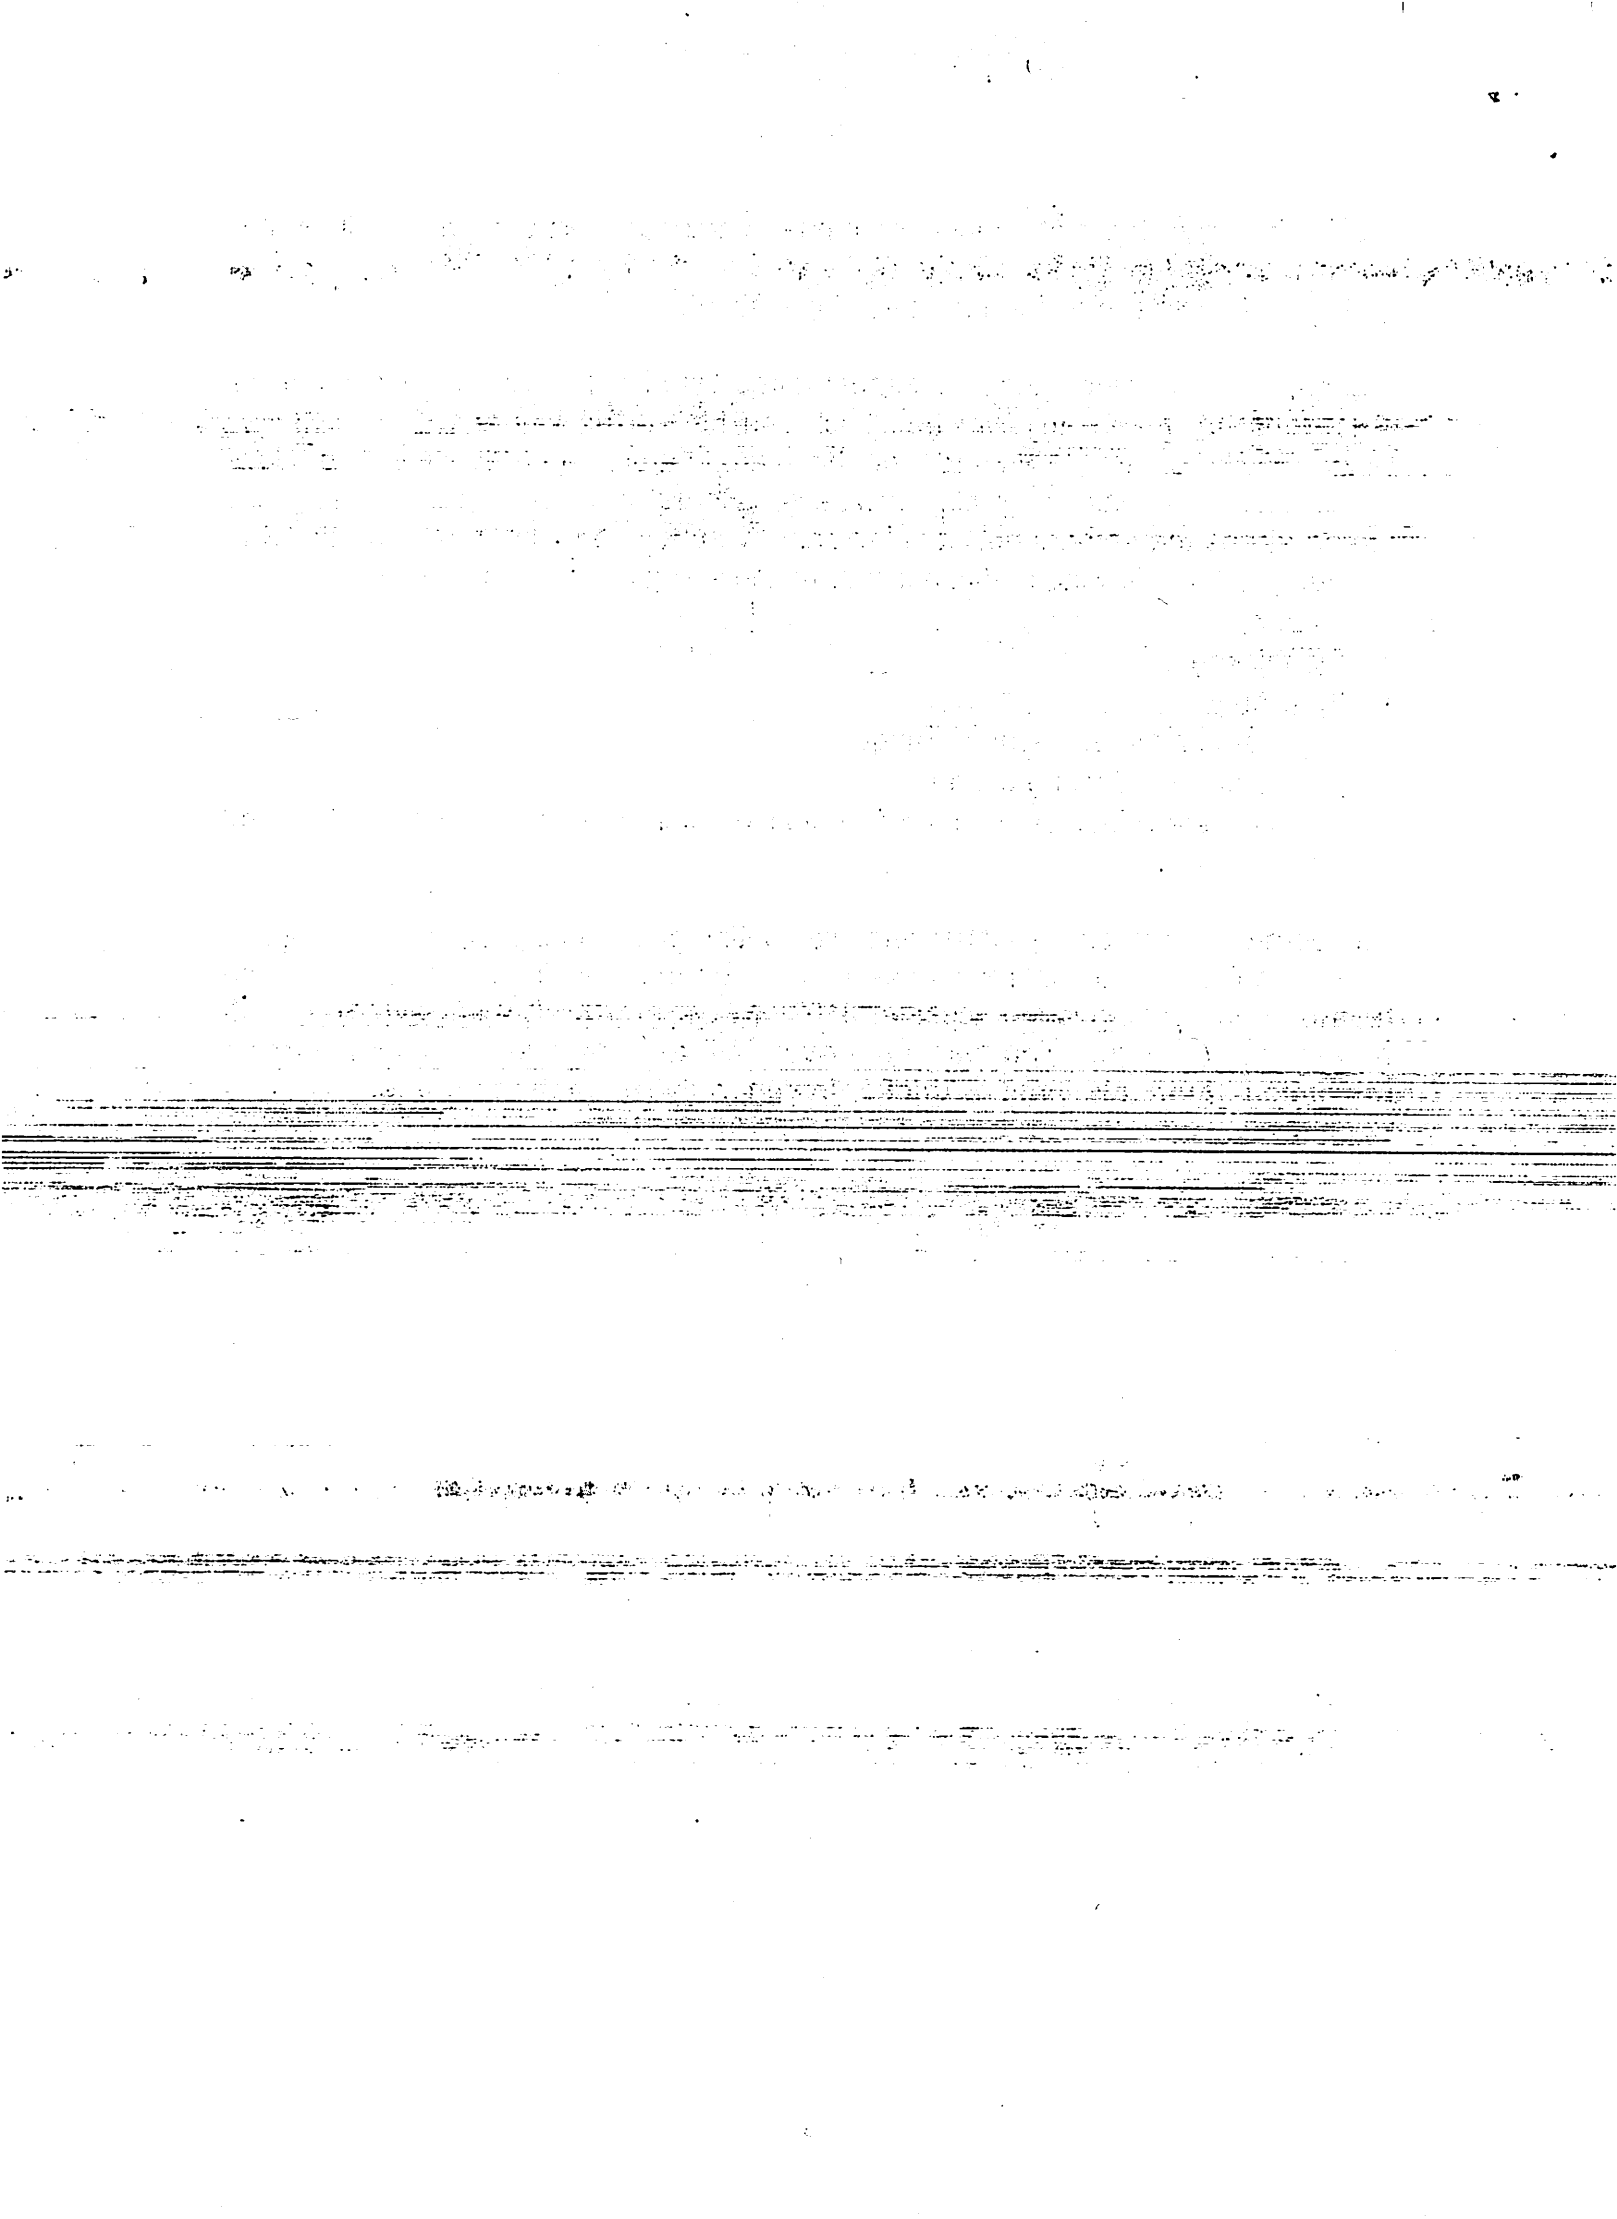

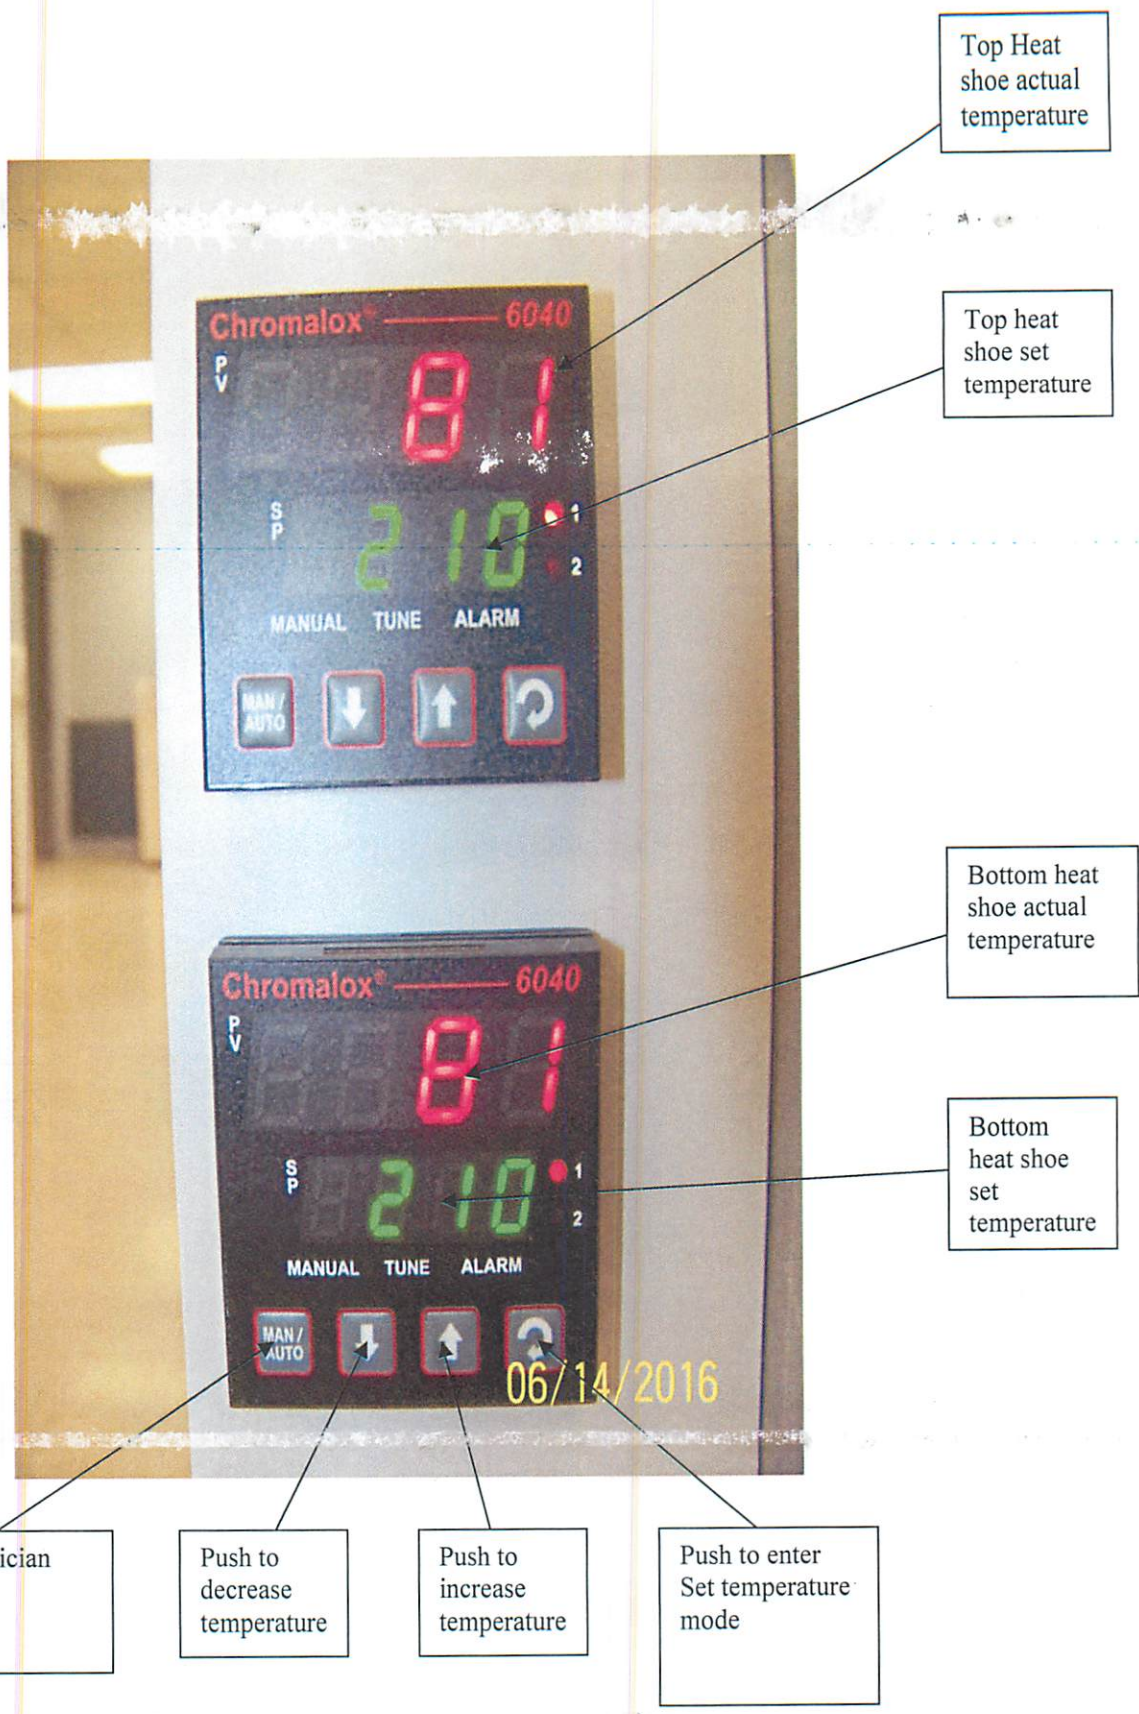

1. To change temperature push far right button. "SP" will appear in the bottom window.
2. Use the arrow up and down keys to select desired temperature.
3. Push the far right button again to accept the new temperature setting.

5.6 Setting Up The Autofeeder

The Autofeeder has 5 user adjustable controls:

1. Feed table Air Adjustment
2. Separator Adjustment
3. Blower Adjustment
4. Suction adjustment
5. Paper gap adjustment

To set up the operation of the feeder you will adjust these in that order.

Adjust the side guides so they are feeding the paper at the desired point of the film. Do not have the side guide tight against the paper, the paper will need a little room to "Float".


We generally turn the feed table air adjustment up half way. This control directs the air to the left and right sides of the feed tray to float the paper which makes it easier for the vacuum roller to grab the sheet. If the paper is not centered in the feed tray you can direct more air to the side with more stock.



Feed table air
adjustment (side to
side)


Note: The feeder will feed a minimum of 5 ½ X 5 ½ and a max weight of 65lb cover stock

Place one sheet of your paper in the tray. Turn the Separator Adjustment knob so the gate rises. Place one piece of stock between the finger and the pickup drum. Lower the gate until it lightly touches the paper stock. Remove the piece of paper stock.

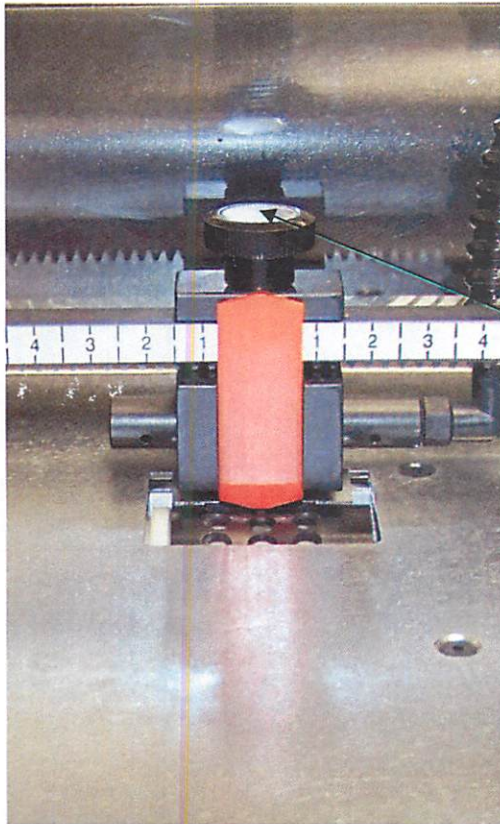

Separator
Adjustment

Place your paper in the tray. Do not stack the paper any higher than the front rail of the tray. Slide the paper all the way forward. Then put the paper stop assembly so one pin is on the tail end of the paper and the other pin is up against the paper pile.

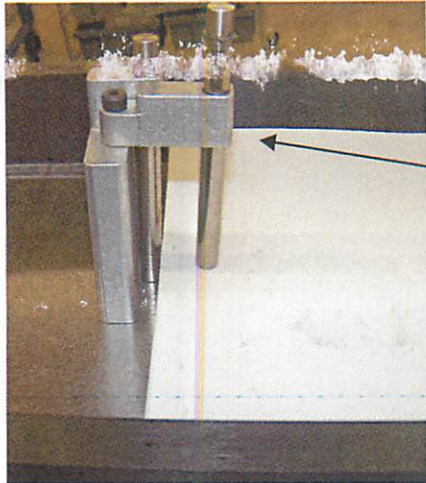


Paper Stop Assembly

The blower and vacuum setting should be at 11:00 o'clock and 1 o'clock on the scales to start. Certain light papers may require less air blowing (clock wise) heavier stocks may require more air (counter clock wise) so the stack of paper will "float", so that adjustment is there if needed. Consequently heavier stocks may require more suction (counterclockwise) and lighter stocks less (clockwise). As you become familiar with the settings you will know about where to set these controls for your particular application.



Suction
Blower


Start the laminator (at a slow speed (Around 3 on the scale) and turn on the compressor. The paper will start to feed. Once all of the adjustments are made

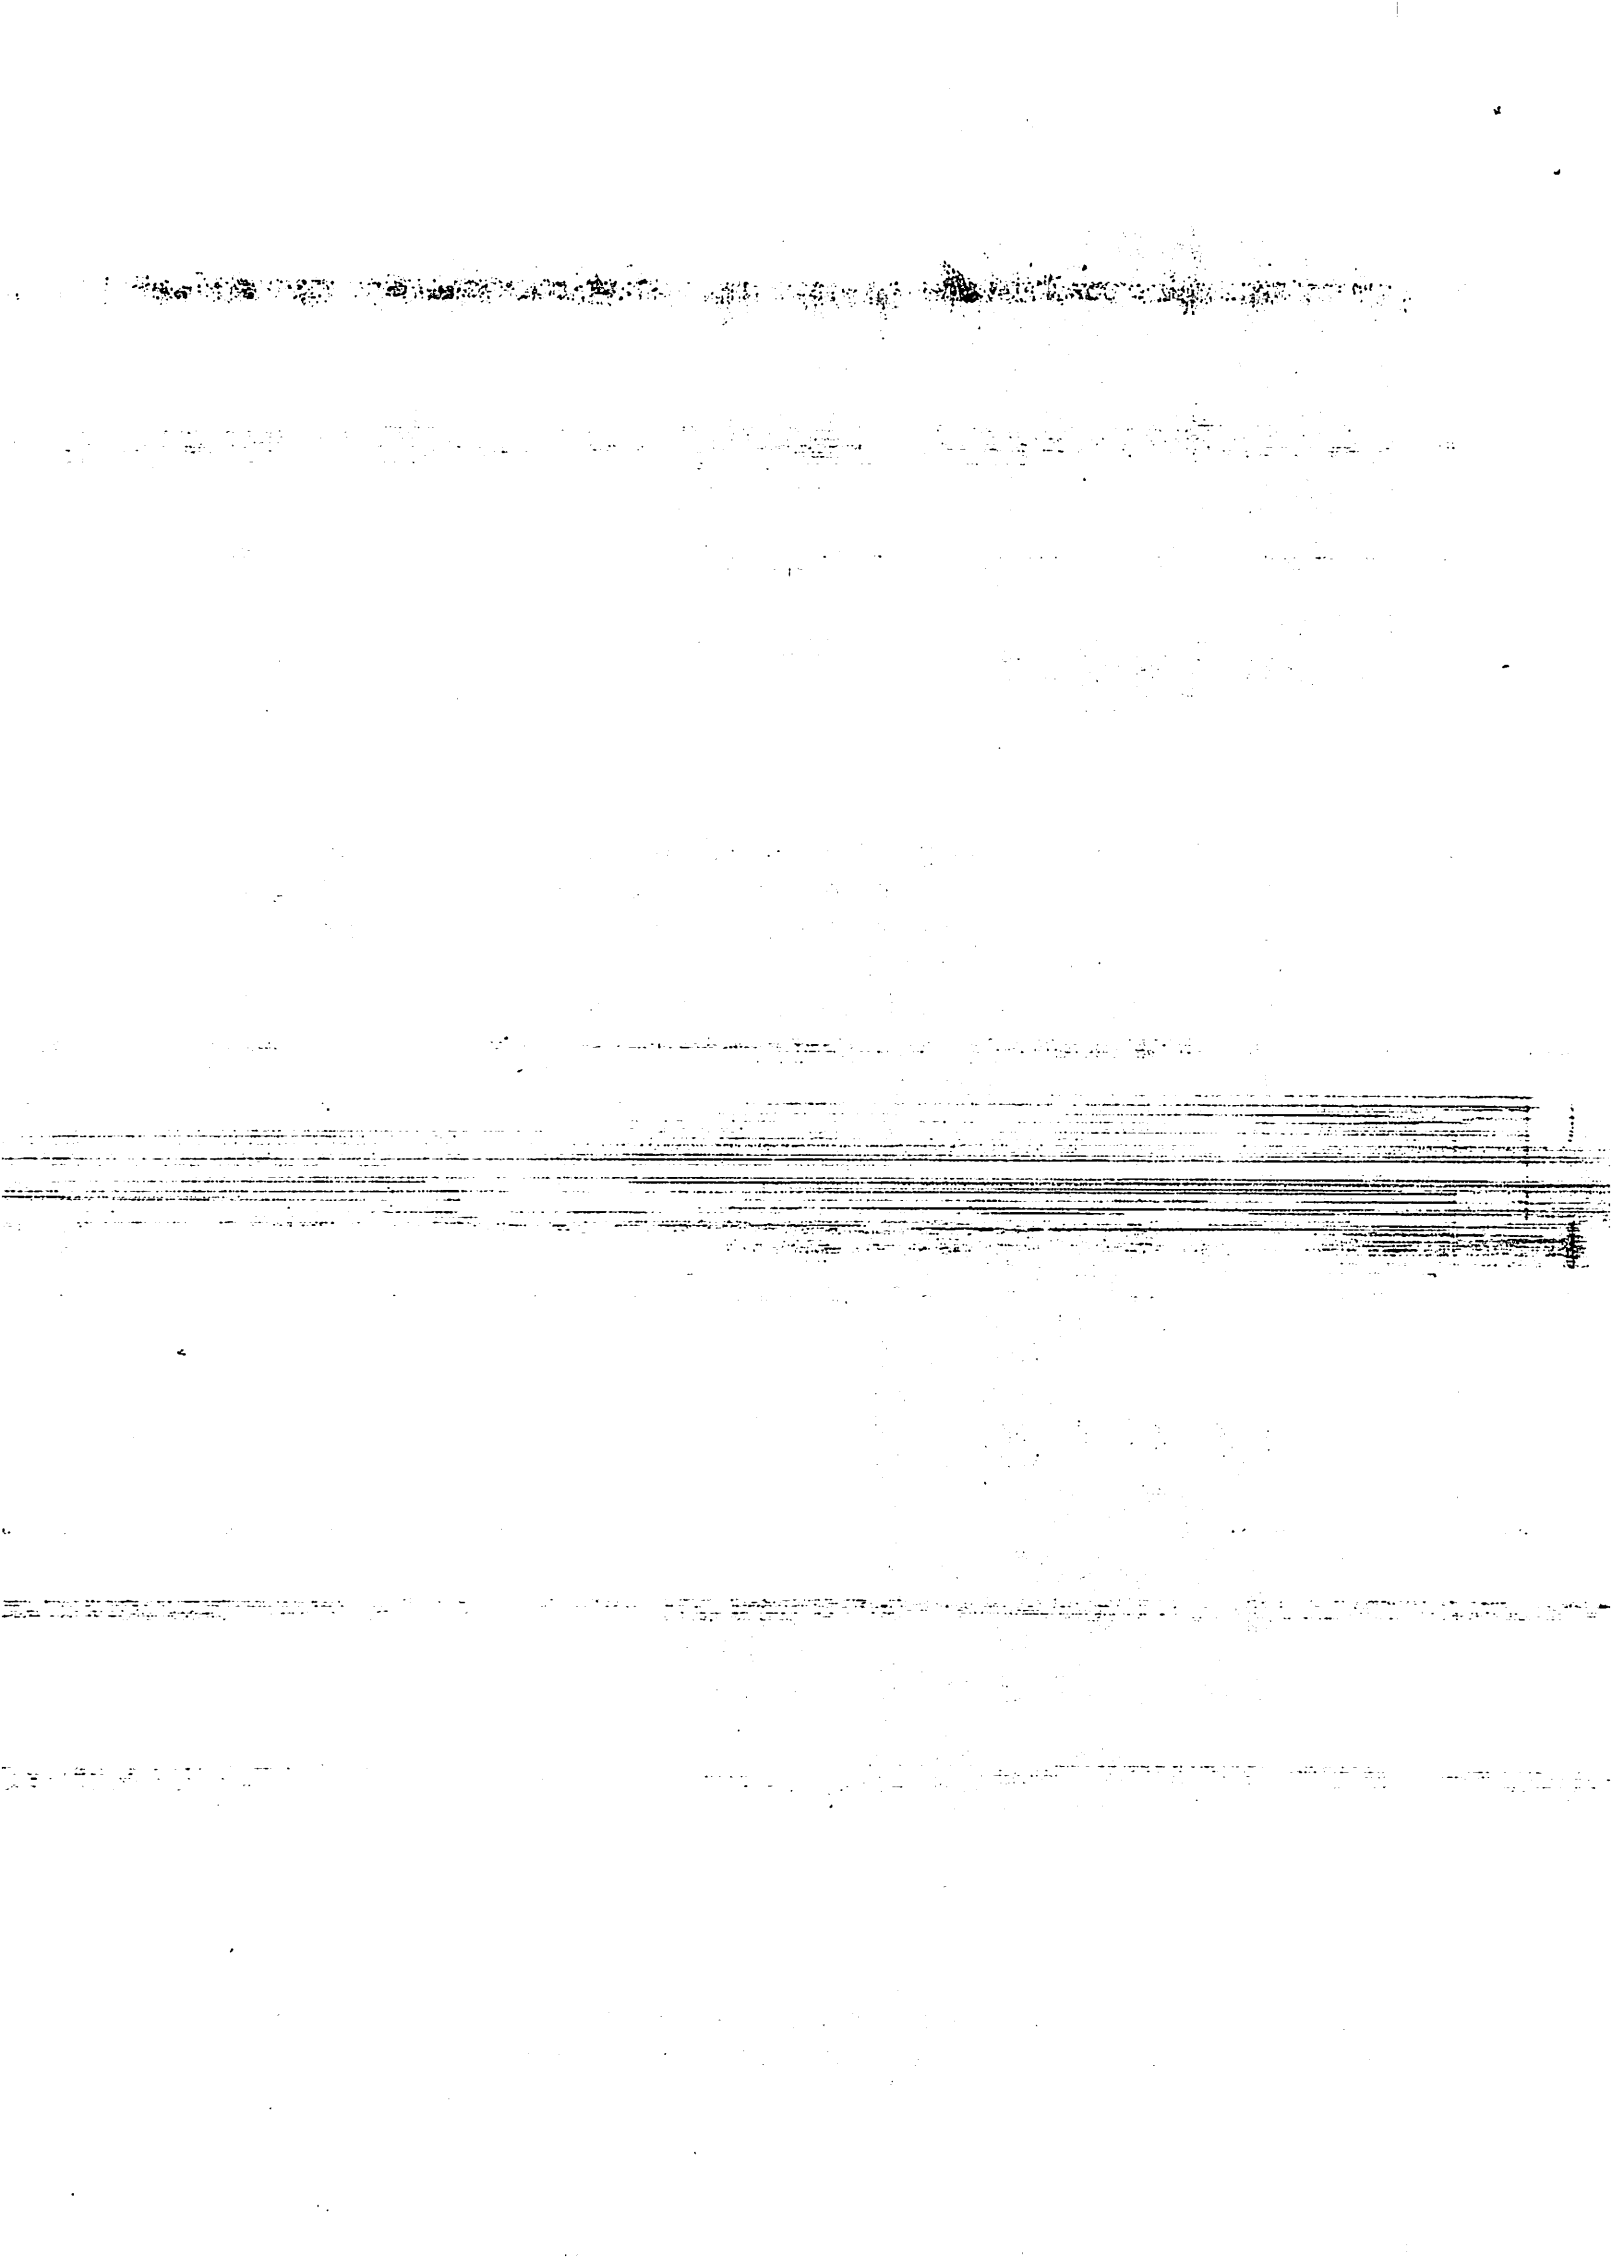

you can increase the speed of the laminator. The feed will increase with the laminator speed. You will find the faster you run the more consistent the feeder will be.

Start the laminator (at a slow speed (Around 3 on the scale) and turn on the compressor. The paper will start to feed. Once all of the adjustments are made you can increase the speed of the laminator. The feed will increase with the laminator speed. You will find the faster you run the more consistent the feeder will be. As you run the laminator you can adjust the gap between the sheets by turning the Gap adjustment knob. counterclockwise increases the distance between the sheets, clockwise decreases the distance. Remember that it changes the gap from the feeder so you will need to wait for a couple sheets to exit the machine before you can see the distance change.

Note: With lighter paper the gap will increase when the feed tray is almost empty (the last 5-10 sheets). If there is excessive air blowing on the paper in the feed tray it can also cause the gap to be larger or inconsistent. If this is the case decrease the amount of air blowing on the feed tray.

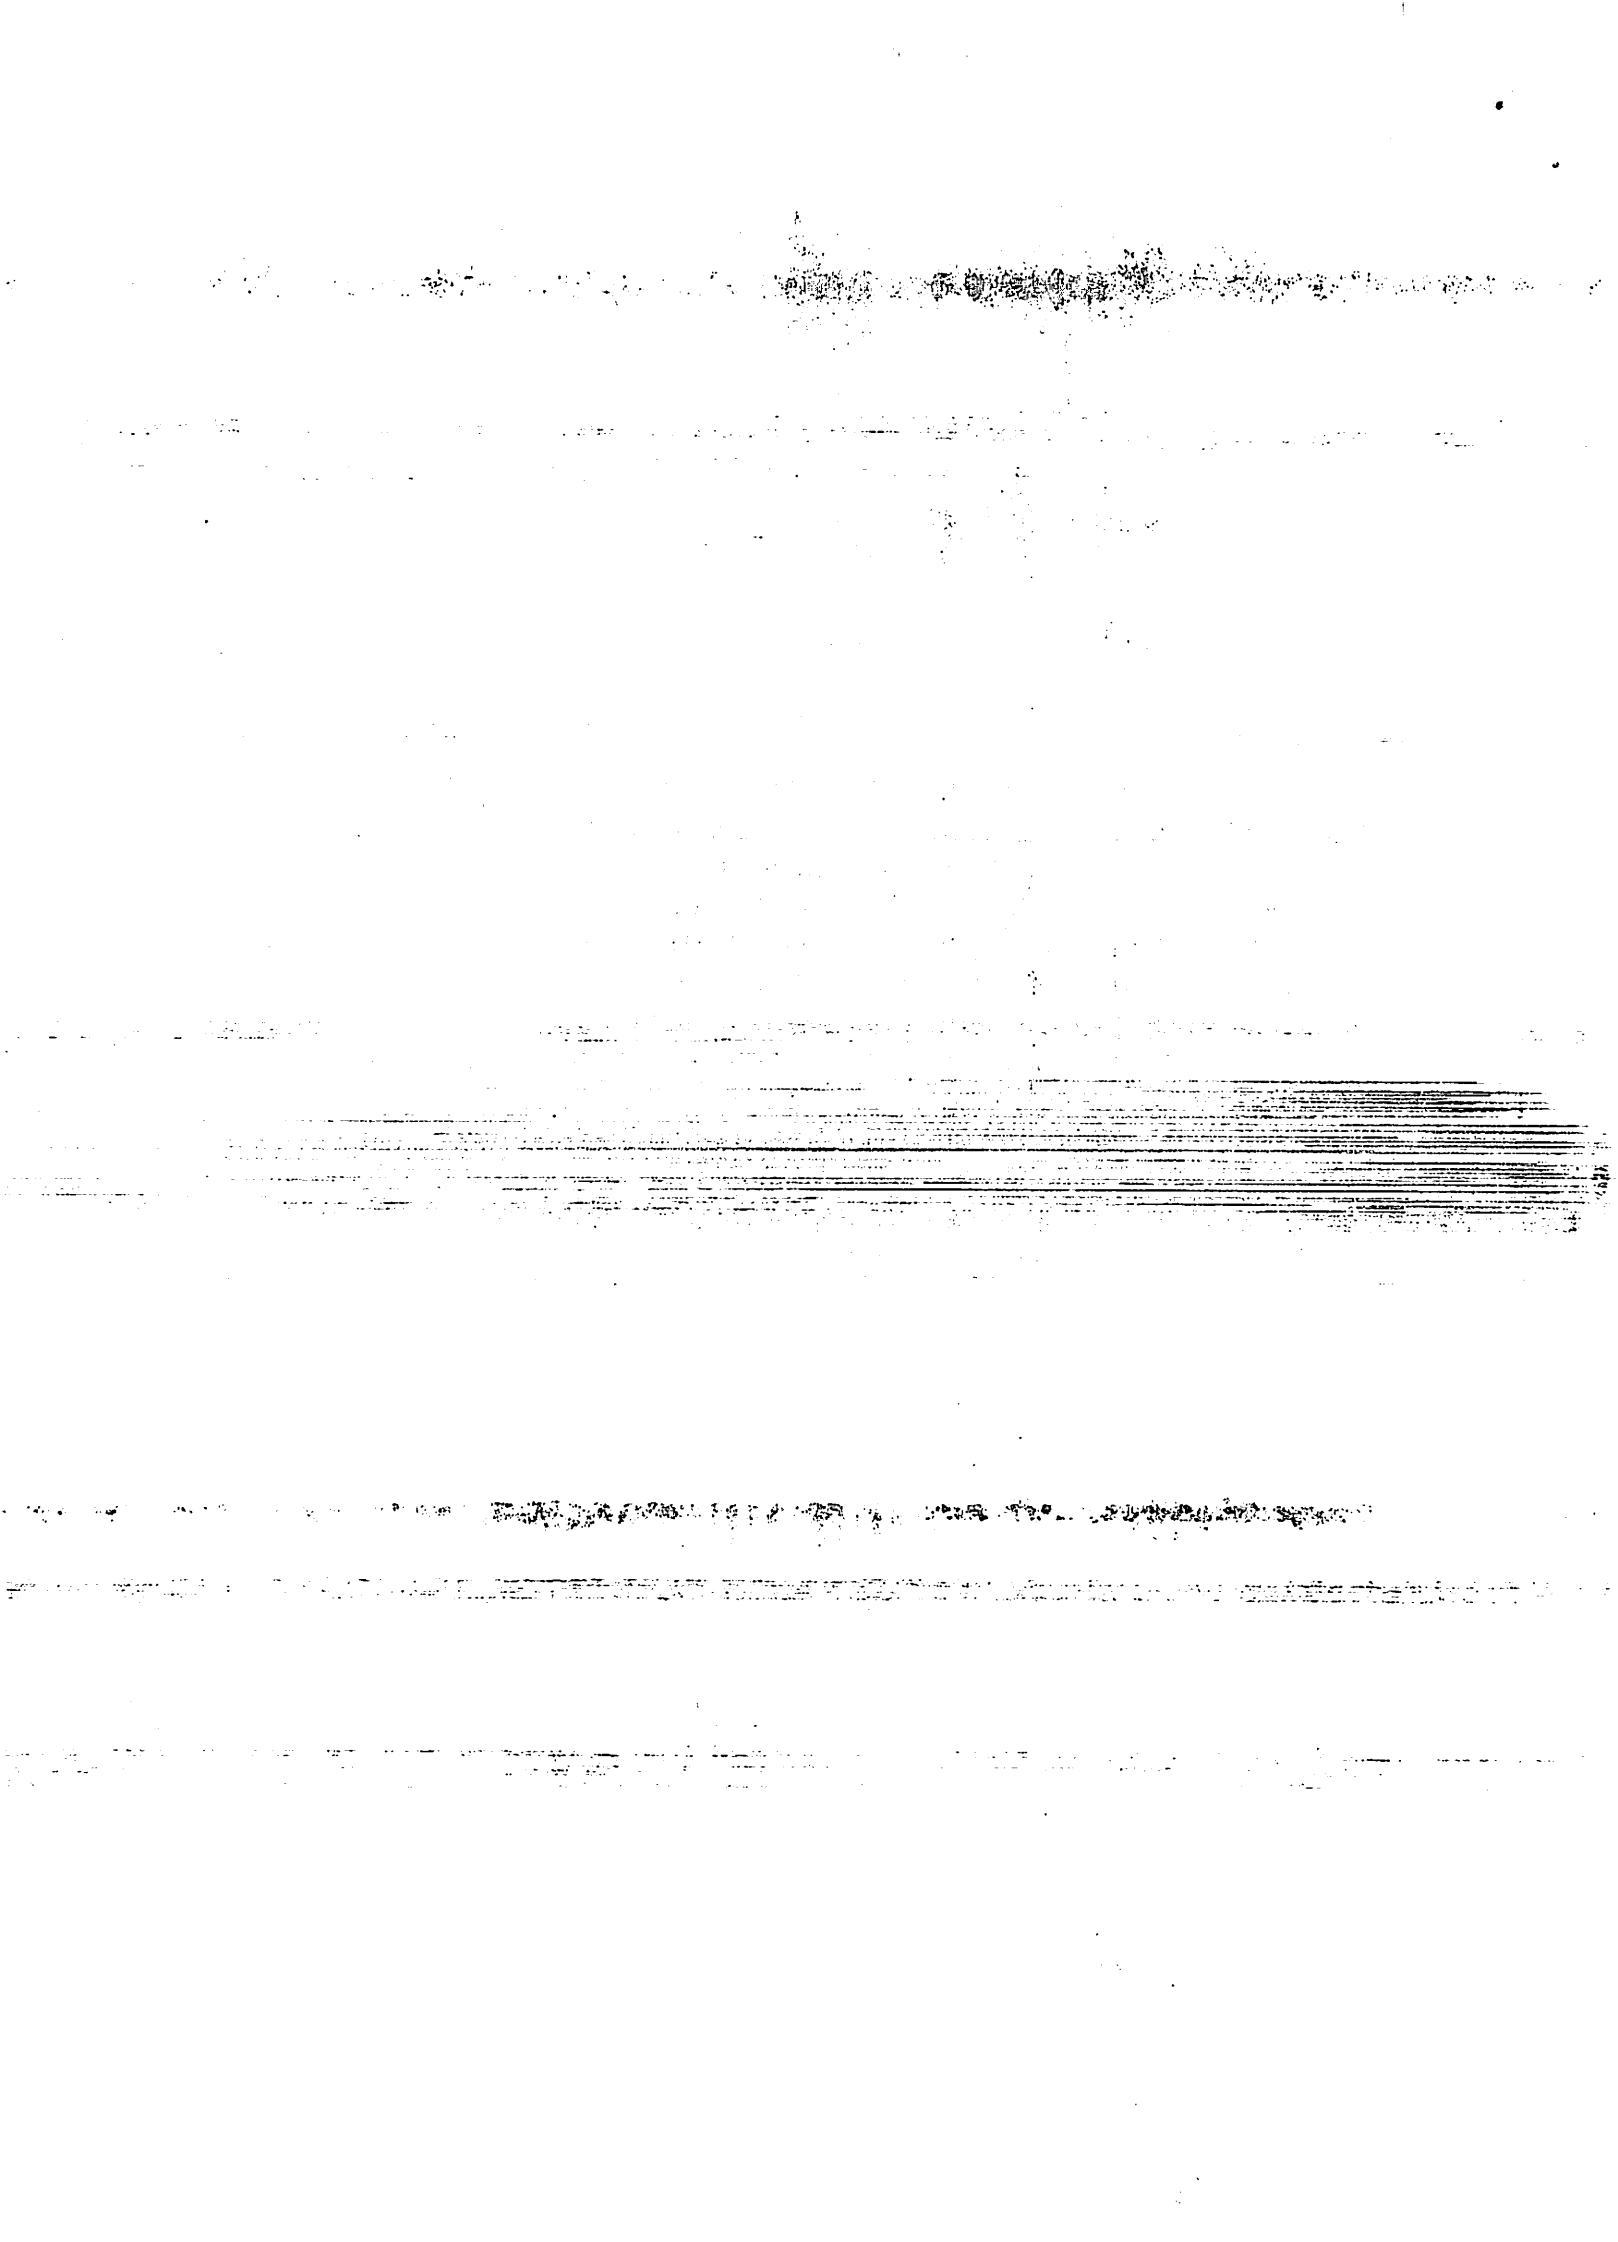



Gap adjustment knob


Troubleshooting the Autofeeder

Sheets hanging up in the tray:

- A. Adjust the separator adjustment up
- B. Increase the suction
- C. Increase the feed table air adjustment


Double feeding:

- A. Lower the gap adjustment
- B. Decrease the suction


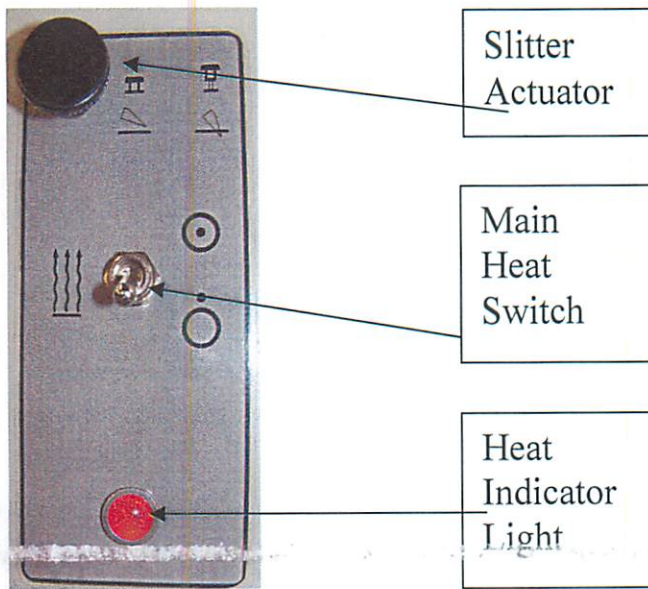


5-7 SLITTER OPERATION

1. The slitters on the HDF15 can be moved independently from the sides of the machine even while lamination is in progress. The slitter heads are mounted on a steel bar with an adjusting knob on each knife holder. The HDF15 comes standard with 2 slitter heads. Additional slitter heads may be ordered.

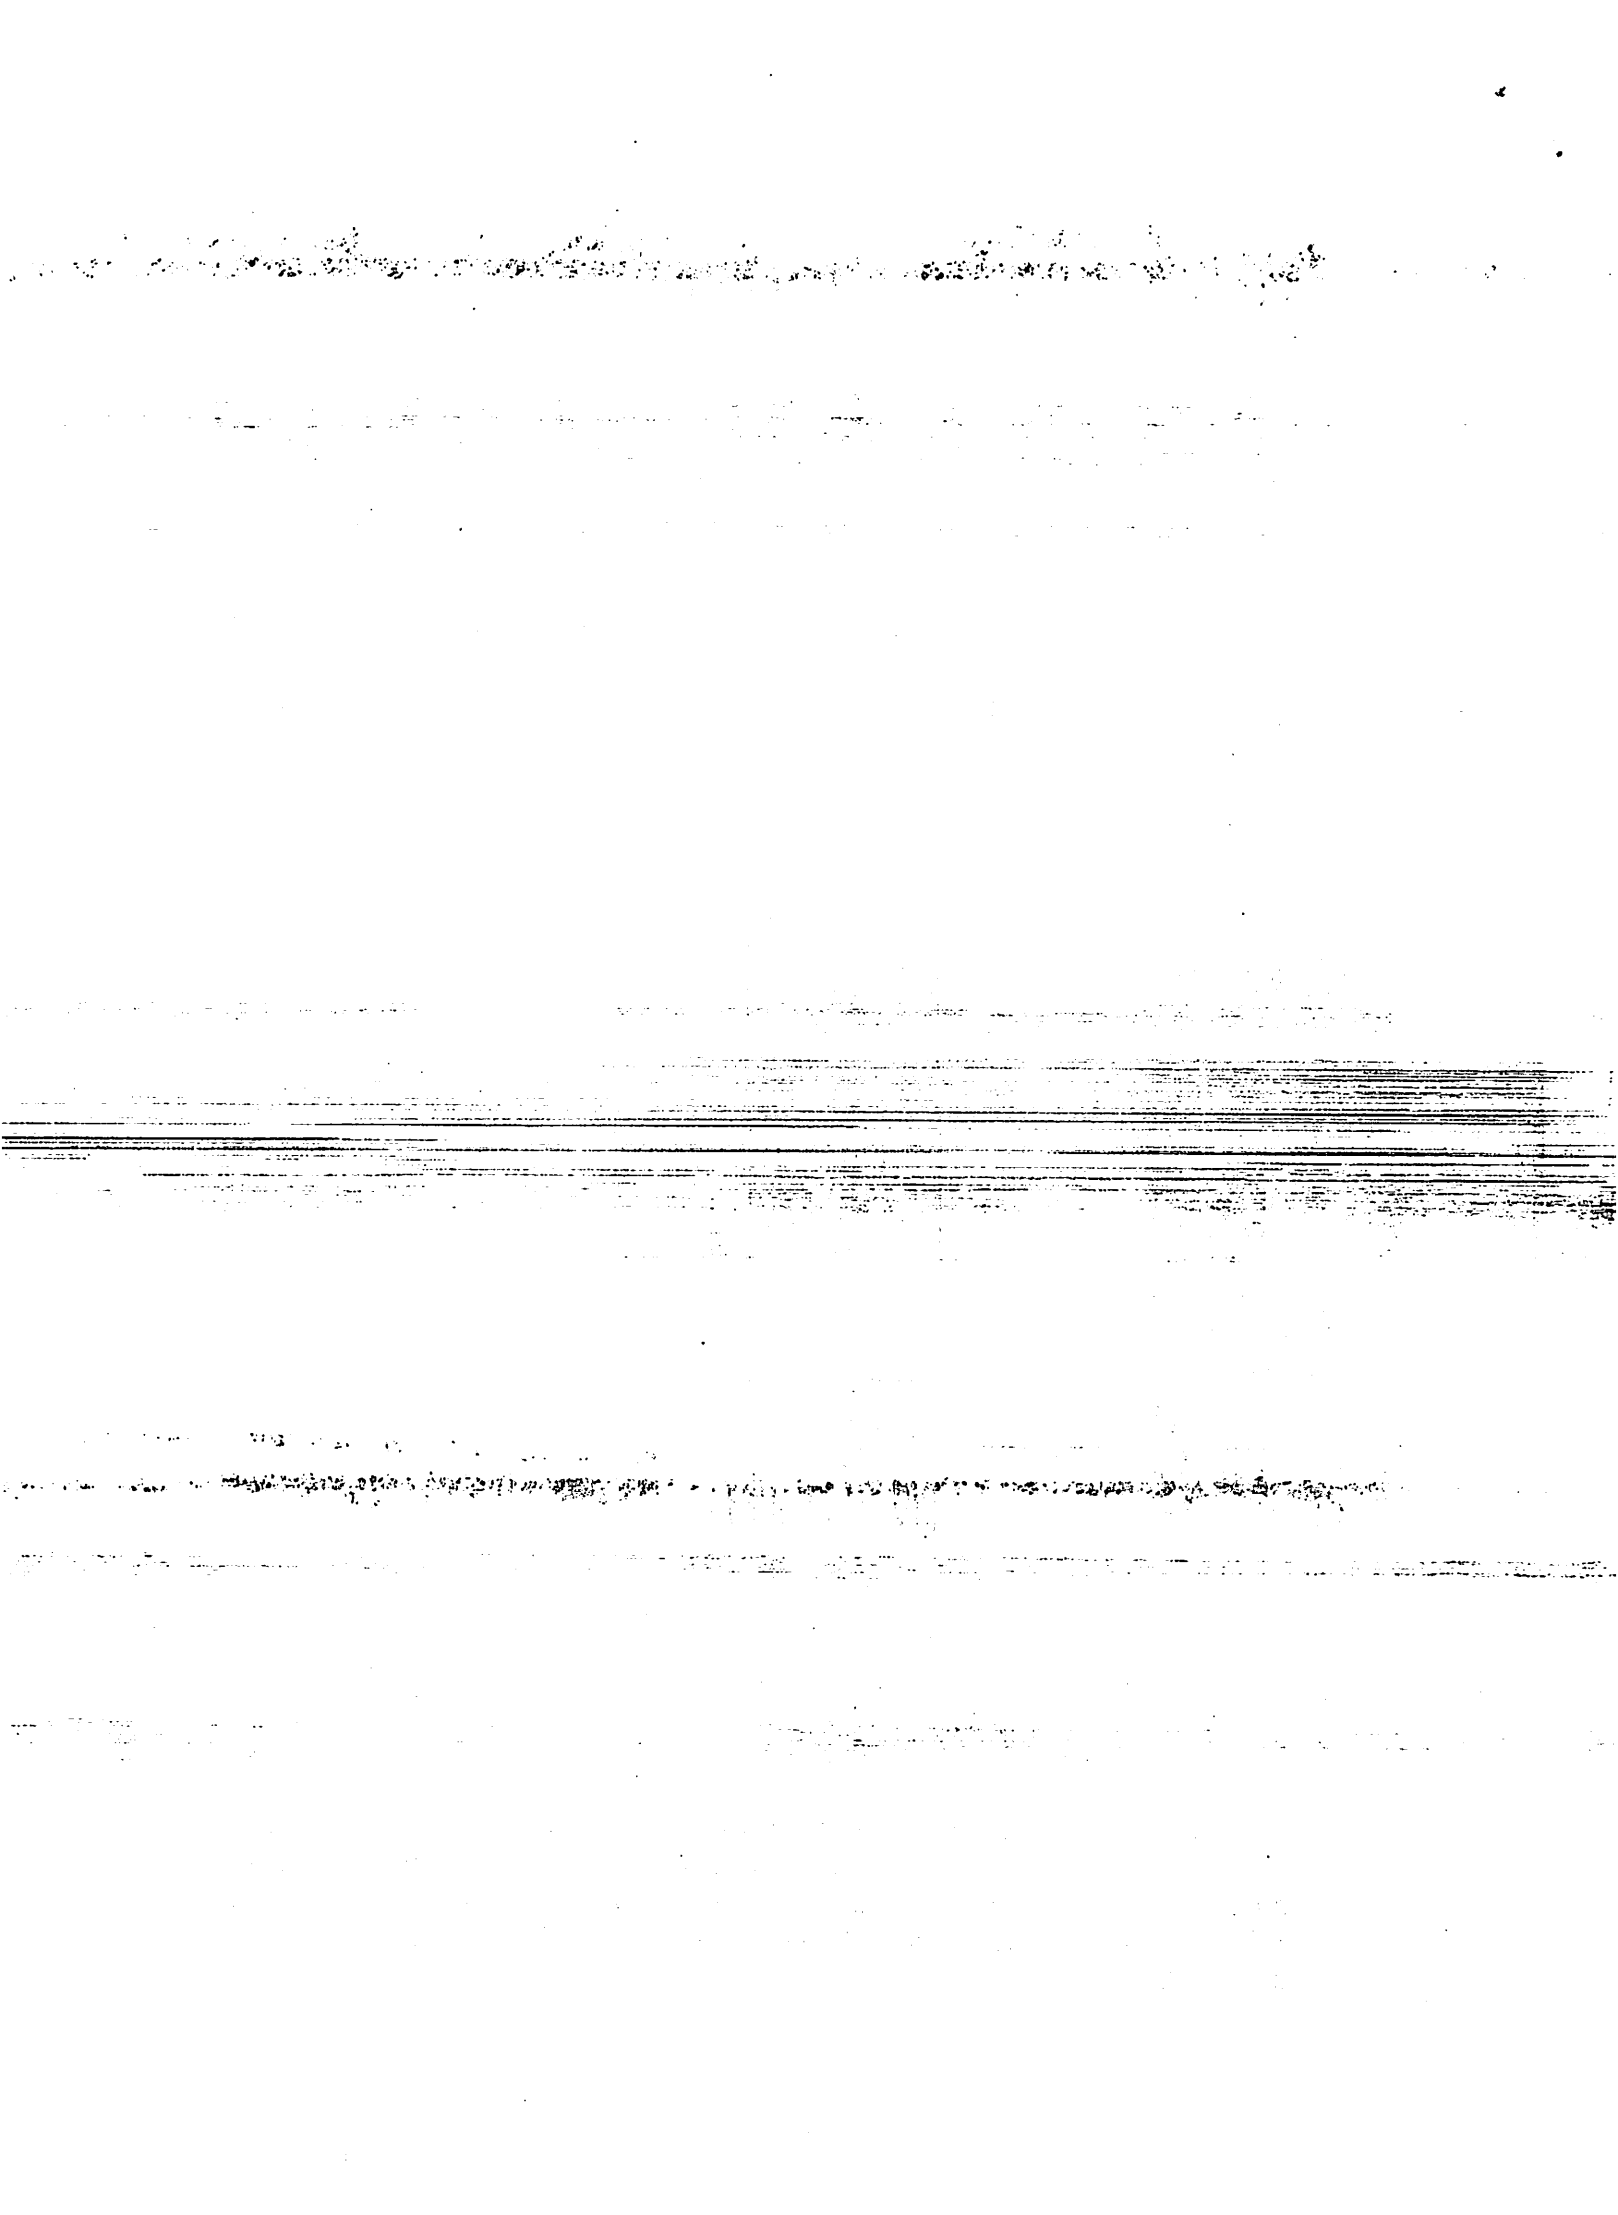

2. To install the slitter blades it is recommended that you remove the top supply roll and the release liner take-up shaft to provide easier access to the slitter heads. The recommended blades are hook blades (PRB031), several are included with your machine. To install them in the slitter head you will need an allen wrench. Slide the blade into the slot on the top of the blade holder until the first slot on the back of the blade meshes with the roll pin. Tighten the set screw to lock the blade in place.

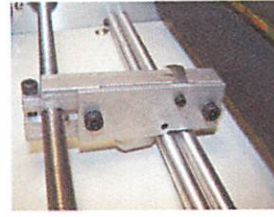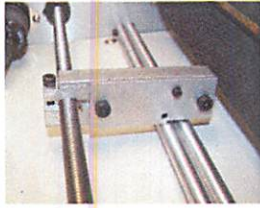


3. To engage the slitters pull out the slitter knob on the control panel (Left side) while the film is being slowly advanced. It may be necessary to push the film down for the blades to break through the film.

Do not do this with your fingers! Use an implement such as a ruler or a screwdriver. Always take care to keep hands clear of the slitter blades when threading film or otherwise working around that section of the laminator.

Ne pas utiliser les doigts pour effectuer cette opération. Se servir d'un objet tel qu'une règle ou un tournevis. Prendre garde de ne jamais approcher les mains des lames de la découpeuse lorsqu'on charge la machine ou que l'on effectue d'autres opérations dans cette partie de l'appareil.

No use los dedos para realizar esta tarea. Emplee un objeto como una regla o un destornillador. Tenga cuidado en no acercarse a las manos de las laminas de corte cuando está cargando la máquina con la película de plástico o realizando otra tarea en esta parte de la máquina.

3. When using the slitter the items being laminated must be fed into the machine squarely or the slit edges will not be parallel with the edges of the items. The edge seal or edge trim will be uneven if the leading edge of each item is not fed at right angles to the edges of the web of film.

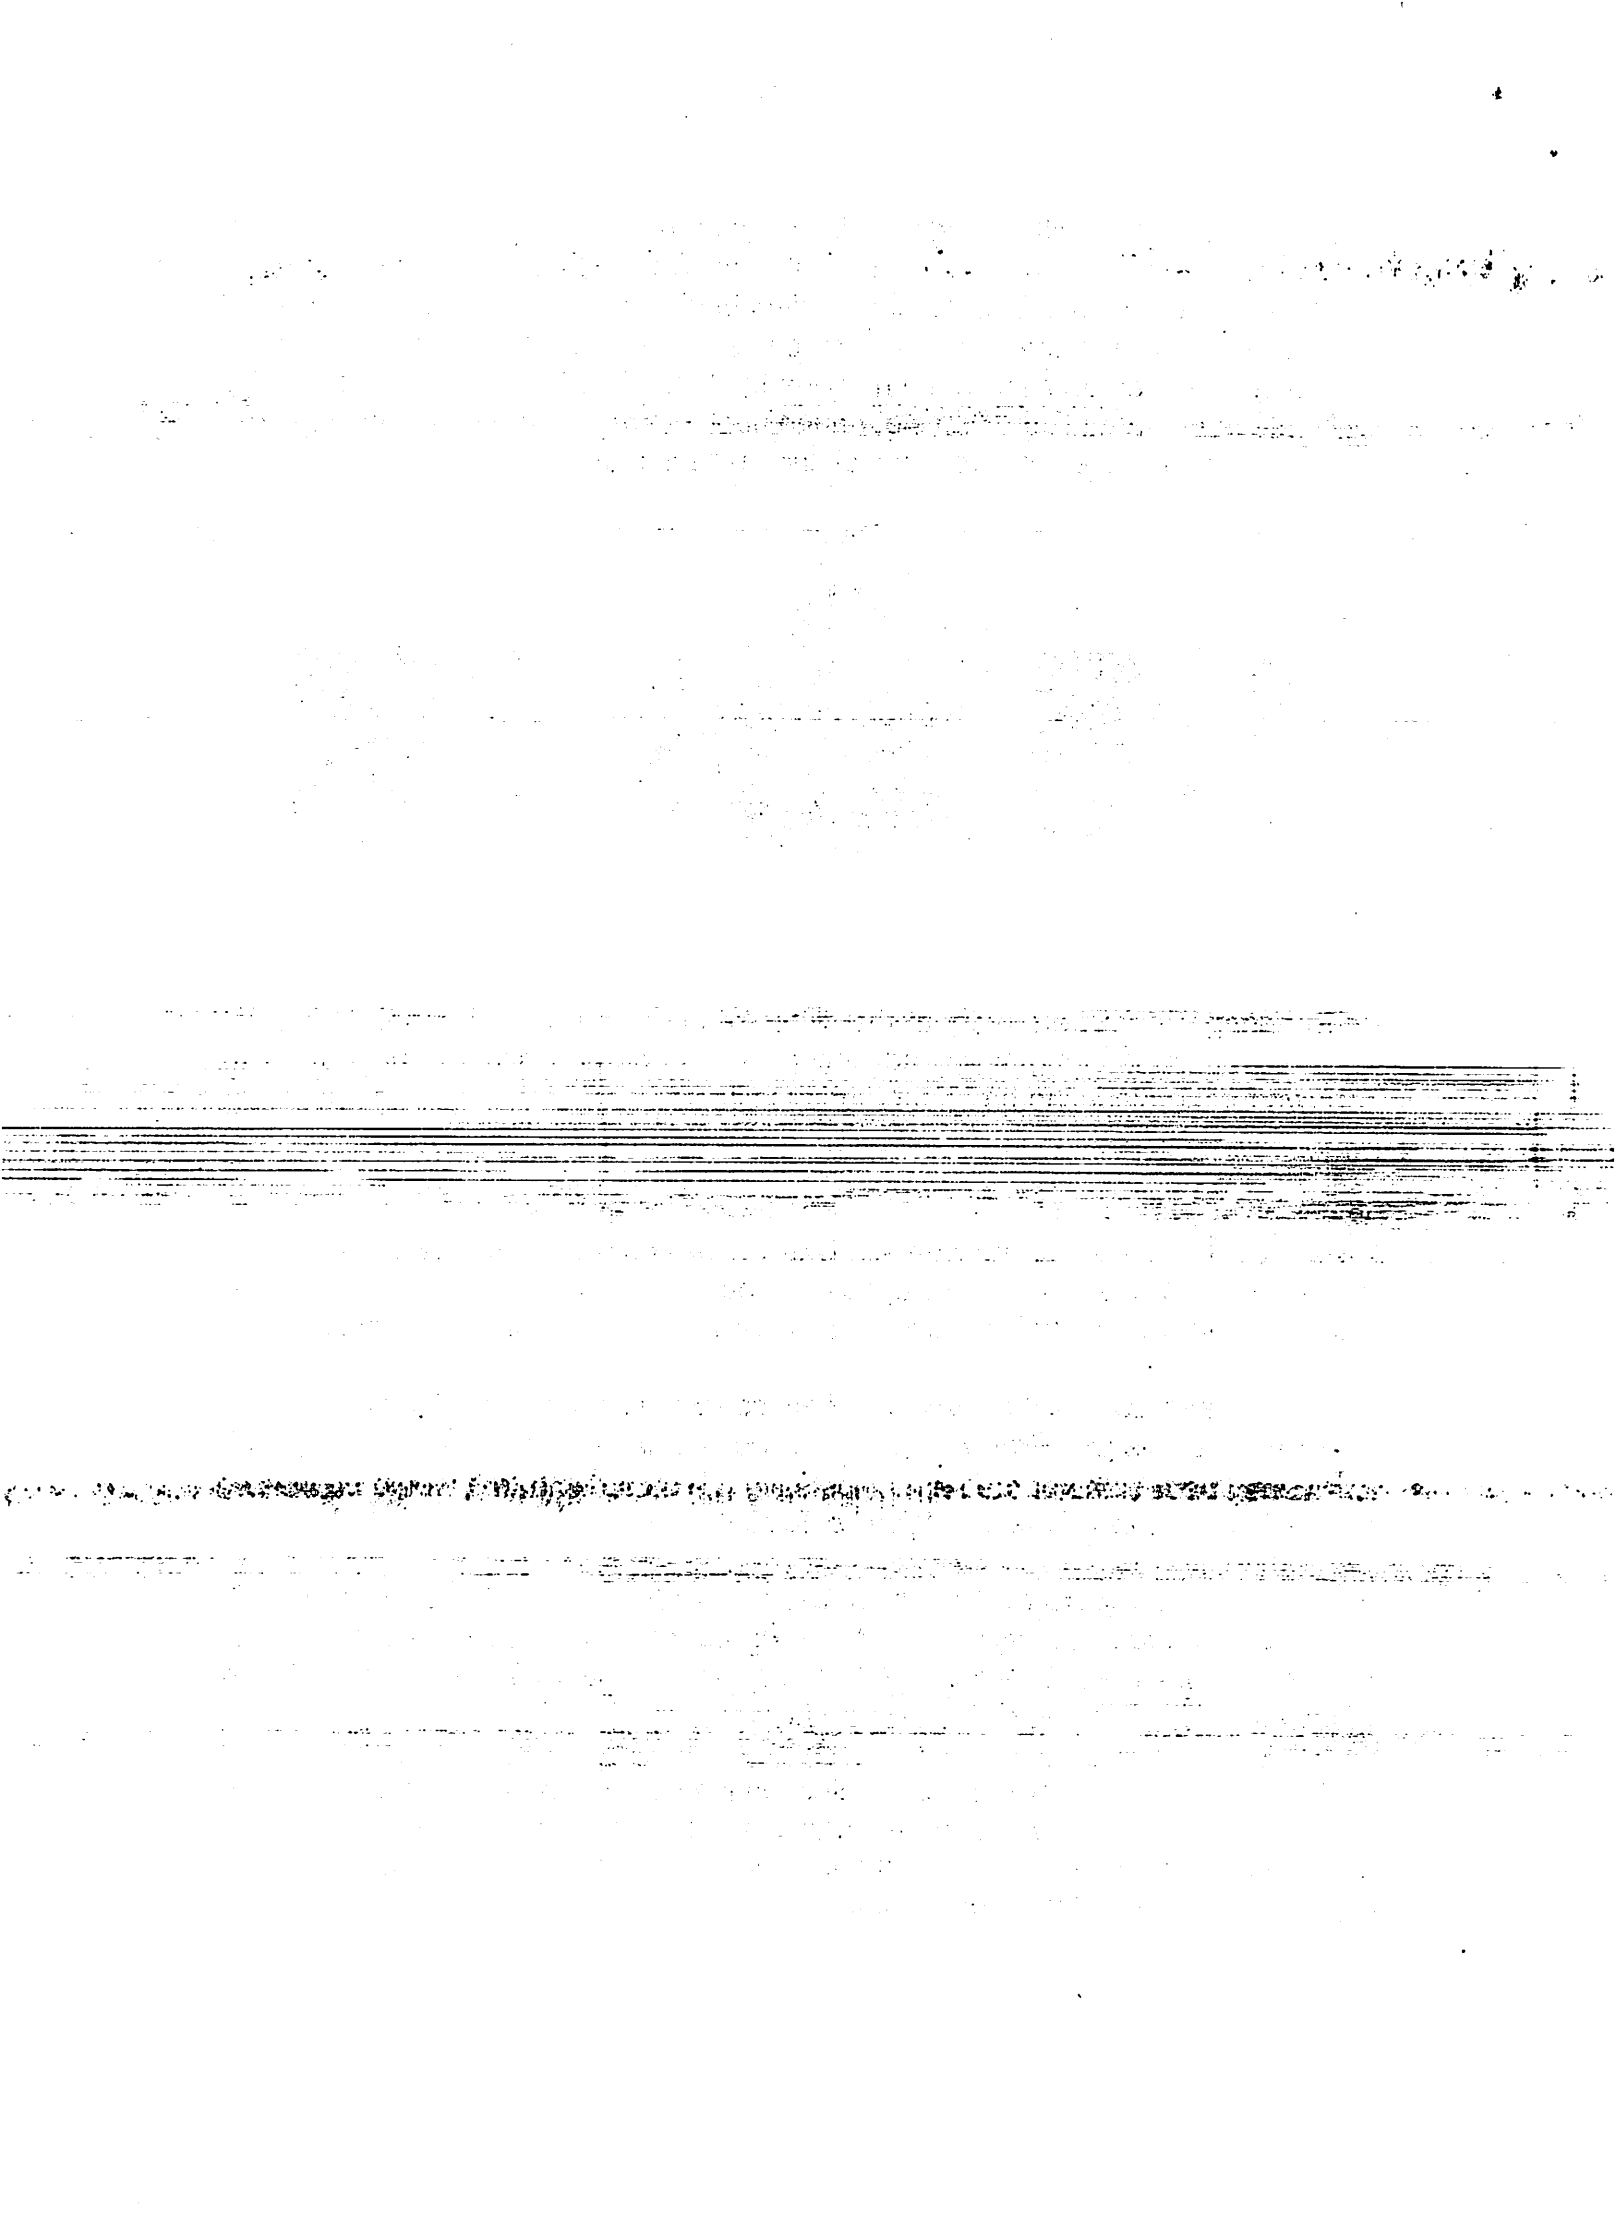

5-7 Simultaneous Laminating and Mounting

There are several different ways to simultaneously mount and laminate. The one preferred by most experienced users, especially those in digital imaging, is to hot laminate while mounting with a pressure-sensitive adhesive at the same time.

Cut a piece of your pre-coated substrate (mounting board) slightly larger than your image. Peel back about 4 inches of the release liner on the edge that will be put into the laminator first (leading edge).

Use that exposed adhesive to position and align your image on the board. Be careful to keep the leading edge of the image aligned and wrinkle-free. Smooth it down onto the exposed adhesive. The image does not need to be trimmed to final size first since finish trimming of board and image will be done together after laminating.

When the laminator is threaded and up to temperature put the leading edge of the board with its image under the feed strip on the leading edge of the feed tray. The feed strip should lift easily to accommodate substrates up to ½ inch thick. The laminator should be set 10 or 20 degrees hotter than what you would use on that film for standard laminating. The fan should be turned off.


Keep the board in that position. Do not let it advance far enough to touch the shoes yet. Make sure the laminating rollers are closed and locked. The pull rollers should be closed but not locked. Start advancing the film. Once the film that was resting on the shoes has been advanced push the board squarely into the nip.

Hold onto the release liner. Do not let the release liner go under the safety shield. The curl of the release liner will help keep the image off the board until it gets close to the laminating nip.

Laminating both sides of the item helps save the setup time that would be wasted in preparing the machine for one-sided lamination. Another advantage of laminating both sides of foam core and some other substrates is that it minimizes the curl that those substrates are subject to over time.

No adjustment of the laminating rollers is required. They are spring-loaded and will open appropriately for any board up to ½" thick. When using ½" thick substrates close laminating rollers, but do not lock them.

After the lamination is complete, trim the board and its now resident image to the finished dimensions. Final finishing steps may include edge grippers for hanging, framing, edging with plastic U-channel, or putting a leg on the back in the case of countertop displays.

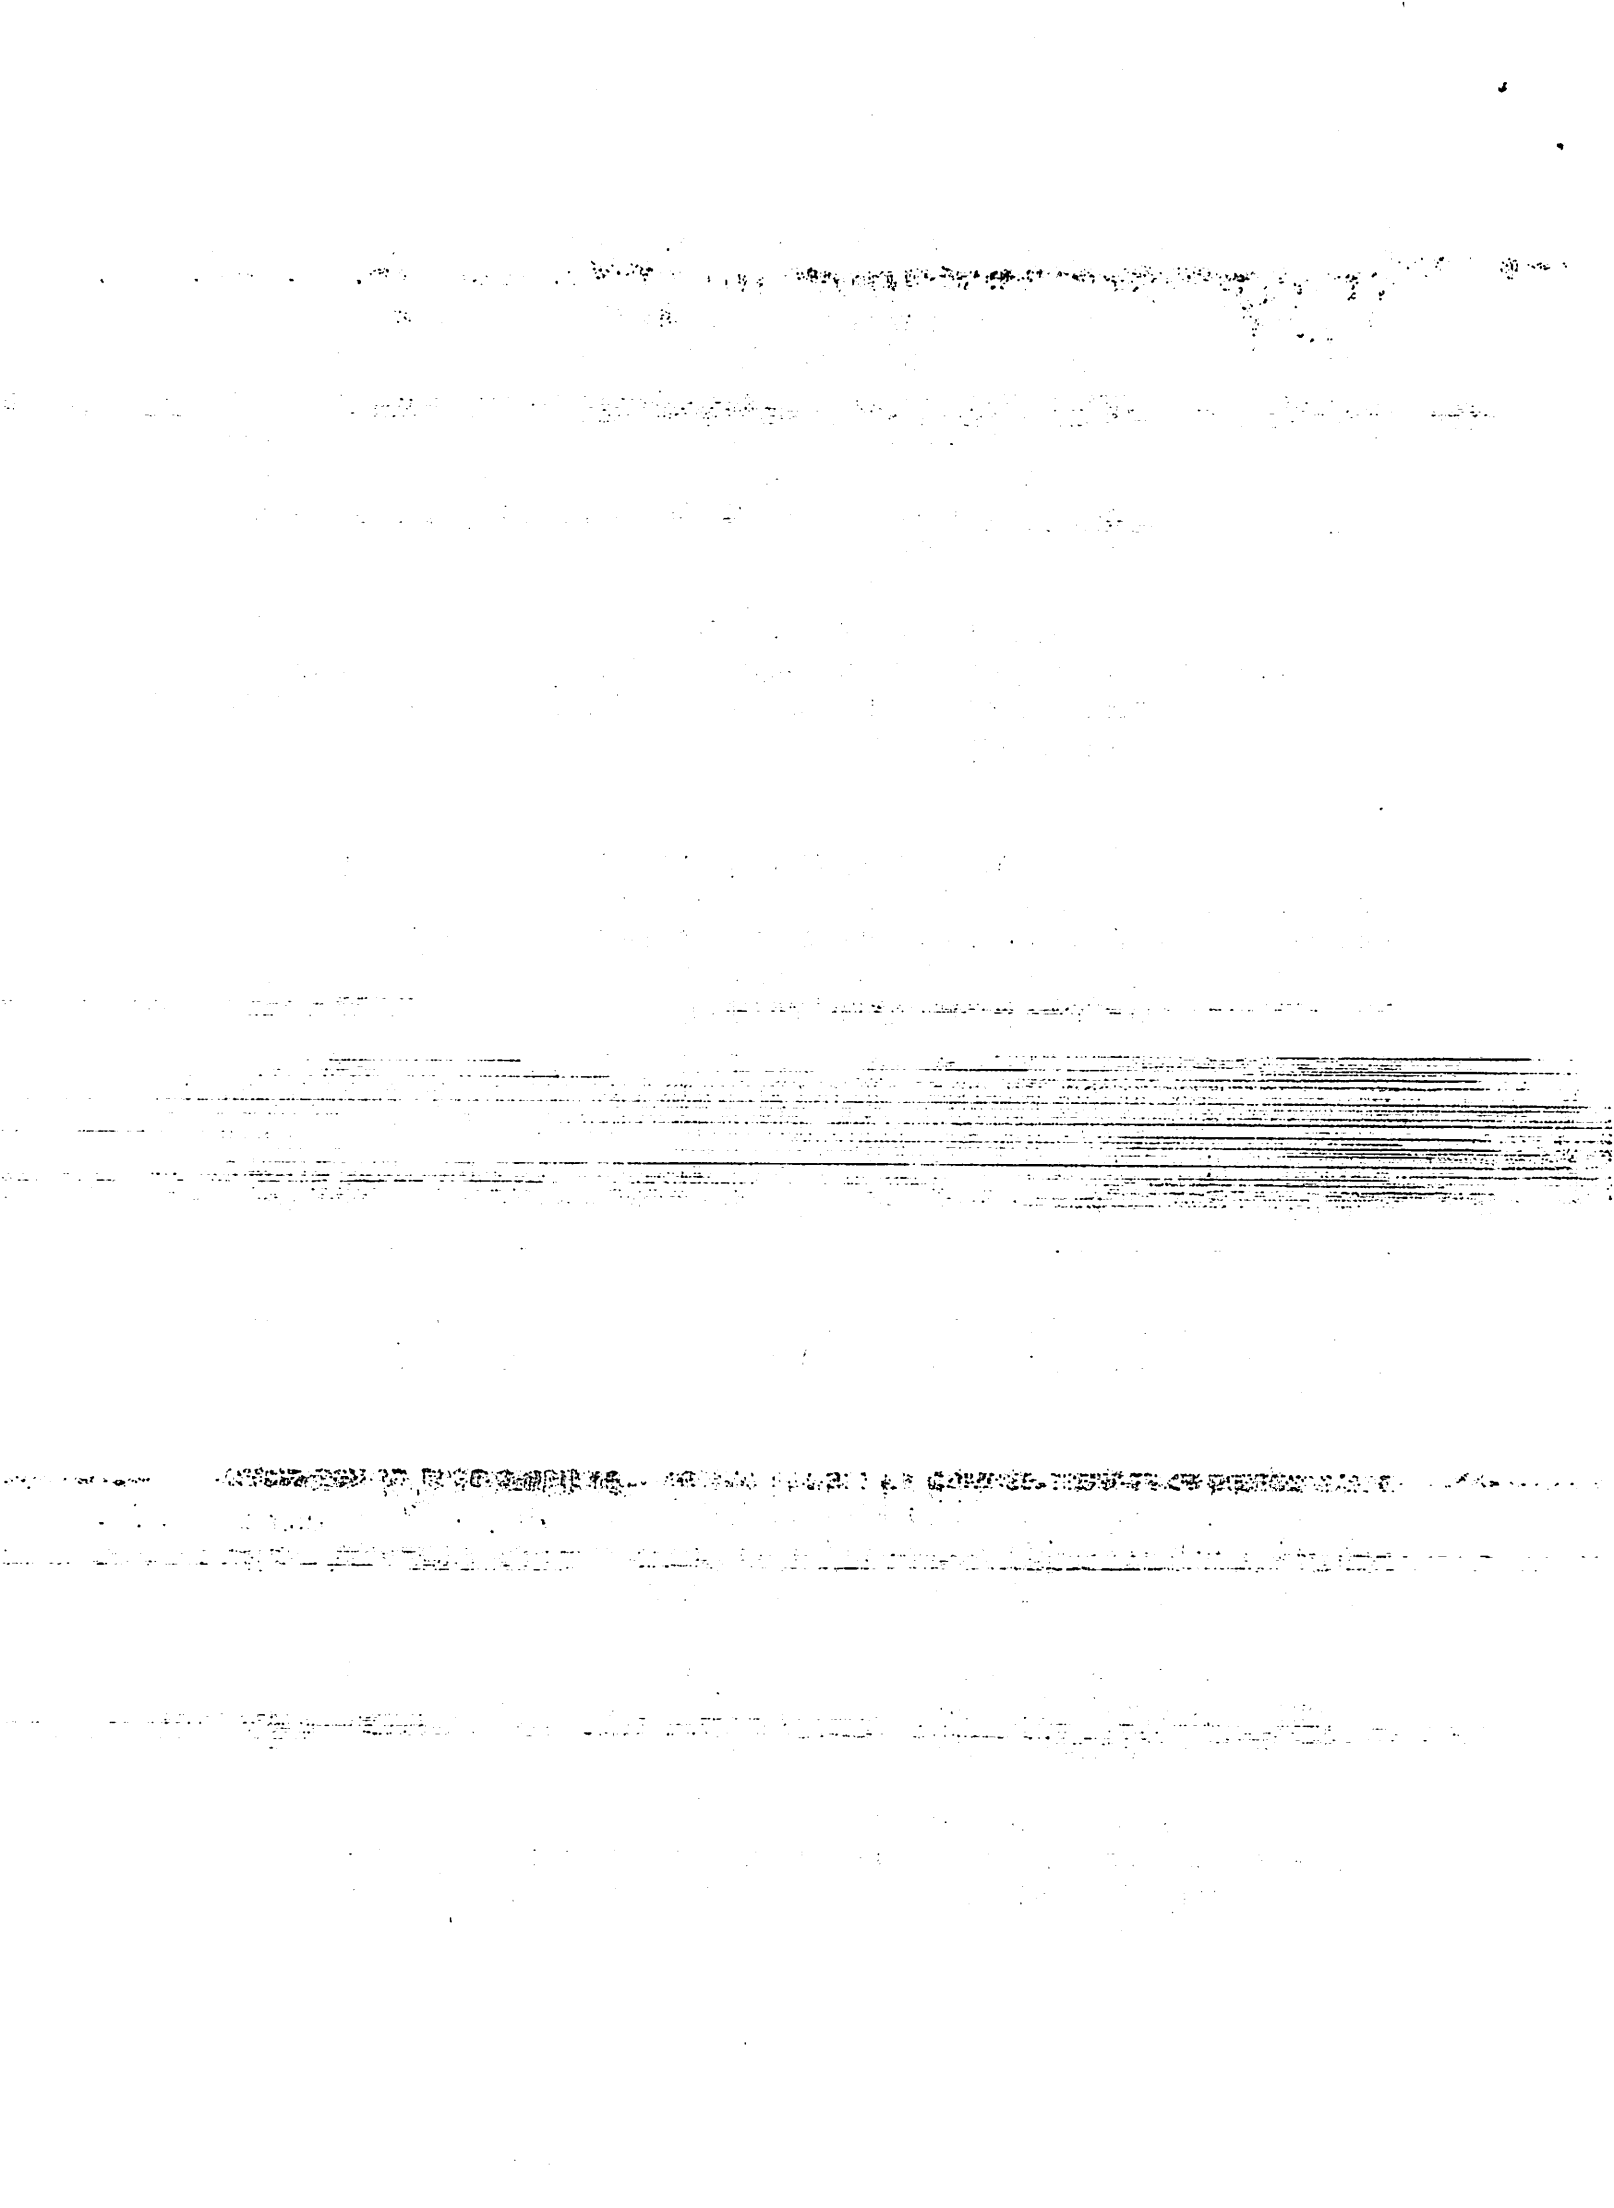

5-8 COLD APPLICATIONS

Cold Mounting



The HDF15 is designed to be a cold laminator and mounting device as well as a hot laminator/mounter.

There are many different methods and sequences for laminating and mounting but the most common procedure used with digital images is to first hot laminate and then cold mount. Cold adhesives adhere better and are more reliable than dry mount (hot) adhesives when it comes to the various plastics, coated papers, and coated mounting boards often used in digital imaging.

The HDF15 can be used to apply adhesive film to mounting boards. Boards can also be purchased pre-coated with pressure-sensitive adhesive and a release liner.


Most rolls of adhesive have a single release liner. The HDF15 can be fitted with a release liner take-up at the time it is ordered from the factory.

If this work is run after a hot laminating job the heat left in the shoes helps the adhesive to flow. It is not necessary to allow the machine to cool.

Cold laminators are one-sided laminators with very few exceptions. Most hot laminators encapsulate or coat both sides. When laminating only one side, you must not allow exposed adhesive to go into the machine. Make sure the material being coated is at least as wide as the roll of film. Overlap pieces or use scrap paper between pieces to keep adhesive off the rollers.

Thread the machine by putting a large piece of scrap paper or cardboard through the open rollers. Stick the adhesive to this threading card, close the rollers, and begin to laminate. Keep feeding scrap paper so that the adhesive does not start a wraparound on the rollers.

Adjust the unwind tension to remove any wrinkles from the material. Do not use any more tension than needed or you may stretch the material. Begin to feed the mounting boards, butting each up against the one ahead. Cut the boards apart with a utility knife on the back end

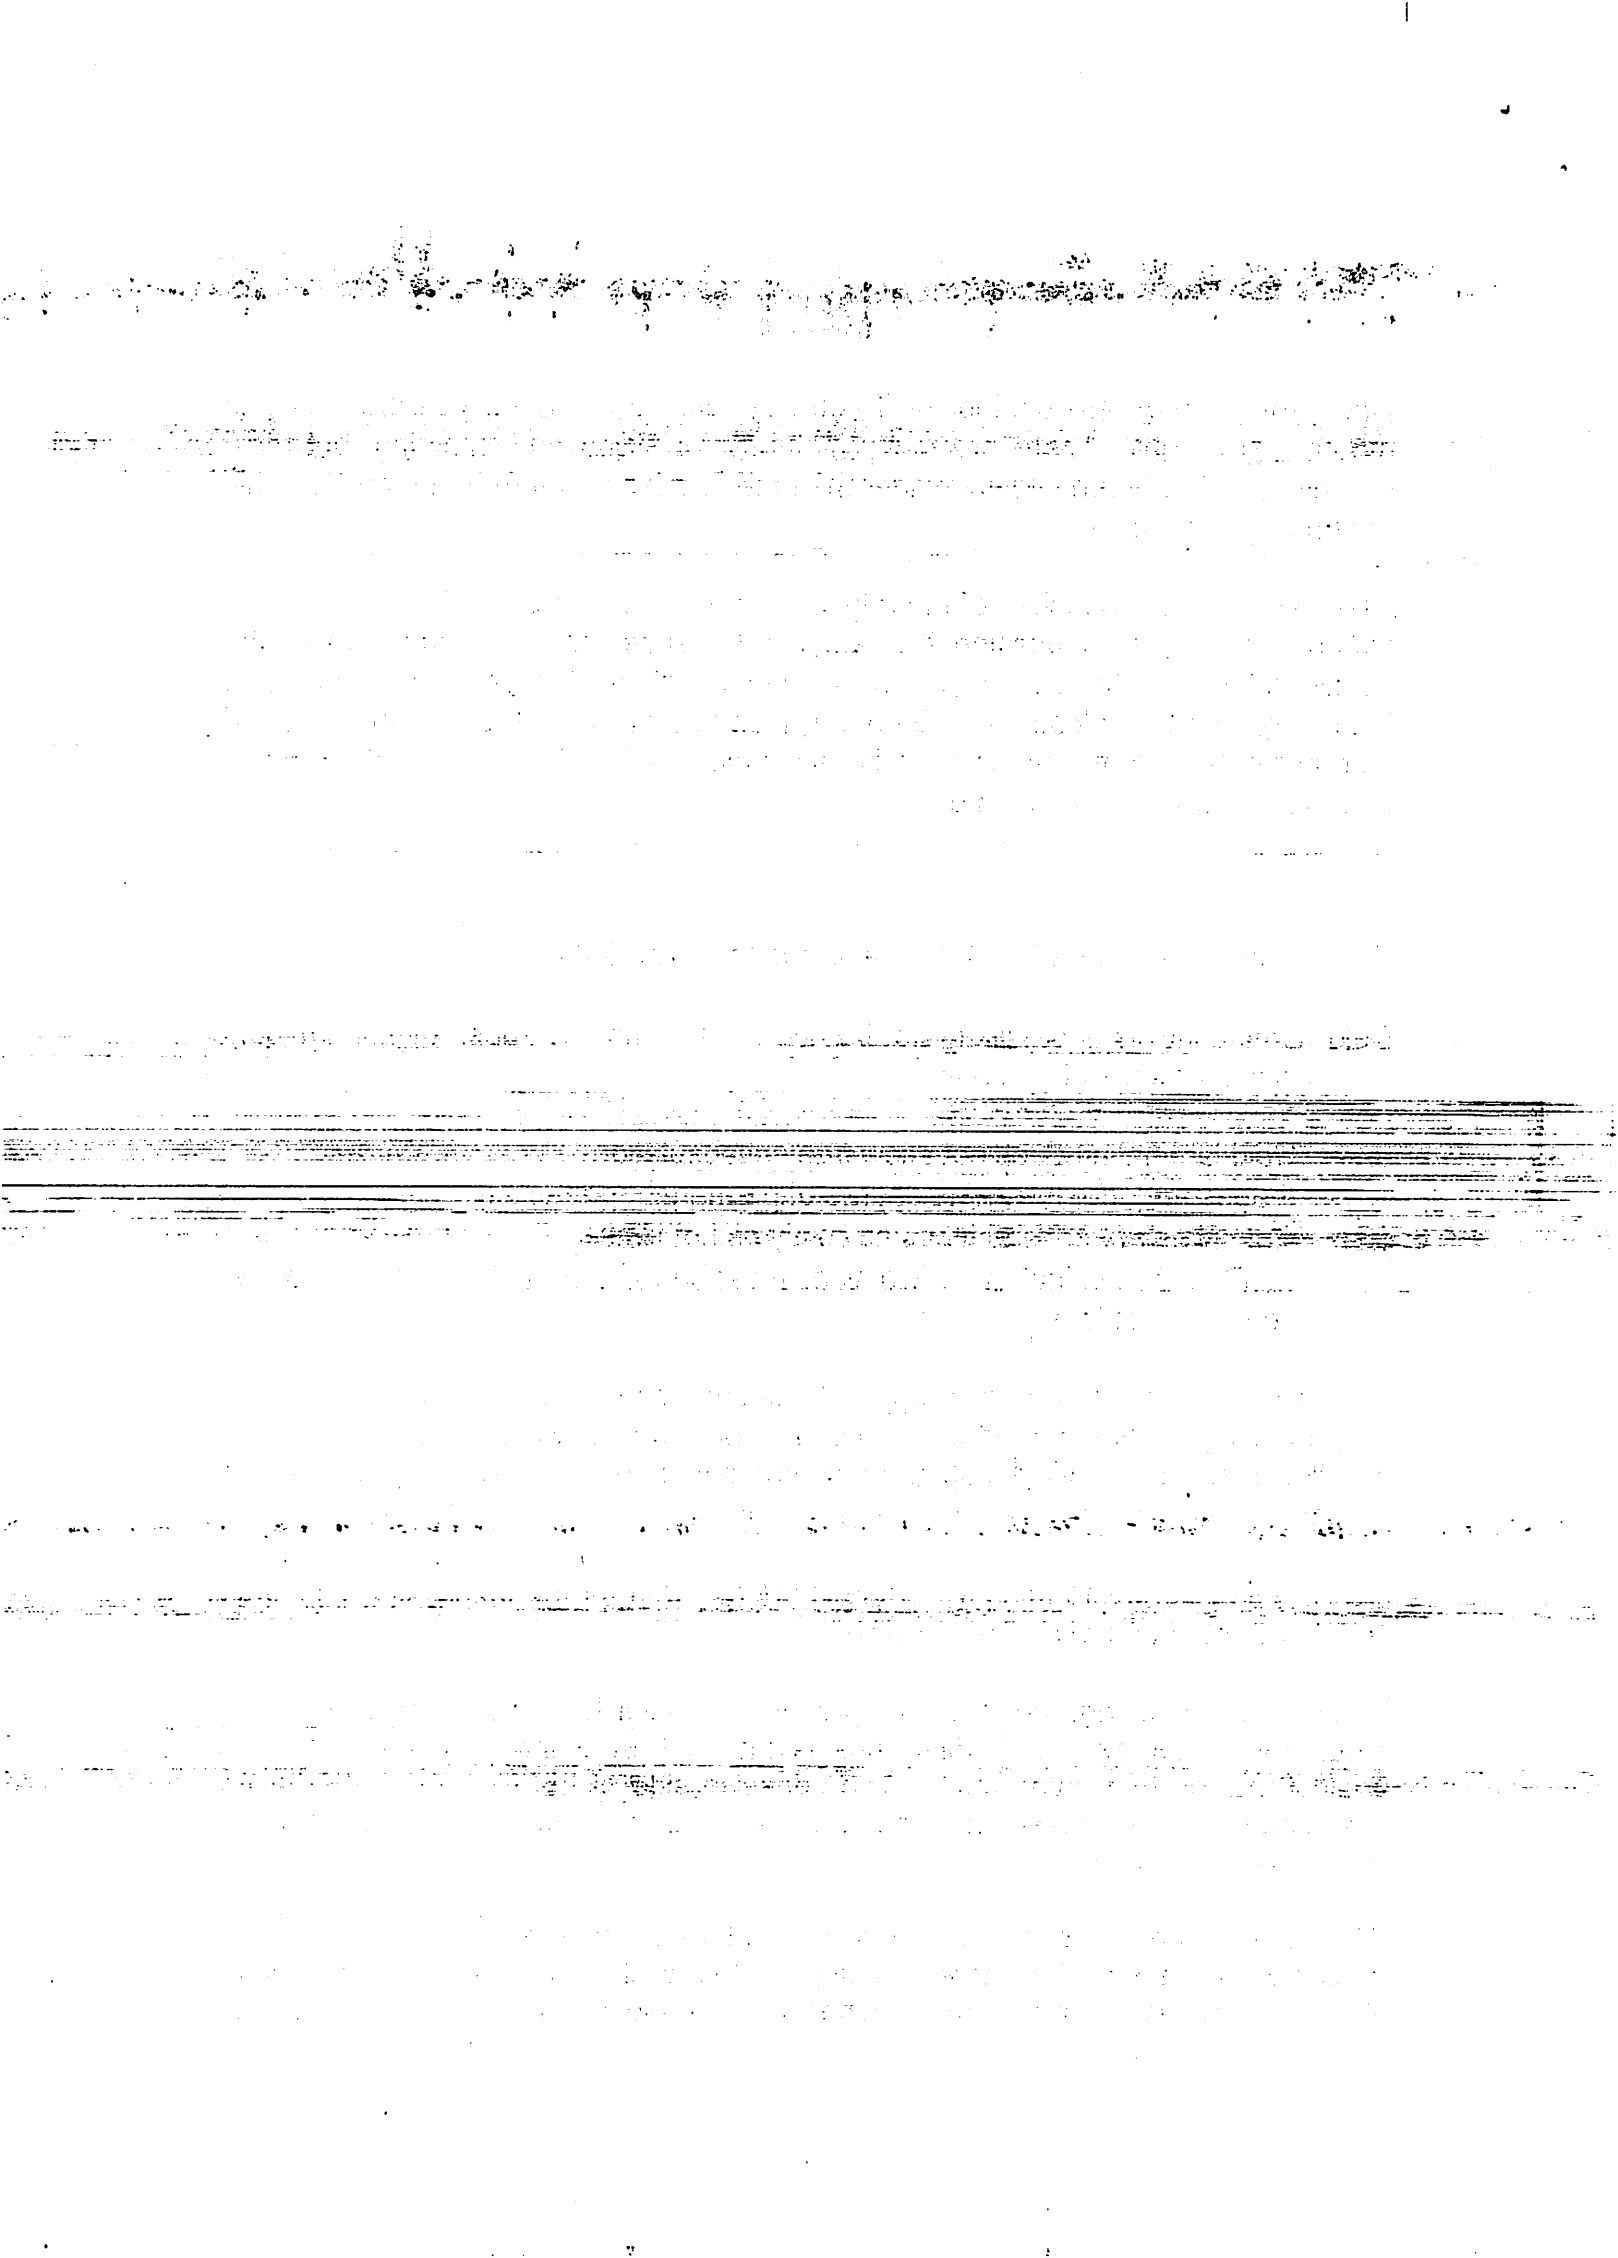

Thread the machine by putting a large piece of scrap paper or cardboard through the open rollers. Stick the adhesive to this threading card, close the rollers, and begin to laminate. Keep feeding scrap paper so that the adhesive does not start a wraparound on the rollers.

Adjust the release line takeup tension so that the release liner is pulled away from the film just after it goes under the idler bar.

Adjust the supply roll unwind tension to remove any wrinkles from the material. Do not use any more tension than needed or you may stretch the material.

Begin to feed the images overlapping them or running scrap paper between them. Be careful not to allow exposed adhesive to go into the rollers to avoid wraparounds.

The roll feed option can be used in two ways with cold overlaminating. A roll of printed material (one long image or many images) can be put on the roll feed mandrel for lamination in one non-stop process. Or a roll of inexpensive "release" paper can be run under the whole process to keep exposed adhesive out of the nip while laminating a series of pieces.

For those customers who need cold lamination exclusively, Ledco manufactures the Econocraft line of pressure-sensitive machines 25 to 50 inches wide. They can handle substrates up to an inch thick and as wide as the particular machine.

5-9 PREVENTING AND SOLVING PROBLEMS

Please read this section before you have a problem.

PROBLEM: Wrinkling of the material as it goes into the laminating rollers. This problem usually occurs when laminating an item that has been folded, rolled, bent or wrinkled.

SOLUTION: Make sure the leading edge of the item being laminated is laying flat and is inserted parallel to the laminating rollers.


It is sometimes essential to smooth out an item as it passes over the feed table and through the rollers to ensure an even lamination without wrinkles. Smooth from the center of the item back toward the trailing edges. Once the item starts to feed you may also pull back and to the sides on the corners of the trailing edge.

If material has been rolled up take the curl out of it on a table edge before laminating. If some curl remains it may be helpful to insert the item with the curl down so the leading edge is pressed against the feed tray until just before the nip.

The first part of the document discusses the importance of maintaining accurate records of all transactions. It emphasizes that every entry should be supported by a valid receipt or invoice. This ensures transparency and allows for easy auditing of the accounts.

Furthermore, it is noted that regular reconciliation of the books is essential. This process involves comparing the internal records with bank statements to identify any discrepancies. Promptly addressing these differences helps prevent errors from compounding over time.

In addition, the document highlights the need for clear communication between all parties involved. Keeping stakeholders informed about the current financial status and any upcoming obligations is crucial for maintaining trust and ensuring the smooth operation of the business.

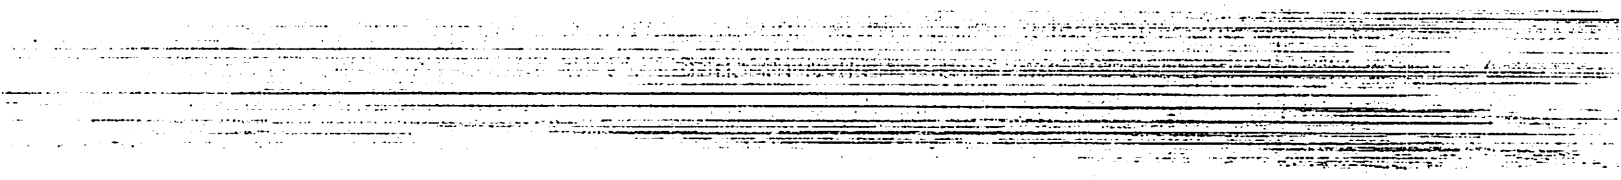

The second section of the document provides a detailed overview of the company's financial performance over the past quarter. It includes a summary of revenue, expenses, and net profit. The data shows a steady increase in sales, which is a positive indicator for the business's growth.

However, there are also areas of concern. The report notes that certain operational costs have risen significantly, which has impacted the overall profit margin. Management is currently reviewing these costs to identify opportunities for cost reduction without compromising the quality of the products or services.

Looking ahead, the document outlines the strategic goals for the next quarter. The primary focus is on expanding the customer base and improving operational efficiency. This will be achieved through targeted marketing campaigns and the implementation of new internal processes.

PROBLEM: Wrinkling of the film around the material being laminated.

SOLUTION: This is normal and inevitable on any laminator, especially with thicker material. These wrinkles will be trimmed away with the scrap, so they do not affect appearance. Because the rollers are being held apart by the paper or cardboard they cannot pull equally on the plastic around the paper. This creates wrinkles that tend to look like the bow waves of a boat, radiating out through the clear part of the web from the sheet of material.

PROBLEM: When two pieces of material are laminated side by side, the plastic adheres to one piece but not the other.

SOLUTION: To get maximum efficiency from the film rolls you can feed several items into the laminator side by side. However, wrinkling can occur if these items are of unequal thickness because the laminating rollers are lifted off the thinner items by the thicker items. When laminating items side by side it is important to arrange them so that the thickness is the same.

PROBLEM: Wrinkling of the plastic on a laminated piece of material.


SOLUTIONS: Make sure you have enough supply roll tension to take the wrinkles out of the film before it gets past the heat shoes.

Make sure the film is threaded properly. The most frequent operator error is threading the film under the bottom stabilizer bar instead of under the bottom idler bar. The threaded film should not touch the bottom stabilizer bar. When the bottom web of film is threaded around the stabilizer bar instead of the idler bar the film will tend to wrinkle and often will not adhere. The top side of the item will not be affected.

PROBLEM: Film gets wrapped around the pull rollers.

SOLUTION: While threading the film cold the loose ends of the unlaminated web are particularly susceptible to "wrap-around". To minimize this pull the threading card after it emerges from the pull rollers until the film clears the exit table. Use caution when first starting to laminate being careful that the thin, unlaminated web does not get caught in pull rollers or laminating rollers.

If a "wrap-around" does occur while the laminator is cold you can easily correct it by reversing the direction of the rubber rollers. This permits the laminator to release the film from the rollers.

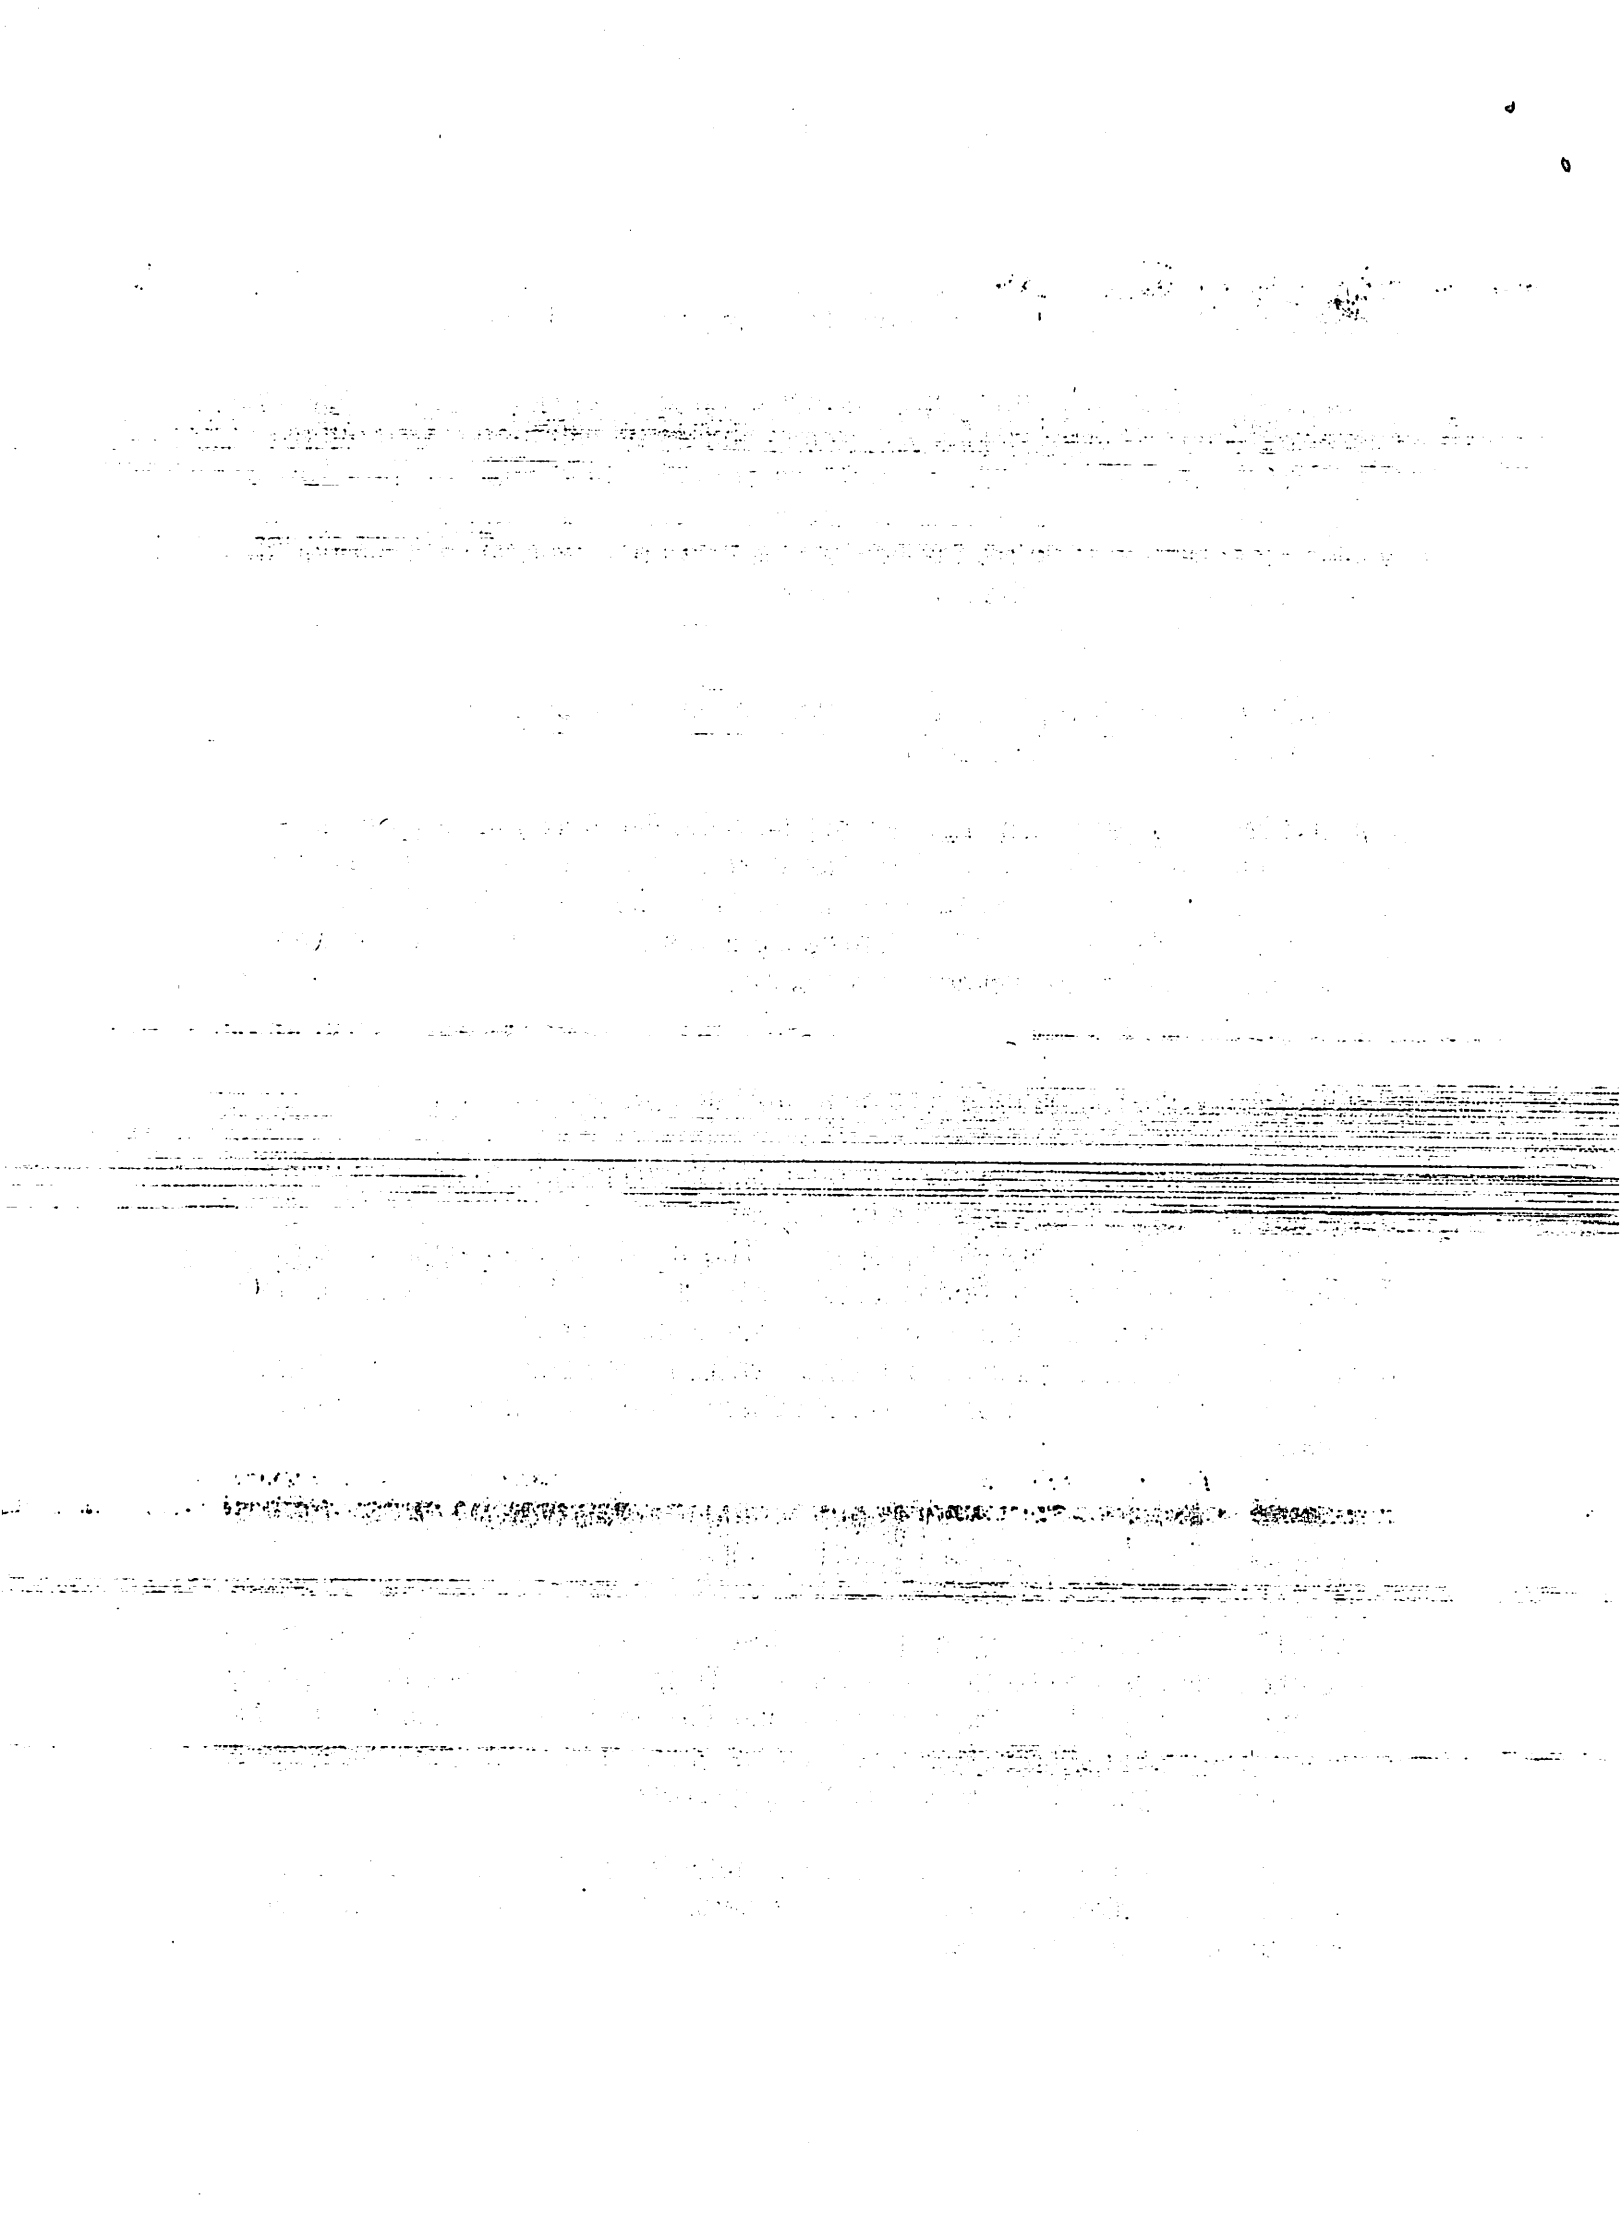

PROBLEM: Film gets wrapped around the laminating rollers while the machine is hot.

SOLUTION: Leave the heat on so that the adhesive does not harden and follow the following steps.

WARNING: Be very careful not to touch the heat shoes when the machine is hot.

MISE EN GARDE: *Ne pas toucher les sabots chauffants lorsque la machine est chaude.*

ADVERTENCIA: *No toque las zapatas calefactoras cuando la máquina está caliente.*

1. Remove the feed tray.
2. Carefully cut the film on the top and bottom just in front of the idler bars.
3. Loosen the film from the heat shoes and grip the two loose ends, holding them together.
4. Turn the drive switch to the reverse position.
5. Turn on the drive at a very low speed and allow the laminator to back out the film that is wrapped around the rolls. Pull the film off the roller.

WARNING: Keeping the machine in reverse may cause a reverse wrap-around if the film is not getting pulled off the roller. You may need to pull on the film with a lot of force while stopping and starting the drive.

MISE EN GARDE: *Si l'on appuie trop longtemps sur l'interrupteur de marche arrière, le film risque de s'enrouler dans l'autre sens. Appuyer par à-coups sur l'interrupteur et vérifier le résultat chaque fois.*

ADVERTENCIA: *Apretar mucho tiempo el interruptor de marcha atrás puede causar bobinado inverso. Apriételo brevemente, luego suéltelo y observe el resultado. Apriételo nuevamente si se requiere más marcha atrás. Pare si nota que el plástico hala hacia atrás, volviendo sobre los rodillos.*

WARNING: Do not try to cut the plastic off the roller with a knife or other sharp instrument. You will end up cutting the rubber rollers and turn an inconvenience into a major repair bill not covered by warranty.

MISE EN GARGE: *Ne jamais tenter de dégager un film enroulé en le coupant avec une lame tranchante. Vous entaillerez le caoutchouc des rouleaux, ce qui occasionnera des frais majeurs de réparation qui ne sont pas couverts par la garantie.*

ADVERTENCIA: *No intente separar el plástico del rodillo cortando con un cuchillo u otro instrumento filoso. Terminará cortando los rodillos de goma*

y convertirá una incomodidad en una cuenta de reparaciones mayor, que no es la cubierta por la garantía.

If this method does not work, let the machine fully cool. Remove the heat shoes and cut the wrap-around off the roller with a small pair of scissors working the point and the cutting edges away from the rubber to avoid damaging the roller. Then clean the rollers per the instructions in section 6-4.

PROBLEM: Not noticing that the rolls of film are almost used up (one roll of film always runs out before the other.)

WARNING: If the film is run through the laminator without being matched to an opposing film, the adhesive exposed to the rubber rollers will stick to the laminating rollers and create a world-class wraparound. This type of wraparound is difficult to clear because the film adheres to the roller and to itself for the entire length of the accumulated film on the roller. It's best to clear this right away before the adhesive hardens. Follow the steps above to clear.

MISE EN GARDE: *S'il n'y a qu'un film dans la machine, le coté adhésif, qui se trouvera contre le rouleau de plastification, y adhèrera, ce qui provoquera un enroulement "monstre: très difficile à défaire puisque le film adhère d'abord au rouleau, puis à lui-meme a mesure qu'il s'enroule. Il faut agir rapidement avant que la colle durcisse. Procéder de la facon indiquée ci-dessus pour régler le problème.*

ADVERTENCIA: *Si el plástico de uno de los rollos de abastecimiento pasa por el plastificador sin ser igualado por una película de plástico del rollo opuesto, el adhesivo expuesto a los rodillos de goma adherirá a los rodillos de laminación y causará un bucle monumental. Este tipo de bucle es muy difícil de deshacer porque el plástico adhiere tanto al rodillo como a si mismo, a lo largo de toda la longitud de la película de plástico acumulada sobre el rodillo. Es mejor desnacerlo inmediatamente, antes de que endurezca el adhesivo. Siga los pasos indicados más arriba para lograrlo.*

SOLUTION: To avoid this problem stop the laminator before either roll runs out, cut the webs of film, and remove the two near-empty rolls of film, and then rethread new rolls. When putting film on a laminator, always use two rolls of matched length and width.

Experienced users may leave the pieces of film remaining over the shoes and in the rollers to help thread the new film. When the machine is warm, the ends of the new rolls can be easily tacked to the already threaded pieces because the adhesive layer facing outwards will be sticky. Be careful not to burn yourself on the heat shoes.

Anytime you are laminating unfamiliar or costly items it is a good idea to start with an expendable sample or test piece. Laminating a test piece first gives you an indication of the results you'll get and also takes care of any pooled adhesive.

PROBLEM: A milky, hazy line about an inch wide appears periodically across the width of the web immediately after initial warm-up.

SOLUTION: The rollers are not evenly heated, and the cold side of the rollers is preventing the adhesive from melting. When warming up the machine, keep the rollers open and keep the forward drive on at low speed.

PROBLEM: The machine produces a continuous squealing noise when laminating.

SOLUTION: To a certain extent, it is normal for some laminating film to squeal as it is pulled over the heat shoes under tension. This noise is produced via the same principles that make a violin squeal. Some of the compounds put on film to keep it from sticking to itself seem to act like resin on the bow of the violin—they enhance the noise. To minimize squealing run the laminator with the least amount of supply roll tension that will do the job of removing wrinkles from the web of film. Make sure you are not using a higher temperature than needed and clean the heat shoes periodically (see section 6-3). If the noise gets really objectionable use a different type or different brand of film.

PROBLEM: The laminated material seems to have a pitted surface or irregular surface that does not match the texture of the paper being coated.

SOLUTION: This is usually caused by adhesive build-up or dirt on the rubber rollers but may be caused by any matter stuck to the rollers such as a piece of paper. Inspect the rubber rollers and if they need cleaning refer to section 6-4. Cuts or other damage to the rubber rollers, especially the laminating rollers, can also cause irregularities in the surface of the film. The pull rollers are identical to the laminating rollers and could be substituted if still in good condition.

PROBLEM: The film shrinks as it passed over the heat shoe (known as "necking in the laminating trade).

SOLUTION: Reduce the heat and/or the supply roll tension. The film is not shrinking as much as it is being stretched by excess heat and tension causing the web to get narrower as it is pulled over the shoes.

PROBLEM: No power is getting to the laminator.

SOLUTION: Make sure there is power at the electrical outlet being used, and make sure both ends of the power cord are firmly engaged. There are fuses inside the laminator but dead outlets and loose power cord connections are the most common causes of this problem.

PROBLEM: Wavy or rippled sections in the laminate, especially toward the center of the web.

SOLUTION: These "heat wrinkles" are caused by excess temperature and/or speed for the film being used. Slow down the motor and/or use a lower appropriate temperature for that particular film.

PROBLEM: General haziness or cloudiness in the film after lamination.

SOLUTION: Increase the temperature. The cloudiness is a function of incomplete adhesion. On a variable speed machine loaded with thicker film it may be that the film is being run too fast and is not getting enough time on the heat shoes.

PROBLEM: Bubbles in the center of the web and/or film not sticking to the center of an item.

SOLUTION: This problem can be caused by excessive laminating roll pressure. Putting too much pressure on the laminating rollers actually decreases pressure in the center of the web.

The other likely cause of this symptom is worn rollers. For example, if hundreds or thousands of 18-inch wide sheets are laminated on a 38-inch machine, the center of the rollers can get worn down more than the ends of the rollers. In this situation, the laminating rollers should be replaced. The rollers worn in this way are not suitable for use as pull rollers.

For problems not listed here contact your Ledco Dealer. If the Dealer doesn't know the answer please ask the dealer to contact Ledco and get back to you. You are also welcome to contact us directly with any problem at 585-367-2392. Because of the potential volume of support calls we do encourage the use of the dealer network as much as possible.

6-1 MAINTENANCE

DANGER: Always use extreme caution when performing maintenance on your machine! Always make sure the machine is unplugged and that there

is NO power to the machine when working on or cleaning any part of the unit. *Use extreme caution to avoid Hot Surfaces, which may remain hot for a period of time even if there is NO POWER to your machine.*

Use extreme caution to avoid pinch points at the nip of rubber rollers.

NEVER have rubber rollers turning while performing maintenance to your machine.

NEVER wear loose clothing, ties, or jewelry (which may become entangled in gears or rubber rollers) while performing maintenance on your machine.

MISE EN GARDE: *La prudence est de mise lorsque l'on effectue l'entretien de cette machine.*

S'assurer que le cordon d'alimentation est débranché et que la machine est mise hors tension avant de toucher à des pièces internes.

Prendre garde aux surfaces chaudes. Ces surfaces demeurent chaudes longtemps après que le courant a été coupé.

Tenir les doigts et les objets loin des rouleaux de caoutchouc. Ne jamais faire tourner les rouleaux pendant l'entretien de la machine.

Ne jamais porter de vêtements amples, de cravate ou de bijoux, etc. (ces articles peuvent être happés par les engrenages ou les rouleaux de caoutchouc).

ADVERTENCIA: *sea extremadamente cuidadoso siempre que realice tareas de mantenimiento en su máquina.*

Asegúrese siempre que la máquina está desenchufada y que no hay NINGUNA energía aplicada a la misma mientras esté trabajando con partes internas de la máquina.

Sea extremadamente cuidadoso en evitar superficies calientes, que pueden permanecer calientes durante cierto tiempo, aún después de estar cortada la corriente.

Tenga sumo cuidado en evitar puntos de constricción en las pasadas de los rodillos de goma. Nunca tenga los rodillos de goma en movimiento mientras realiza trabajos de mantenimiento en su máquina.

Nunca vista ropa suelta, corbata o joyas (que pueden ser atrapadas por engranajes o rodillos de goma) mientras está realizando trabajos de mantenimiento en la máquina.

6-2 GENERAL CLEANING

Cleaning the laminator daily or weekly will help prevent dirt or adhesive build-up on the rubber rollers and heat shoes and will improve the performance of the unit.

6-3 CLEANING THE HEAT SHOES

During normal use excess adhesive from the film will often cling to the heat shoes, especially near the edges. Film coating powders can also build up on the shoes and will tend to increase friction between the film and the shoes. This type of build-up may not be visible and it may adversely affect lamination in a number of ways. Film squealing loudly as it passes over the shoe can sometimes be a symptom of this problem.

Some films naturally tend to squeal, with or without coating powder build-up, but cleaning the shoes usually helps reduce squealing and helps prevent more serious problems.

To clean the shoes heat the machine to full laminating temperature to soften the adhesive. Put on oven mitts or heavy gloves to protect your hands. Using a clean, soft, dry cloth and gently rub the adhesive or other contaminants off the shoes. Never use any abrasive material or rub too hard on the shoes because you may remove the Teflon coating.

You may dampen your cleaning cloth with soapy water or a mild water-based cleaning solution but make sure you carefully insulate your hands from possible steam burns if you do this. The steam formed when water hits the hot surface can penetrate both the cleaning cloth and your gloves.

6-4 CLEANING THE RUBBER ROLLERS

Both the laminating rollers and the pull rollers need regular cleaning. Collectively these are referred to as the rubber rollers. The upper heat shoe on the laminator swings away in seconds, making it far easier to clean the laminating rollers.

1. Remove the film from the laminator and allow the machine to heat up with the rollers open and turning slowly. By getting the laminating rollers hot, it will be easier to remove any adhesive built-up on the rollers.
2. Turn off the master power switch and unplug the machine.
3. Using a potholder or oven glove, lift the top heat shoe up and back and then lower it onto the stop pins or the top of the pull roll cover (if the pins have been removed).
4. Loosen the two bolts that hold up the bottom heat shoe and lower the bottom shoe. This will expose both rollers so they can be cleaned much more easily than if the heat shoes were in the way.

WARNING: Never clean the rollers while they are turning. While turning, the rollers may catch your fingers and cause injury, or they may catch your cleaning materials and damage the laminator. Unplug the power cord while

cleaning the rollers or performing other maintenance on the machine. Turn the rollers by hand.

MISE EN GARGE: Ne jamais nettoyer les rouleaux pendant qu'ils tournent afin d'éviter de se blesser et d'empêcher que le produit de nettoyage n'endommage l'intérieur de la machine. Débrancher le cordon d'alimentation avant le nettoyage ou tout autre travail d'entretien. Nettoyer d'abord la partie apparente des rouleaux, puis, à l'aide de la commande de marche arrière, les faire tourner de façon à pouvoir en nettoyer toute la surface.

AVERTENCIA: Nunca limpie los rodillos de goma mientras estén girando. Al estar girando, los rodillos pueden atrapar sus dedos y lastimarlos, o pueden atrapar sus artículos para limpieza y danar el plastificador. Desenchufe el cordón eléctrico mientras está limpiando los rodillos, o realizando otras tareas de mantenimiento en la máquina. Gire los rodillos por mano.

Clean the rubber rollers with a mildly abrasive cleaning pad such as a white Scotch Brite (Trademark of 3M) pad which may be purchased in the household section of your grocery store (the green pads are too abrasive). Use "COOL CLEAN" to clean the rollers (available through your local LEDCO dealer). Rub firmly but do not scrub the rollers vigorously as this might mar the surface. Do not use sharp metal objects or steel wool as these will also mar the rollers.

The pull rollers should also be cleaned in the same manner. Turn off the machine and turn the rollers by hand. Be sure to reposition and secure the upper heat shoe before beginning to laminate.

6-5 LUBRICATION

Drive Chain Drive chain and sprockets on all models should receive a light coat of gear lube or heavy grease (preferably lithium grease) after each 1000 hours of operation